

M220

Serial Number Location

note: the first 6-digits are used to identify your serial number for parts

0XXXXXX XXXXXXXXXXXXXXXXXXXX

