


Earthquake®

PARTS MANUAL

9800H 2-Person Earth Auger Powerhead

(Insert to OM9800B)

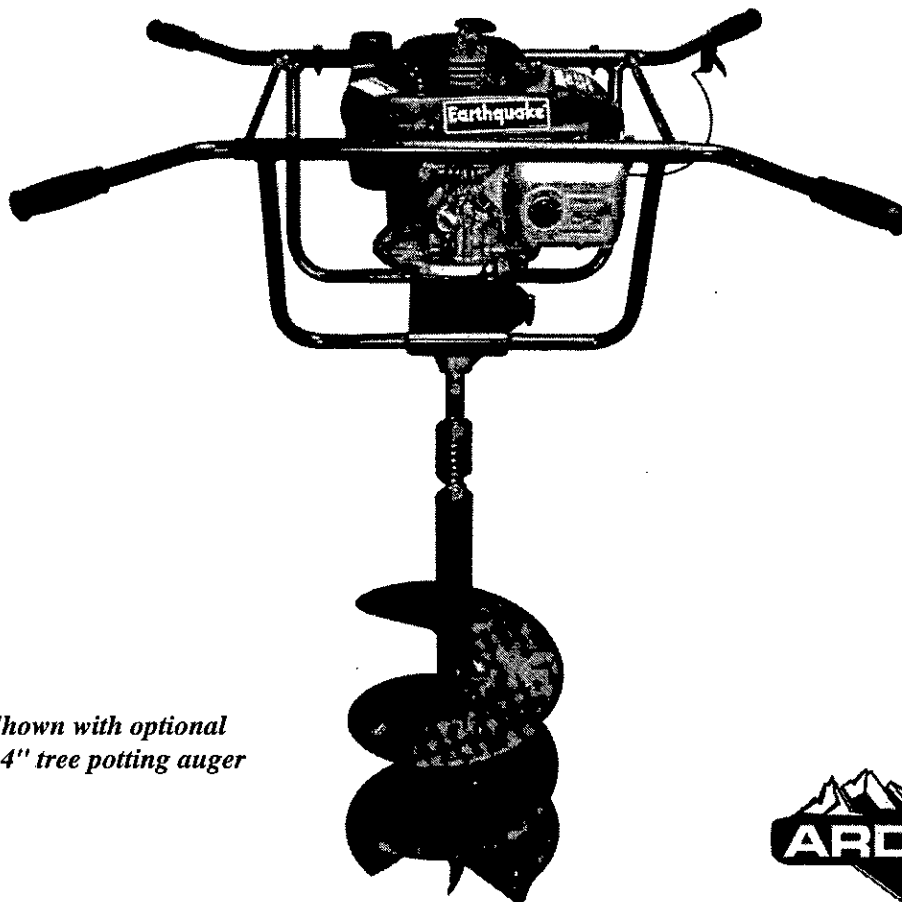

*Shown with optional
14" tree potting auger*



TM9800H
Rev. 10/16/06
© 2006 Ardisam, Inc.
All Rights Reserved. Printed in USA.

EARTHQUAKE MODEL 9800H

Earthquake

MINIMUM ORDER\$10.00

Part #	Description	Qty.
1423	BOLT, 5/16-18 X 2" HHCS GR5	3
420	BOLT, 5/16-24 X 3/4" C-BORE	4
4814	BOLT, 10-24 X 1-1/4" PHILLIPS TRUSS HD	1
4819	TRIGGER ASSEMBLY LONG THROW	1
48300	BOLT, 5/16-18 X 2-1/4" HHCS GR5	1
503	BOLT, 5/16-18 X 1-1/2" HH	8
504	LOCKWASHER, 5/16" SPRING	8
53596A	CLAMP, CABLE YELLOW ZINC	1
53664	TAB, THROTTLE	1
60G56	NUT-LOC, 5/16-18 BI-WAY	12
60G70	TOGGLE SWITCH, ON-OFF	1
8912	GEAR, 44T 3/4" HOLE	1
8913	SHAFT, OUTPUT 7/8"	1
8914	GEAR, 48T HARD	1
8915	DOWEL PIN, STEEL 1/4" X 1/2"	2
8919	GASKET, POWERHEAD TRANSMISSION	1
8922	BEARING, BALL R12 DOUBLE LIP	3
8923	BEARING, BALL R10	2
8924	RING, SNAP EXTERNAL 3/4"	3
8929	BOLT, 1/4-20 X 1-1/2" SHCS	2
8935	BOLT, 1/4-20 X 2-1/2" SHCS	4
8939	GEAR CASE, LOWER HALF W/BEARINGS	1
8985	GEAR CASE, UPPER HALF W/BEARINGS	1
9016	CLUTCH DRUM, 3" THREADED	1
9211	HANDLE GRIP, 7/8" ID FLANGELESS	4
9214A	GEAR, 10T CLUSTER PINION HT	1
92TRAN	TRANSMISSION ASSEMBLY 30:1	1
9805	CABLE ONLY, THROTTLE	1
9805A	CABLE ASSEMBLY, THROTTLE CONTROL	1
	(includes 9805, 4819, 4814)	
9814	GEAR, 7T PINION THREADED	1
9816	HANDLE	3
9817	HANDLE W/THROTTLE HOLE	1
9819	HANDLEBAR FRAME WELDMENT	1
9822	BEARING, BALL R14-2RS	1
9825	ROTOR ASSEMBLY, CENTRIFUGAL CLUTCH ..	1
9832	SPRING, THROTTLE CONTROL	1
9837A	MOUNT RING	1
9840	PLATE ADAPTER, MOUNT RING	1
9841	BRACKET, THROTTLE CABLE CLAMP	1
GCV160	ENGINE, 5.5 HP HONDA VERT SHAFT	1
IB5810	BOLT, 5MM X 0.8 X 10MM HH	1
IN58	NUT, 5MM X 0.8 NYLOC	1
WK6	WOODRUFF KEY #6	1

