

Convection Blower Replacement Kit

ASSEMBLY

1. Remove convection blower from stove as shown in product manual. Discard according to local regulations.

2. **Serenity 12327 Model (FIGURE 1):**

Replace convection blower with Serenity Convection Blower Replacement and M5 bolts.

HPS10 & HPS10IC Models (FIGURE 2):

a. Disassemble the Serenity Convection Blower Replacement. **SEE FIGURE 3**

b. Reassemble the HPS Convection Blower Replacement. **SEE FIGURE 4**

3. Assemble Convection Blower Replacement to stove as shown in product manual.

4. Discard remaining replacement bracket according to local regulations.

ITEM #	PART #	DESCRIPTION	QTY.
1	12248	CONVECTION BLOWER 115 VAC 60 HZ	1
2	12249	BRACKET 260 MM SLOT WIDTH 60° ANGLE	1
3	12250	GASKET CONVECTION BLOWER	1
4	12415*	BOLT M5 X 0.8 X 10 MM SOCKET HEAD	4
5	12417	SCREW ST4.2 X 1.5 X 13 SLOT HEX FLANGE	6
6	21564	BRACKET 282 MM SLOT WIDTH 41° ANGLE	1

**See product manual for mounting procedure.*

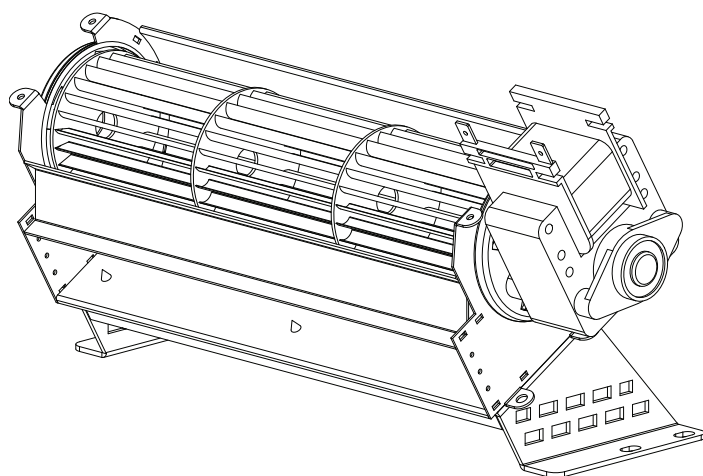


FIGURE 1: Serenity Convection Blower Replacement

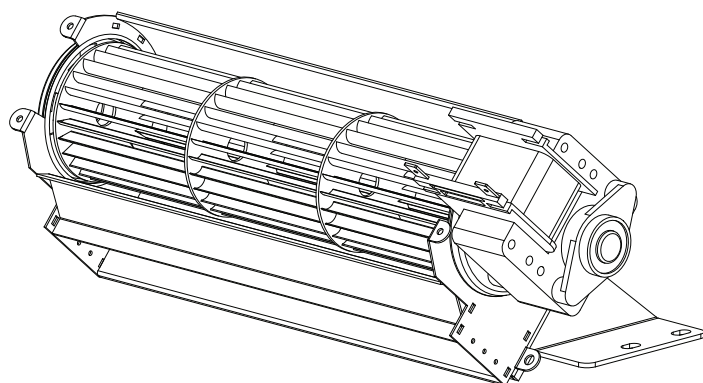


FIGURE 2: HPS Convection Blower Replacement

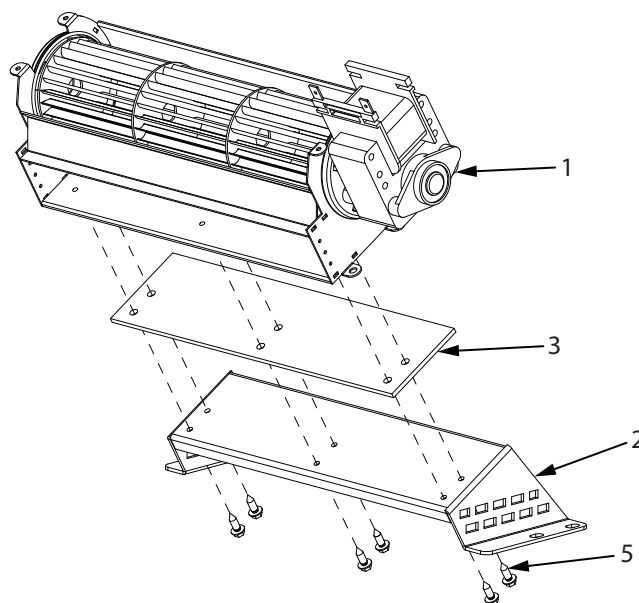


FIGURE 3: Disassemble Serenity Convection Blower Replacement

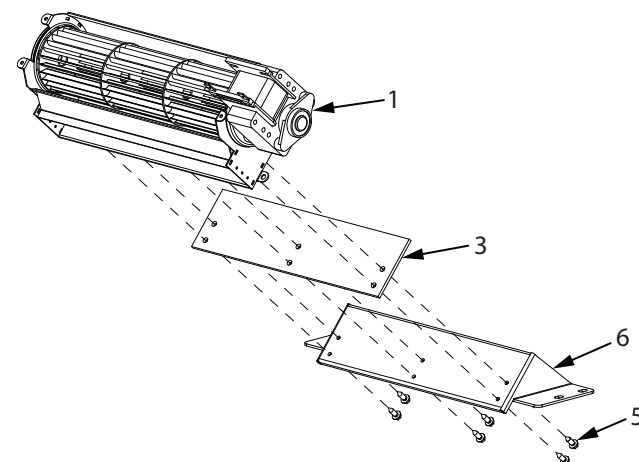


FIGURE 4: Reassemble HPS Convection Blower Replacement