

# DELUXE PORTABLE GAZEBO

## ASSEMBLY AND USE INSTRUCTIONS



### WARNING

READ AND UNDERSTAND ALL ASSEMBLY, INSPECTION, & USE INSTRUCTIONS PROVIDED BEFORE EACH USE. FAILURE TO FOLLOW INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

NEVER ALLOW CHILDREN TO PLAY IN THIS PRODUCT UNATTENDED.

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

THIS TENT IS MADE WITH FLAME RESISTANT FABRIC WHICH MEETS CPAI-84 SPECIFICATIONS. IT IS NOT FIREPROOF. THE FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE NOT THE TENT FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

THE USE OF ELECTRICAL DEVICES IS NOT RECOMMENDED INSIDE THE GAZELLE CAMPING TENT.

### WHAT'S INCLUDED IN THE BAG

- Gazelle™ Portable Gazebo
- Awning poles
- Ground stakes/storage bag
- Front door corded poles
- Tie-down ropes

### BEFORE YOU BEGIN

- Locate a level site clear of all debris and sharp objects to prevent tears while setting up your gazebo.
- For easy set-up in windy conditions, make sure to position one of the corners of the gazebo into the wind.
- Do not set up your gazebo under any overhead obstructions in case of falling objects or lightning strikes in inclement weather.

### WARNING


THE GAZEBO WILL COME OUT OF THE BAG APPEARING INSIDE OUT, THIS IS NORMAL. YOU MUST UNFOLD THE GAZEBO PER THE INSTRUCTIONS TO AVOID SETTING IT UP INCORRECTLY. WHEN SET UP PROPERLY, THE POLES/Framework OF THE GAZEBO SHOULD BE ON THE INSIDE OF THE GAZEBO.

FOR MORE INFORMATION ON SET-UP & TAKE DOWN VISIT OUR WEBSITE  
**[WWW.GAZELLETENTS.COM](http://WWW.GAZELLETENTS.COM)**

### SET-UP INSTRUCTIONS

1. Remove the gazebo from the duffle bag. Remove the tie strap from around the top of the gazebo. [ **SEE FIGURE 1** ]
2. Lay the gazebo flat on the ground and check that there is no material twisted or overlapping the ends of any poles. **DO NOT** force gazebo when folding or unfolding. Watch for the entanglement of poles. [ **SEE FIGURE 2** ]

**NOTE:** When unfolding, check that a wind panel is visible and locate the webbing loops located in center of wall panel. This is the **OUTSIDE** portion of the shelter. The poles and hubs are the **INTERIOR** of the gazebo.

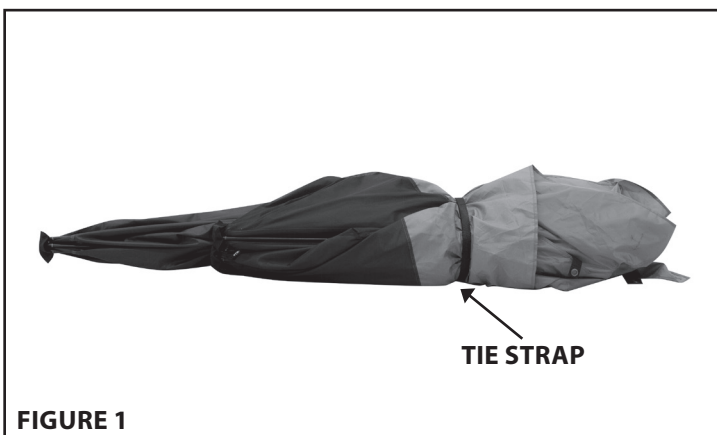

3. Find the webbing loop handle located on the exterior of each hub, centered on each wall (and roof). Proceed to pull outward until the wall pops open. Do this to all **SIDE WALLS** first. [ **SEE FIGURE 3** ]


**NOTE: If the webbing handles are not visible, reach under the bottom of the wind panel and/or unzip either side of the panel, to locate the webbing at the center of the mesh wall underneath.**

**NOTE: For added assistance, grasp the top seam of the panel and place your foot on the bottom edge when popping open a side wall panel to help hold the gazebo in place.**

4. Once all walls are popped open, locate the zipper door, unzip both the outer door and mesh door, and enter the gazebo. Proceed to push on the hub OR roof poles until it pops over center. [ **SEE FIGURE 4** ]



5. Locate the two long corded poles in the duffle bag. Assemble the pole by interlocking the poles together. Go back inside the gazebo and locate the small pockets on the top and bottom of the vertical seams next to the door. Insert each pole into the top and bottom pockets. Then secure with the hook/loop strap in the center of the vertical seam. Do this on both sides of the door. [ **SEE FIGURES 5** ]
6. Locate the short corded pole in the duffle bag. Assemble the pole by interlocking the poles together. Go back inside the gazebo and locate the two pockets on either side above the door. Insert each end into the pockets and secure with hook/loop strap centered above the door. [ **SEE FIGURE 6** ]
7. Locate the ground stakes and ropes in the duffle bag and fasten the stakes through the grommets located at each outer corner. Hammer stakes through each grommet completely.
8. Tie an **ORANGE** tie-down rope to each eye-bolt, centered on each hub. Then tie the other end to a ground stake. Use the slider on the rope to achieve proper tension. [ **SEE FIGURE 7** ]

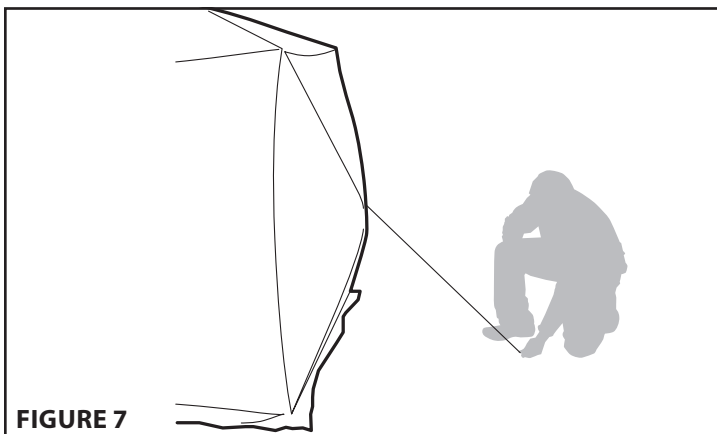

9. For the awning, locate the remaining poles; there should be four pieces total. Assemble ends together for two complete poles. **[SEE FIGURE 9]** Unzip both sides of the wind panel door. Locate the large grommets at the bottom of the awning panel and insert top of pole through grommet on either side of the door. **[SEE FIGURE 10]** Stake the other ends into the ground at the desired distance from gazebo, spacing poles the width of the doorway.
10. To secure the poles upright- loop one end of a GRAY tie-down rope over the top of the pole and grommet and stake into the ground. Use the slider on the rope to achieve proper tension. Utilize two tie-down ropes per pole. **[SEE FIGURE 11]**



## TAKE-DOWN INSTRUCTIONS

1. Undo all stakes and tie-down ropes on awning and gazebo.
2. Take down awning poles and disassemble.
3. Remove the corded poles from each side and above the door and disengage – 3 poles total.
4. Unroll all wind panels, if rolled up. This is more compact and packs more easily. Zip shut all wind panels and pull webbing loop handles through center grommet.
5. Secure plastic hook at bottom of wind panel window to eyelet bolt on each hub. [ **SEE FIGURE 12** ]
6. From the inside the gazebo, gently pull the roof poles/hub down to collapse the roof. DO NOT stand directly underneath the hub when collapsing. [ **SEE FIGURE 13** ]

**NOTE: Always start the take-down process by collapsing the roof first.**

7. From the outside, zip the door shut to prevent tangling of poles. Push the pole/wall near the center hub to collapse each wall. Do this to all of the walls. [ **SEE FIGURE 14** ]



8. Once all hubs are collapsed, gather all corners of the gazebo and fold together into a tight cone shape. Do not force the gazebo when folding and watch for entanglement of poles.
  9. Take the provided strap and wrap it around the folded gazebo to allow for easier insertion into the duffle bag. Place the folded gazebo back into the duffle bag with the hubs always towards the closed end of the bag. Place the stakes and tie-down ropes into the bag as well.
-

## **SAFETY AND MAINTENANCE INSTRUCTIONS**

Ultraviolet (UV) rays are an invisible part of sunlight. Prolonged exposure to UV rays can cause fibers to fade and degrade. This gazebo will last longer if you limit its exposure to UV rays. Pitch the gazebo in shade when possible and don't leave the gazebo up longer than necessary.

- Take down the gazebo when not in use to avoid unnecessary fading from outdoor elements. Fading or discoloring of fabric is not covered under your warranty.
- Take down the gazebo when not in use to avoid unnecessary damage.
- Use extra tie-down ropes during excessive winds.
- Never put the gazebo away wet. Always put away dry and clean to avoid mildew and other problems.

## **LONG TERM STORAGE**

Make sure your Gazelle™ gazebo is completely dry and clean before storing for long periods of time. Store your gazebo in a cool, dry place away from rodents.

## **WARRANTY**

Ardisam, Inc., warrants this Gazelle™ Camping Tent under a one-year limited warranty to be free from defects in materials or workmanship or both for a period not exceeding twelve consecutive months from the date of original purchase by the first retail consumer or commercial end user. "Consumer use" means personal recreational use by a retail consumer. "Commercial use" or "commercial application" means all other uses, including use for commercial, income producing or rental purposes. Once a product has experienced commercial use, it shall thereafter be considered as a commercial use product for purposes of this warranty. This warranty does not cover tent tears, or bent poles due to use in high wind, inclement weather conditions, unattended use or uses other than those listed in the owner's manual. This warranty applies to the original owner that provides a proof of purchase of the shelter. The warranty is not transferable. The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the twelve month consecutive period thereafter. Any unit used in a commercial application is covered for a period of 90 days after purchase. For the warranty to be valid, the product must be registered by filling out the warranty card and it must be received by Ardisam, Inc., within 30 days of purchase. Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.



Gazelle™  
TENTS

Gazelle™ Tents,  
A Division of Ardisam, Inc.  
1160 Eighth Avenue, PO Box 755  
Cumberland, WI 54829

Phone: 800-345-6007  
Fax: 715-822-2124  
[www.gazelletents.com](http://www.gazelletents.com)

\*All weights, specifications and features are approximate and are subject to change without notice. Due to continuous product improvements, product images may not be exact. Warning labels in some product images may have been removed for photography purposes only. Props shown in photos not included. Some assembly may be required.