



GAME WINNER™



Instruction Manual
QUAD-POD 2.0 ACCESSORY KIT

MODEL #: PL701GW
STYLE #: 159105



*For parts call our Customer Service Center at 800-450-3343
Business Hours: 8:00 am to 5:00 pm CST | info@huntriversedge.com*

© 2019 RETI All Rights Reserved | 32348 REV3: 03/12/19

TABLE OF CONTENTS
PAGE

Warranty Information	2
Warnings.....	3
Parts List.....	4
Assembly Instructions	5-7

Note: Before beginning assembly of product, make sure all parts are present. Compare parts list with package and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

WARRANTY

RETI offers a **one year warranty** for all components of the treestand. These warranties apply to the original owner with a proof of purchase. These warranties begin on the date of purchase by the first retail consumer and continue for the period specified above. These warranties apply to products that are not modified, abused or used in a manner that deviates from the product's intended usage. Minor fading in color is normal and is not covered by warranty. Any corrosion of painted surfaces that occurs as a result of paint being removed or damaged is also not covered by warranty. RETI offers no other warranty expressed or implied. Products for which warranty work has been approved must be sent directly to RETI and performed by RETI. **To obtain warranty service and/or replacement instructions, you must obtain prior approval from RETI before shipping your package to us by calling our customer service department at 800-450-3343 or by writing to: RETI, P.O. Box 755, 1160 Eighth Avenue, Cumberland, WI 54829 for a return material authorization number (RMA#).** All items must be shipped prepaid. RETI will, at no charge, repair or replace, in RETI's sole discretion, any product that satisfies the conditions stated above. RETI retains the right to change models, specifications and price without notice.

This equipment has been manufactured under strict quality and safety guidelines. As with any equipment of this type, full understanding of the instructions and its use is mandatory and imperative for the safety of its user. RETI is not responsible for any damages or injuries sustained due to improper use or modification of any of its products, or resulting from any use which deviates from the product's intended usage. RETI is not responsible for any injuries sustained due to failure to read and adhere to the instructions for use. Any misunderstanding or questions regarding the products of their use should be directed to RETI prior to any use. It is the owner's sole responsibility to inspect the product regularly for damage, improper installation, or conditions that could jeopardize the ultimate safety of the product. **Owner is responsible to understand and follow product field weight rating and must never exceed maximum weight rating.** RETI is not responsible for any malfunction or injury resulting from normal wear and tear, damage caused by improper use, improper maintenance, negligence or accidents. This product, if used safely as intended, will provide trouble free service for the useful life of the product. We hope you will enjoy the quality of our products for years to come, and have a safe hunt.




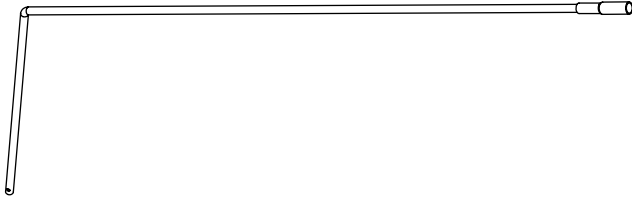


 **STOP****READ AND UNDERSTAND THE FOLLOWING WARNINGS BEFORE ASSEMBLY****WARNING**

- ⚠ **When hunting from a treestand falls can occur any time after leaving the ground causing injury or death.**
- ⚠ **Read and understand** all of the manufacturer's Warnings and Instructions and use all safety devices provided by the manufacturer. Contact the manufacturer for any questions. Failure to do so could result in injury or death.
- ⚠ **Never** allow the material to cover your face. This material can cause suffocation and death if it is placed over face.
- ⚠ **Never** allow children to play in this product.
- ⚠ **Only** use approved RETI parts. Failure to do so may result in serious injury or death!
- ⚠ **Never** modify in any way by making repairs, replacing parts, or altering it except if explicitly authorized in writing by the manufacturer.

**WARNING**

- ⚠ Assemble this accessory kit to Quad-Pod 2.0 tower at ground level before attaching the legs.
- ⚠ Ultraviolet light breaks down lightweight fabric fibers. The material will fade, lose strength and eventually disintegrate if left in prolonged sunlight. To extend the life of your blind, avoid leaving it out in direct sunlight for extended periods of time. Set it up in a shady area whenever possible. Fading or discoloring of blind is not covered under your warranty.
- ⚠ Double check assembly steps to be certain you have correctly assembled this product.
- ⚠ Keep all flame and heat sources away from this fabric.
- ⚠ This product is not fireproof. The fabric will burn if left in continuous contact with a flame source.
- ⚠ Heat sources burn oxygen and emit carbon monoxide. Use caution with heaters and vent properly.

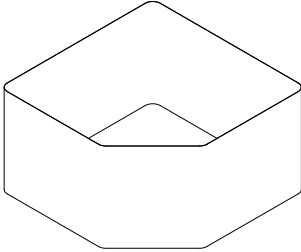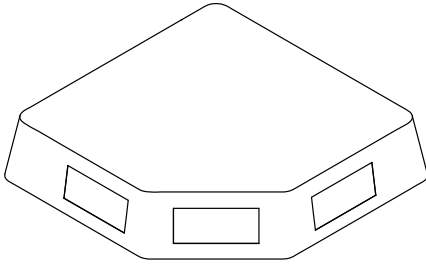PARTS LIST

Item	Part No.	Description	Image	Qty
1	# 32216	SEWN CURTAIN		1
2	# 32217	SEWN ROOF		1
3	# 32325	SPLIT SUPPORT POLE		1
4	#32326	SPLIT SUPPORT POLE WITH POCKET		2
5	#32327	SUPPORT POLE WITH NO POCKET		1
6	# 32328	SUPPORT POLE WITH POCKET		1

ASSEMBLY INSTRUCTIONS

STEP 1

NOTE: Assemble this accessory kit to Game Winner Quad-Pod 2.0 at ground level before attaching legs.

1. Slide the pocket end of the two split support poles with pockets (4) onto the split support pole (3). **SEE FIGURE 1.**

Slide the split support pole (3) into the plastic insert on the shooting rail in the corner of the blind opposite the entry opening. **SEE FIGURE 1 AND FIGURE 1A.**

Then, slide the two split support poles with pockets (4) into the plastic inserts on both sides of the entry opening. **SEE FIGURE 1 AND FIGURE 1A.**

FIGURE 1A

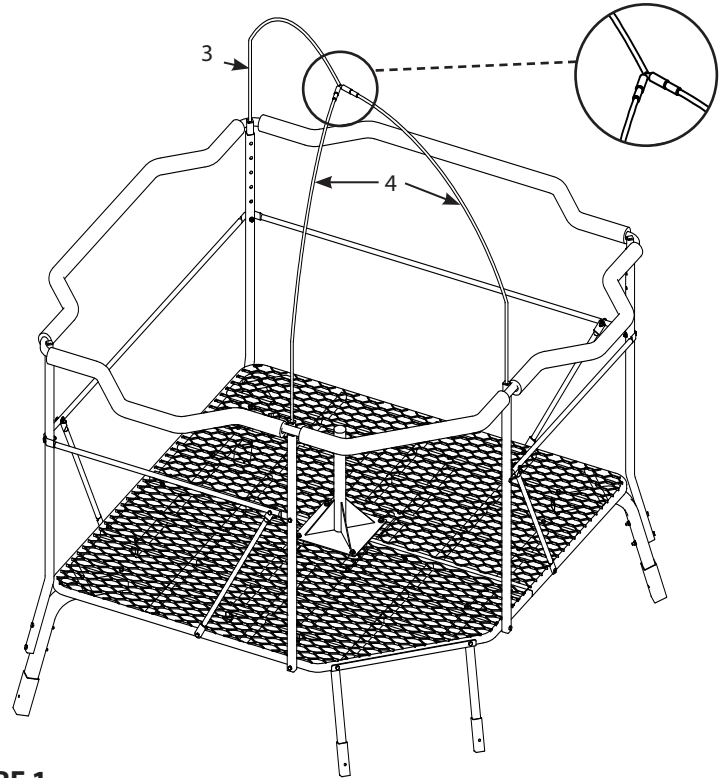
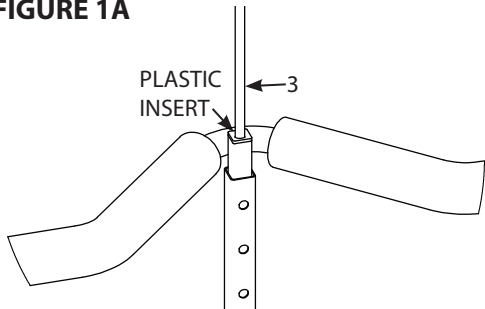


FIGURE 1

STEP 2

2. Slide the pocket end of the support pole with pocket (6) onto the support pole with no pocket (5). **SEE FIGURE 2.**

Slide each support pole (5, 6) into the remaining plastic inserts on the shooting rail. **SEE FIGURE 2 AND FIGURE 1A.**

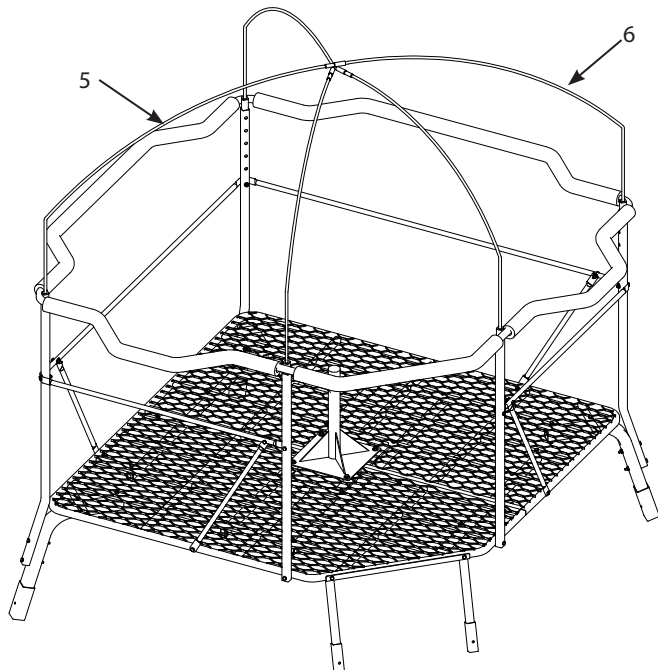


FIGURE 2

STEP 3

3. Attach the curtain (1) to the quad-pod frame by aligning the zipper to the center of the entry opening. Begin securing it by attaching the top edge by wrapping the hook and loop strips around the shooting rail. **SEE FIGURE 3A.** Work your way around the shooting rail and back to the zipper. Make adjustments as needed. **SEE FIGURE 3.**

Attach the bottom edge of the curtain to the platform by tying the webbing strips to the outer perimeter of the platform. **SEE FIGURE 3B.**

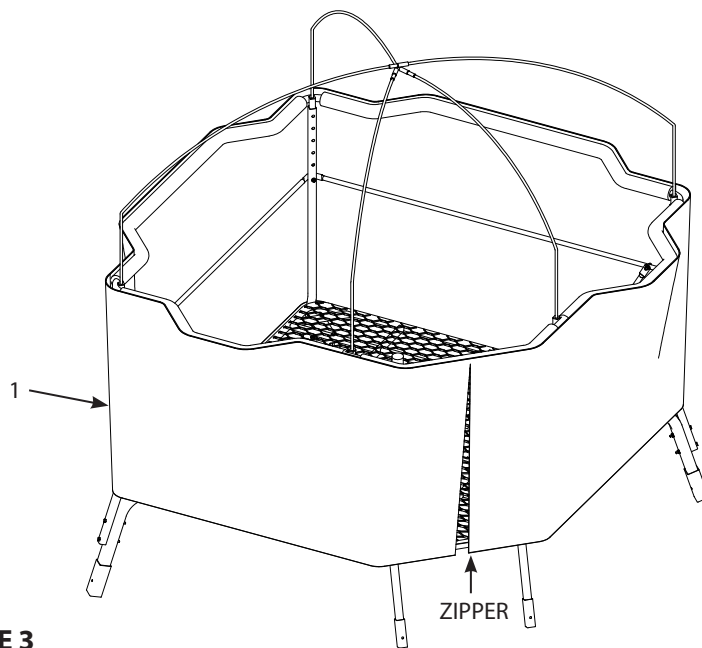


FIGURE 3



FIGURE 3A



FIGURE 3B

STEP 4

4. Attach the roof (2) to the quad-pod and roof frame by draping it over the top of the assembled frame and adjust until the corners are lined up with the roof poles. **SEE FIGURE 4.**



Begin securing it by attaching the bottom edge to the shooting rail by wrapping the hook and loop strips around it. **SEE FIGURE 4A.**

Next, attach the center of the roof to the roof poles where they intersect in the middle with the hook and loop strip. **SEE FIGURE 4B.**

Then, attach each corner of the roof to each corner of the roof poles by wrapping the hook and loop strips around the roof poles near each corner bend. **SEE FIGURE 4C.**

Lastly, tension the roof by wrapping the five d-ring straps around the shooting rail and pulling tight. **SEE FIGURE 4D.**

NOTE: Do not over tension. Only take the slack out of the panel.

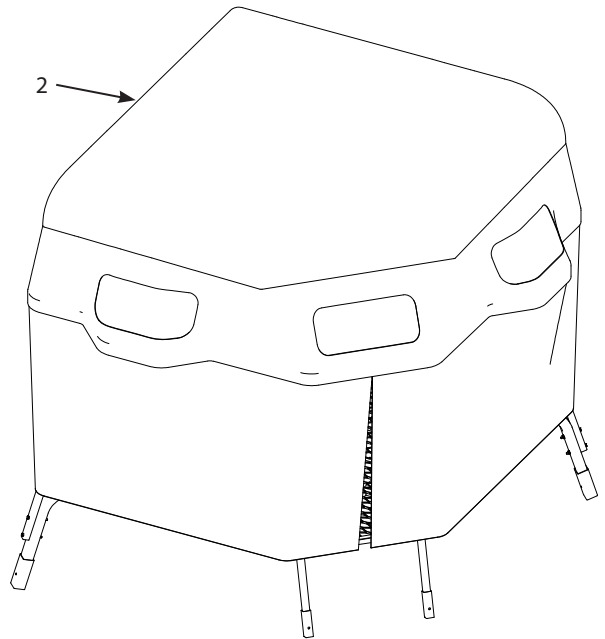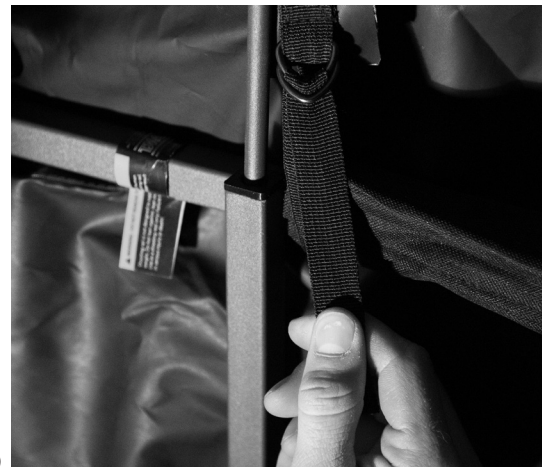**FIGURE 4****FIGURE 4A****FIGURE 4B****FIGURE 4C****FIGURE 4D**



GAME WINNER™

*All weights, specifications and features are approximate and are subject to change without notice. Due to continuous product improvements, product images may not be exact. Warning labels in some product images may have been removed for photography purposes only. Props shown in photos not included. Some assembly may be required.