

CAGE™

PERMANENT HUB BLINDS

Operator's Manual

CAGE™
PERMANENT HUB BLIND
R30

MODEL CBR30T



Get parts online at
www.HuntRiversEdge.com

© 2020 Ardisam
All Rights Reserved

P/N: 34982
C/N: 35790
REV1: 08/24/2020

INTRODUCTION

If for any reason you have a problem with your product or are missing any parts, **DO NOT return to the retailer**, contact Rivers Edge® Customer Service Department at 800-345-6007 for assistance.

CONTENTS

Introduction/Warranty	2
Warnings.....	3
Service Parts List.....	4-5
Set-Up and Use Instructions.....	6-11
Take-down Instructions	12-13
Illustrated Parts Breakdown.....	14-15

WARRANTY

This warranty applies to the original owner that provides a proof of purchase of the unit. The warranty is not transferable. The warranty period begins on the date of purchase by the first retail consumer or commercial end user. Any unit used in a commercial application is covered for a period of 90 days after purchase. For the warranty to be valid, the product must be registered online at huntriversedge.com, within 30 days of purchase. This warranty applies only to products which have not been subjected to negligent use, misuse, uses other than those indicated in the product's owner's manual, alteration, accident, use of unauthorized parts, failure to perform periodic maintenance as specified in product's owner's manual, or normal wear and tear. There is no other expressed warranty. Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one year from purchase, or to the extent permitted by law. All other implied warranties are excluded. Liability for incidental or consequential damages are excluded to the extent exclusion is permitted by law. RETI does not assume, and does not authorize any other person to assume for us, any liability in connection with the sale of our products. Products for which warranty work has been approved must be sent directly to RETI and performed by RETI. **To obtain warranty service and/or replacement instructions, you must obtain prior approval from RETI before shipping your package to us by calling our customer service department at 800-345-6007 or by writing to: Ardisam, Inc., P.O. Box 755, 1160 Eighth Avenue, Cumberland, WI 54829 for a return material authorization number (RMA#).** All items must be shipped prepaid. RETI will, at no charge, repair or replace, in RETI's sole discretion, any product that satisfies the conditions stated above. RETI retains the right to change models, specifications and price without notice. RETI shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada. For more warranty information contact Ardisam, Inc. at 800-345-6007.

If you choose to elevate this product to use above ground (on a tower type structure), only use RETI original designed structures to do so. *Using man-made structures or structures not manufactured by RETI will void your warranty and waive any and all claims for liability against the manufacturer RETI. If you choose to elevate this product on a RETI brand tower structure, the warranty listed in the tower structure manual will apply to this product in addition to the warranty statement in this owner's manual.

STOP

READ AND UNDERSTAND THE FOLLOWING WARNINGS BEFORE ASSEMBLY



WARNING

- ⚠ This tent is made with fabric that meets CPAI-84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.
- ⚠ Heat sources burn oxygen and emit carbon monoxide. Use caution with heaters and vent properly.
 - Do not use candles, matches or open flames of any kind in or near a tent.
 - Do not cook inside a tent.
 - Build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night
 - Exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery-operated lanterns before going sleep
 - Extinguish or turn off all lanterns before going to sleep
 - Do not refuel lamps, heaters or stoves inside a tent
 - Do not smoke in a tent
 - Do not store flammable liquids inside a tent
- ⚠ Proper securing of blind is necessary to avoid damage to blind due to high winds or unattended use. Secure blind to the ground using provided ground anchors and tie-off straps or to tower structure using provided hardware per instructions.
- ⚠ **Always** use the provided rainfly is to prevent unnecessary leaking through roof.
It is recommended to close all windows while not in use to block out wind, rain and avoid unnecessary damage.
- ⚠ **Always** check local laws and regulations for blaze orange requirements before using a hunting blind. When gun hunting, you should always attach a blaze orange safety cap to the roof of blind for added safety from other hunters.
- ⚠ **Never** allow children to play in this product.
- ⚠ **Never** allow the material to cover your face. This material can cause suffocation and death if it is placed over your face.
- ⚠ **Always** wear eye and ear protection!



WARNING

- ⚠ **Only** use approved RETI parts. Failure to do so may result in serious injury or death!

INSPECTION AND MAINTENANCE






- Never put blind away wet. Always put away dry to avoid mildew.
- Take down blind when not in use to avoid unnecessary damage and fading.
- Seal the seams with seam sealer and the walls and roof with silicon spray if leaking occurs.
- Use extra tie-downs during excessive winds.




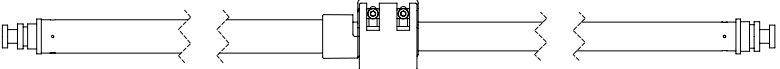 
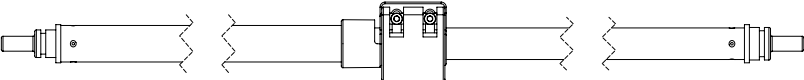 

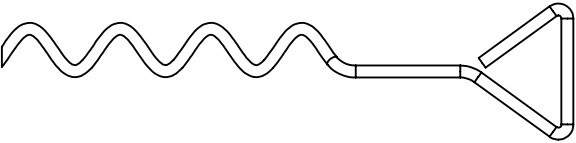
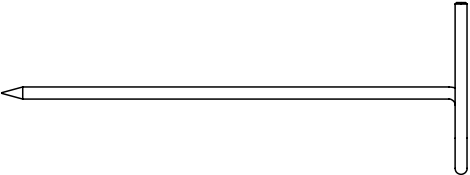
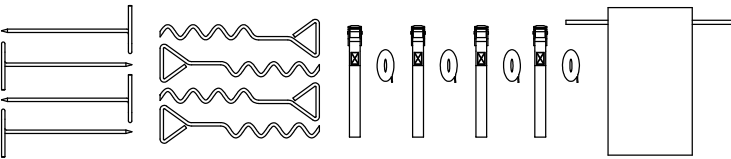
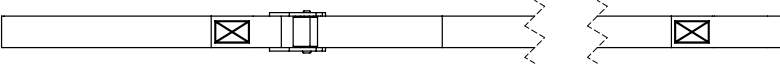 
UV WARNING

- ⚠ Ultraviolet light breaks down lightweight fabric fibers. the material will fade, lose strength and eventually disintegrate if left in prolonged sunlight. To extend the life of your ground blind, avoid leaving it out in direct sunlight for extended periods of time. Set it up in a shady area whenever possible. Fading or discoloring of blind is not covered under your warranty.

SERVICE PARTS LIST (NOT TO SCALE)

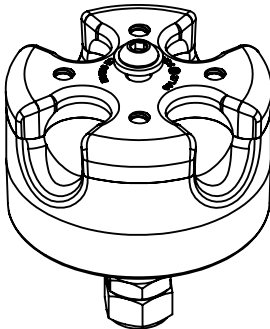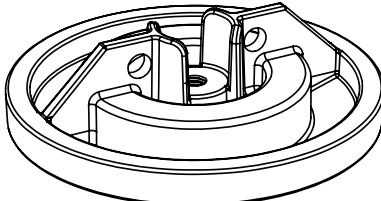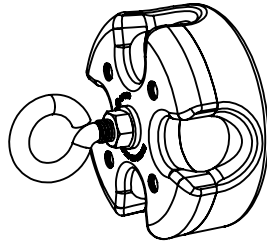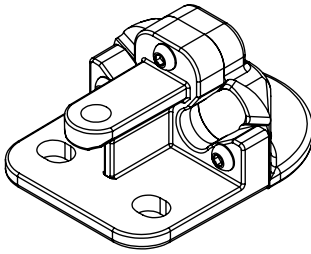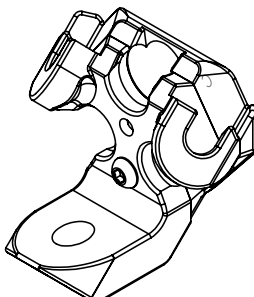Item	Part No.	Description	Image	Qty
1	# 38396	ROOF HUB ASSEMBLY		1
2	# 37034	ROOF LOCK		1
3	# 37113	WALL HUB ASSEMBLY		4
4	# 38395	BOTTOM CORNER HUB ASSEMBLY		4
5	# 38390	TOP CORNER HUB ASSEMBLY		4

SERVICE PARTS LIST (NOT TO SCALE)

Item	Part No.	Description	Image	Qty
6	# 36283	FIBERGLASS POLE ASSEMBLY		16
7	# 35791	HORIZONTAL SPREADER POLE ASSEMBLY		4
8	# 35795	VERTICAL SPREADER POLE ASSEMBLY		4
9	# 35806	ROOF POLE ASSEMBLY CBR30BT		4
10	#25162	TIE DOWN CORKSCREW STAKE		4
11	# 35279	GROUND STAKE 12 IN		4
12	# 35293	TIE DOWN STAKES KIT		1
13	# 29801	CAM STRAP LONG ASSEMBLY		4
14	# 36620	HUB STRAP LOOP ASSEMBLY		4
15	# 35609	ASSEMBLY STRAP FOR PACKING BLIND		1
16	# 35832	CARRYING CASE SEWN CBR30T		1
17	# 35831	RAINFLY SEWN CBR30T		1

SET-UP INSTRUCTIONS

STEP 1 & 2



FIGURE 1

1. Remove the blind from carry bag.
2. Lay the blind flat on the ground so any wall panel is facing upward. Be completely sure there is no material twisted or overlapping the ends of any poles. **SEE FIGURE 1.**

3. Grab the handle on the eyelet located in the center of wall and pull upward so it pops open. **SEE FIGURE 2.**
NOTE: Walls are meant to be strong/ridged and will require a fair amount of force to pop over center for set up
4. Repeat step 3 for the remaining walls so the blind is standing up. **SEE FIGURE 3.**



FIGURE 2



FIGURE 3

STEP 3 & 4

STEP 5



FIGURE 4

- Unzip the door and enter the blind. Place palm of your hand on the roof hub and push the spring loaded roof straight up until it pops over center. **SEE FIGURE 4.**

NOTE: For easier set up, it's best to open up some window panels to allow light into blind for better visibility.

NOTE: The roof hub is under spring tension; use extreme caution when popping roof up and collapsing roof down to avoid injury to face, head or hands. Keep fingers clear of roof hub/pole ends to avoid pinching fingers.

STEP 6 - VERY IMPORTANT STEP!

- Spin the roof lock clockwise (upward) to lock roof poles in place. **SEE FIGURE 5A.** You must push upward on roof fabric to make sure roof lock fully engages and that **ALL** (4) poles are on the outside rim of roof lock.

The roof lock should be nested tightly with roof poles on outside edge of the roof lock **SEE FIGURE 5A.** The roof lock is installed wrong if the roof poles are on top of the roof lock leaving a gap **SEE FIGURE 5B.**

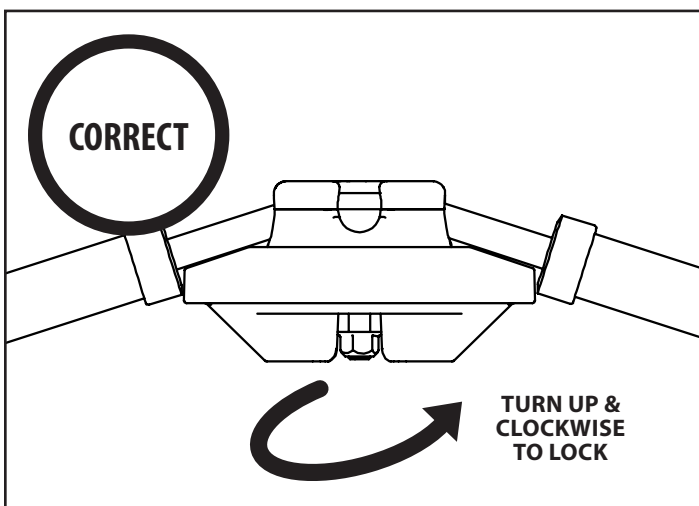


FIGURE 5A - CORRECT INSTALLATION WITH ROOF POLES ON OUTSIDE EDGE OF LOCK HUB



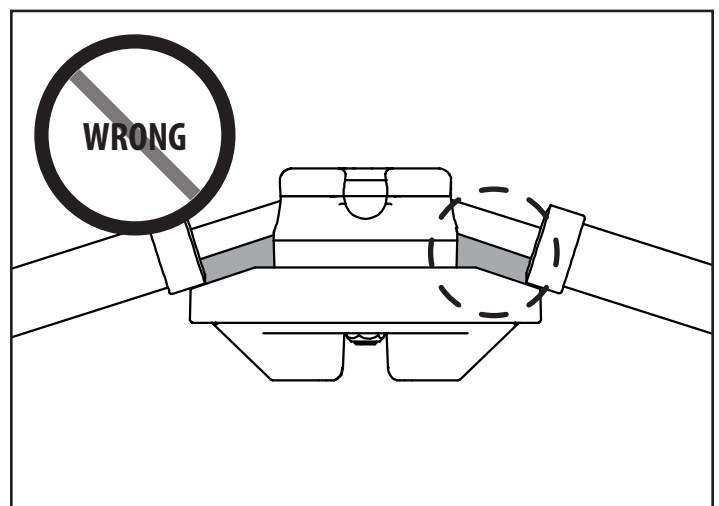


FIGURE 5B - WRONG INSTALLATION WITH ROOF POLES ON TOP OF LOCK HUB

STEP 7 - 9

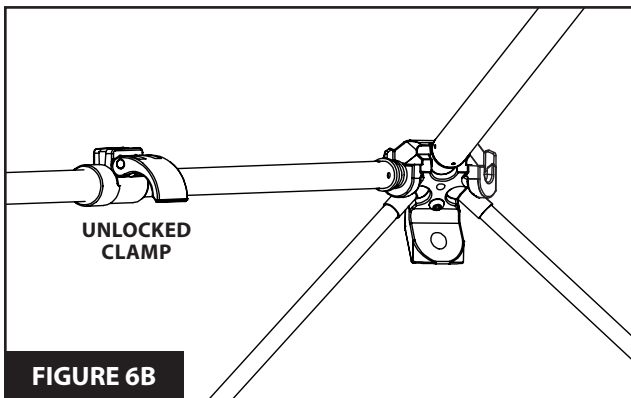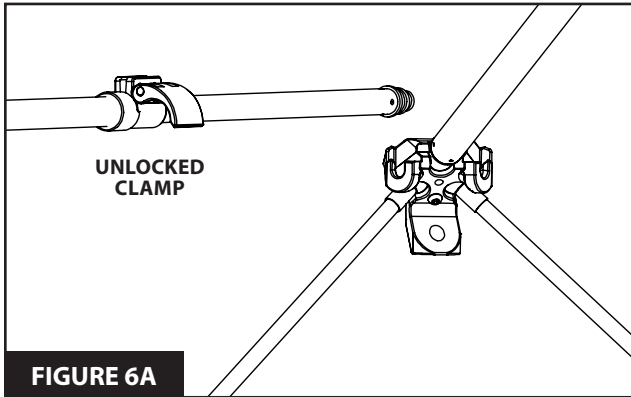

7. Unpack the horizontal and vertical spreader poles from the pole bag.
8. Starting with the (4) horizontal spreader poles with the disc shaped ends, place one end into slot on any top corner hub. Make sure clamp is in the unlocked position. **SEE FIGURE 6A & 6B.**

Insert opposite end of spreader pole into slot of top corner hub located across the same side of blind. Slight rotation of the spreader pole will help with full engagement of each pole end into the slots.

9. Repeat step 8 for remaining (3) horizontal spreader poles. **DO NOT** lock clamps yet.

10. Attach Velcro around spreader poles located in center top. **SEE FIGURE 7.**



STEP 10

STEP 11

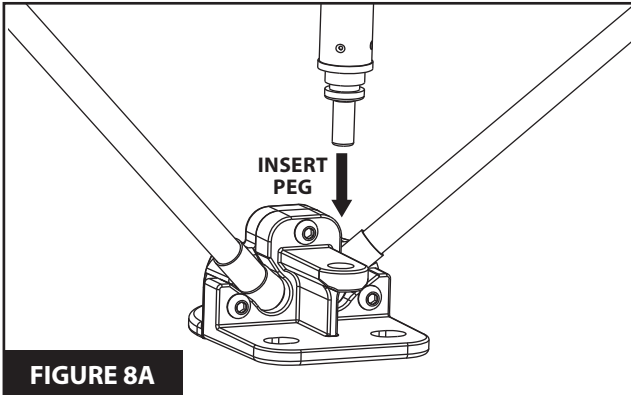


FIGURE 8A

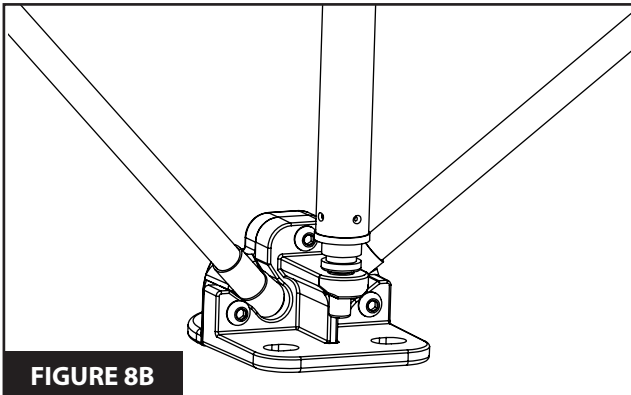


FIGURE 8B

11. Install (4) vertical spreader poles with the round peg ends. With clamp on the vertical pole in the unlocked position, place peg into hole on bottom corner hub. **SEE FIGURE 8A & 8B.**

NOTE: The larger diameter pole should go towards the bottom corner.

12. Slide the pole up and place peg into hole in top corner hub. You will need to keep pressure on bottom pole to ensure both pegs stay located in the hubs. **SEE FIGURE 9A & 9B.**
13. While keeping vertical poles spread apart, flip clamp lever on the vertical pole into the locked position.
14. Repeat step 12 for remaining (3) vertical spreader poles.

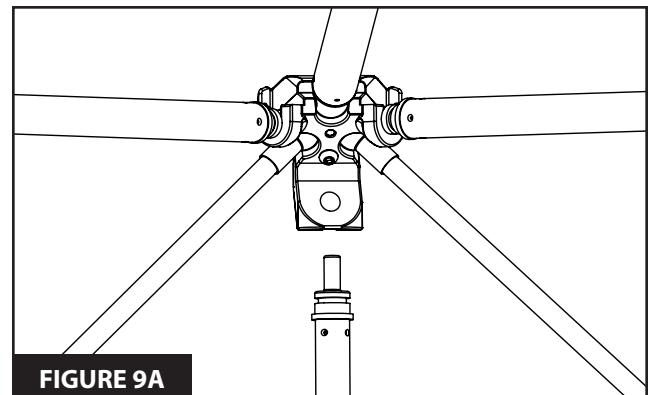


FIGURE 9A

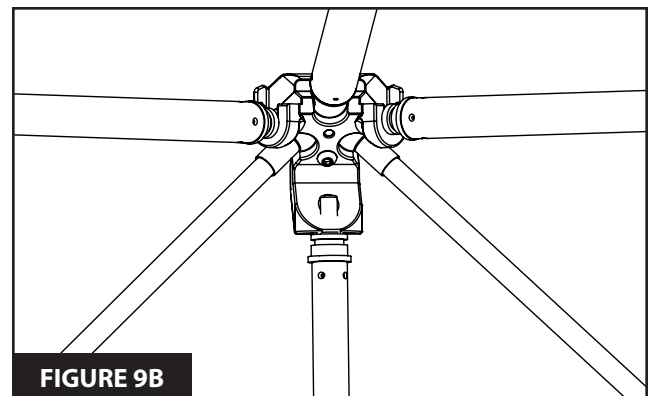


FIGURE 9B

STEP 12 - 14

STEP 15

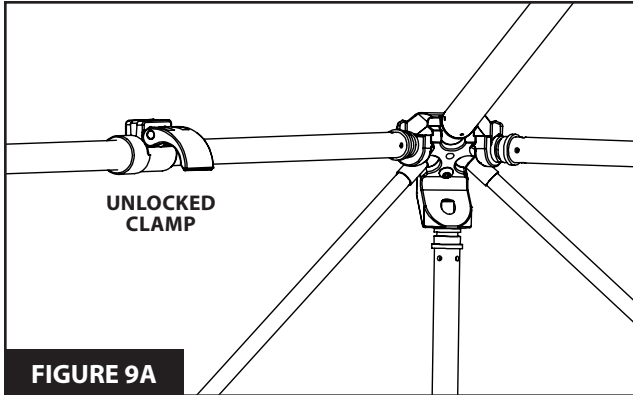


FIGURE 9A

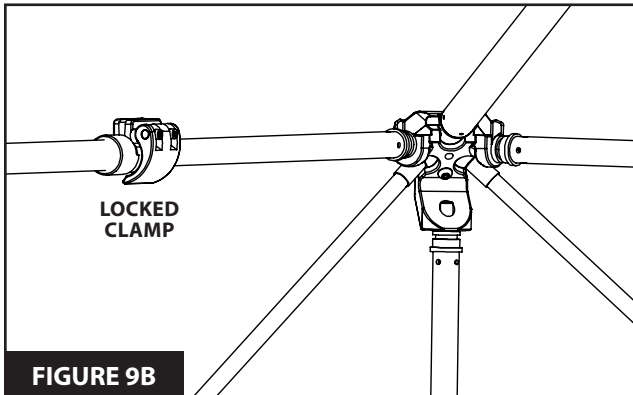


FIGURE 9B

15. Go back to the (4) horizontal spreader poles; while spreading them outward (tight), flip clamp lever into the locked position. **SEE FIGURE 9A & FIGURE 9B.**

NOTE: Once all of the poles are clamped locked return to the roof lock and give it one final twist to ensure it is tight.

16. Remove the ground stakes from bag. Pull each corner outward (taut). Pound a long straight ground stake in hole located on outside bottom corner hub. **SEE FIGURE 10.** Repeat for all four corners.

NOTE: Pounding the stake at an angle is a more effective way to stake down your blind.

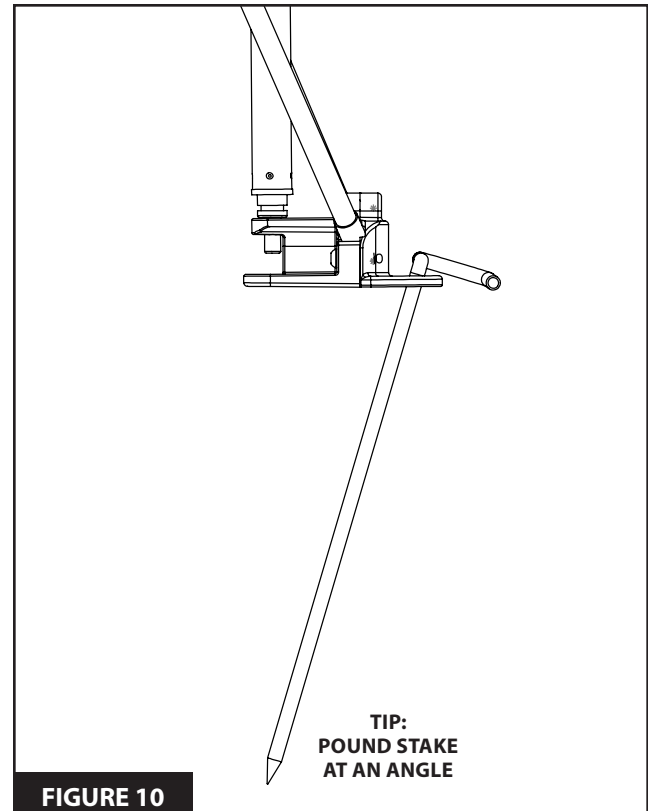


FIGURE 10

STEP 16

STEP 17 - 21



FIGURE 11



FIGURE 12

17. Anchor the side walls by attaching the short part of the strap to eye bolt. **SEE FIGURE 11.**
18. Attach the long strap to spiral anchor. **SEE FIGURE 12.**

19. Measure the distance from side wall eye bolt to approximate location of spiral anchor, and twist anchor into ground.
20. Feed end of long strap through cam lever on short strap on eye bolt. Pull tight. **SEE FIGURE 13.**
21. Repeat steps 17-20 for remaining sides.



FIGURE 13

STEP 19 - 21

TAKE-DOWN INSTRUCTIONS

STEP 1 - 6

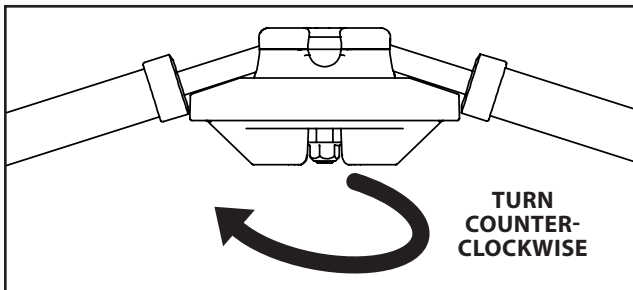


FIGURE 14A - LOCKED POSITION

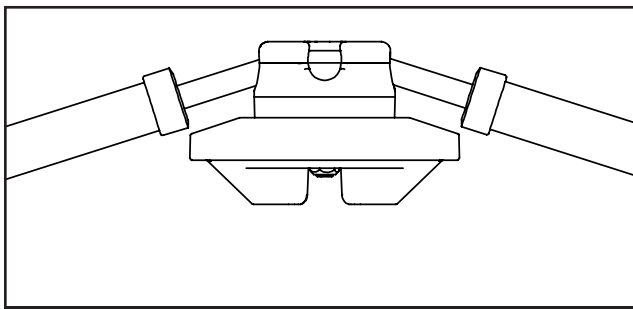


FIGURE 14B - UNLOCKED POSITION

1. Remove all ground stakes and store them in the provided bag.
2. Remove all native brush from brush holder straps.
3. Unscrew the roof lock fully by rotating counter-clockwise until it hits nut on bottom of bolt. **SEE FIGURE 14A & 14B.**
4. Unlock all vertical and horizontal spreader poles and remove. Horizontal poles may need a twist to remove from slots.
5. Slide spreader poles to shortest length and lock all clamps before storing in pole bag provided.
6. Close all windows.

7. Carefully pull roof down by placing your hands on two roof poles opposite of each other. Place hands 4-6 inches away from center hub. **SEE FIGURE 15.**

NOTE: The roof hub is under spring tension; use extreme caution when popping roof up and collapsing roof down to avoid injury to face, head or hands. Keep fingers clear of roof hub/pole ends to avoid pinching fingers.

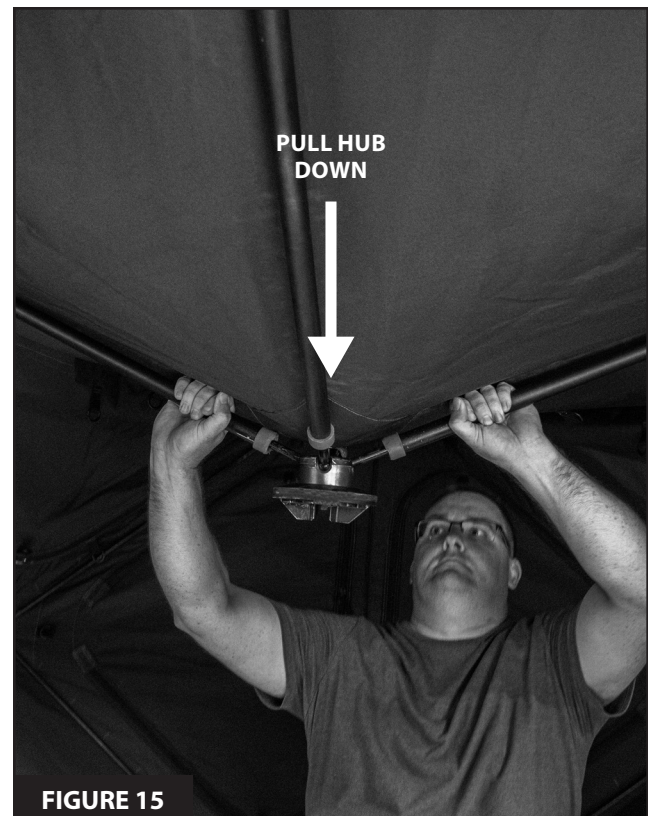


FIGURE 15


STEP 7



FIGURE 16

8. Zip door closed.
9. From outside of blind push in each wall allowing them to fold onto themselves. **SEE FIGURE 16.**
10. Blind will be back in its flat stage just as it was when it was unfolded out of the backpack bag. Gather all corners of the blind and fold together. Do not force the blind when folding. Watch for entanglement of poles. Use the long packing strap to wrap around blind and tighten.
11. Place folded blind back into the backpack carry case with the hubs toward the bottom end of bag always.

ILLUSTRATED PARTS BREAKDOWN

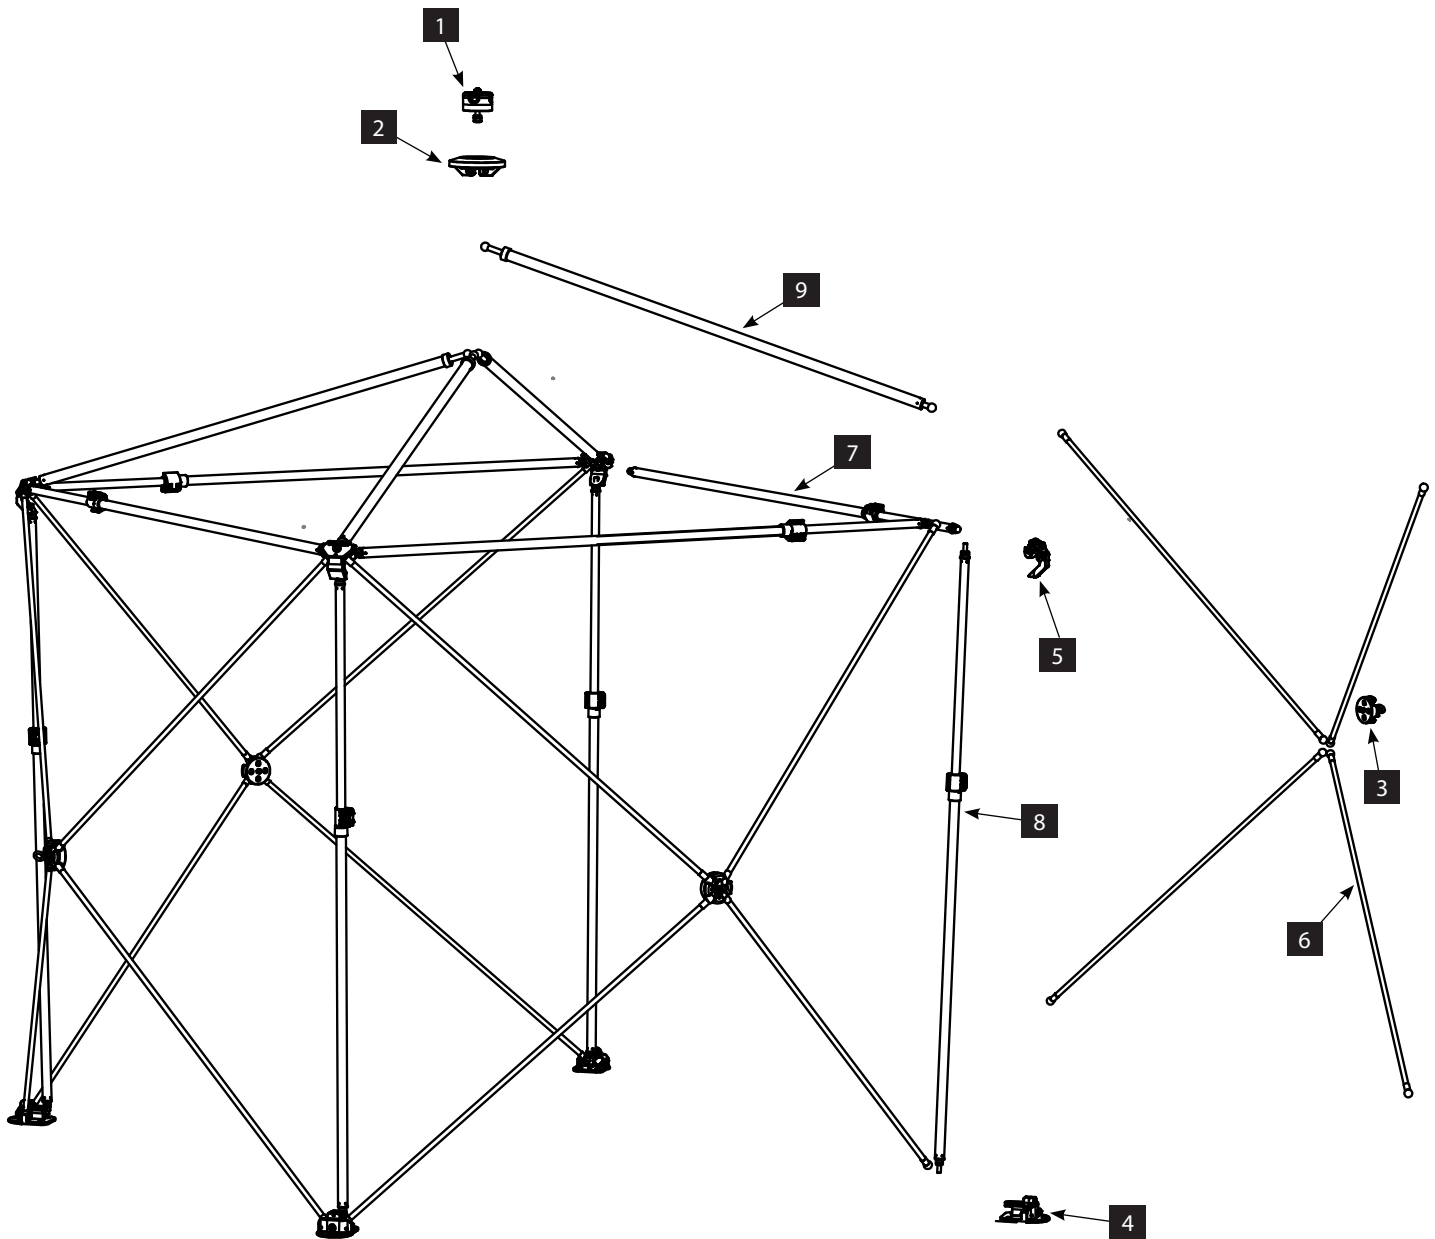

PARTS LIST

Item	Part No.	Description	Qty
1	# 38396	ROOF HUB ASSEMBLY	1
2	# 37034	ROOF LOCK	1
3	# 37113	WALL HUB ASSEMBLY	4
4	# 38395	BOTTOM CORNER HUB ASSEMBLY	4
5	# 38390	TOP CORNER HUB ASSEMBLY	4
6	# 36283	FIBERGLASS POLE ASSEMBLY	16
7	# 35791	HORIZONTAL SPREADER POLE ASSEMBLY	4
8	# 35795	VERTICAL SPREADER POLE ASSEMBLY	4
9	# 35806	ROOF POLE ASSEMBLY CBR30BT	4

PARTS NOT SHOWN

Item	Part No.	Description	Qty
10	# 25162	TIE DOWN CORKSCREW STAKE	4
11	# 35279	GROUND STAKE 12 IN	4
12	# 35293	TIE DOWN STAKES KIT	1
13	# 29801	CAM STRAP LONG ASSEMBLY	4
14	# 36620	HUB STRAP LOOP ASSEMBLY	4
15	# 35609	ASSEMBLY STRAP FOR PACKING BLIND	1
16	# 35832	CARRYING CASE SEWN CBR30T	1
17	# 35831	RAINFLY SEWN CBR30T	1

CAGE™

PERMANENT HUB BLINDS

Rivers Edge® Treestands,
A Division of Ardisam, Inc.
1160 Eighth Avenue, PO Box 755
Cumberland, WI 54829

Phone: 800-345-6007
Fax: 715-822-2124
www.huntriversedge.com



*All weights, specifications and features are approximate and are subject to change without notice. Due to continuous product improvements, product images may not be exact. Warning labels in some product images may have been removed for photography purposes only. Props shown in photos not included. Some assembly may be required.