


PAT. WWW.ARDISAM.COM/PATENTS

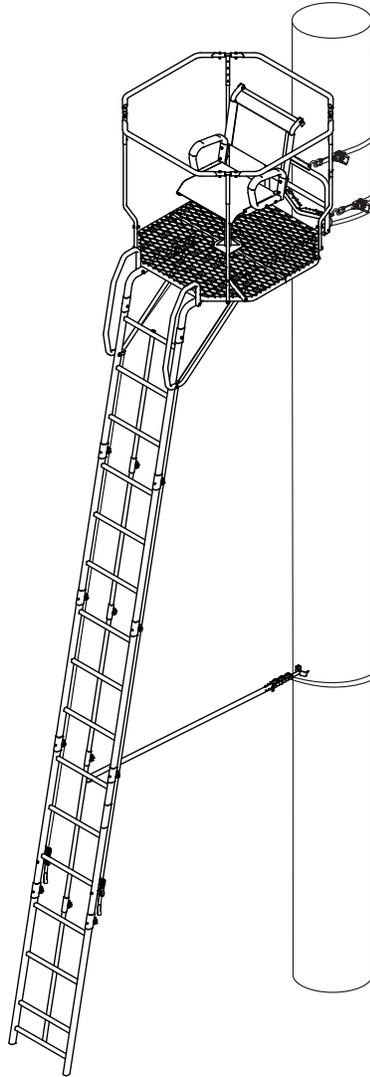

Operator's Manual

**LOCKDOWN  
21' 360 1-MAN  
Ladder Stand**

MODEL LD204

**Maximum Height**  
21'1" to shooting rail

**Maximum Field Rating**  
300 lbs

**Tree Diameter Range**  
12" to 30"

**Wear Your  
Harness!**



**ATTENTION**

**YOU MUST READ ALL WRITTEN INSTRUCTIONS  
AND WATCH THIS SAFETY VIDEO BEFORE USING!**



**WATCH THIS SAFETY VIDEO BEFORE USING!**

Scan →



or Visit →

[www.standsafety.com/r3](http://www.standsafety.com/r3)

Scan the QR code with your smart phone, tablet or similar device.

**OR**

Type the website address into your web browser to view an important safety video before using this product.

**LADDER STAND SAFETY**

PRODUCT MEETS  
INDUSTRY STANDARDS  
RECOGNIZED BY



PARTICIPATING MEMBER

Get parts online at  
[www.HuntRiversEdge.com](http://www.HuntRiversEdge.com)

© 2022 RETI  
All Rights Reserved

P/N: 42847  
C/N: 42859  
REV2: 03/21/2023

## INTRODUCTION

Rivers Edge® Treestands are engineered with you the hunter in mind. We appreciate your purchase of one of our world class treestands. Follow these few simple instructions and your stand will provide you many years of trouble-free pleasure. Instructions should be kept in a safe place and reviewed at least annually.

If for any reason you have a problem with your product or are missing any parts, **DO NOT return to the retailer**, contact Rivers Edge® Customer Service Department at 800-345-6007 for assistance.

## CONTENTS

Introduction/Warranty .....	2
Warnings.....	3-4
Inspection and Maintenance .....	4
Hardware Identification Chart.....	5-6
Assembly Instructions .....	7-16
Warnings.....	17
Setup and Use Instructions.....	18-24
Finished Ladder.....	25
Illustrated Parts Breakdown.....	26-28
Notes.....	29

### WARRANTY

RETI offers a **one-year warranty** for all components of the treestand. These warranties apply to the original owner with a proof of purchase. These warranties begin on the date of purchase by the first retail consumer and continue for the period specified above. These warranties apply to products that are not modified, abused or used in a manner that deviates from the product's intended usage. Minor fading in color is normal and is not covered by warranty. Any corrosion of painted surfaces that occurs as a result of paint being removed or damaged is also not covered by warranty. RETI offers no other warranty expressed or implied. Products for which warranty work has been approved must be sent directly to RETI and performed by RETI. **To obtain warranty service and/or replacement instructions, you must obtain prior approval from RETI before shipping your package to us by calling our customer service department at 800-345-6007 or by writing to: Ardisam, Inc., P.O. Box 755, 1730 Industrial Avenue, Cumberland, WI 54829 for a return material authorization number (RMA#).** All items must be shipped prepaid. RETI will, at no charge, repair or replace, in RETI's sole discretion, any product that satisfies the conditions stated above. RETI retains the right to change models, specifications and price without notice.

This equipment has been manufactured under strict quality and safety guidelines. As with any equipment of this type, full understanding of the instructions and its use is mandatory and imperative for the safety of its user. RETI is not responsible for any damages or injuries sustained due to improper use or modification of any of its products, or resulting from any use which deviates from the product's intended usage. RETI is not responsible for any injuries sustained due to failure to read and adhere to the instructions for use. Any misunderstanding or questions regarding the products of their use should be directed to RETI prior to any use. **All RETI treestands are sold with a full body harness ("Fall Arrest System") that meets standards recognized by the Treestand Manufacturer's Association ("TMA").** It is the owner's sole responsibility to inspect the product regularly for damage, improper installation, or conditions that could jeopardize the ultimate safety of the product. Failure to use or improper use of the provided Fall Arrest System may result in serious injury or death. **ALWAYS wear the provided Fall Arrest System while using this product. Owner is responsible to understand and follow product field weight rating and must never exceed maximum weight rating.** RETI is not responsible for any malfunction or injury resulting from normal wear and tear, damage caused by improper use, improper maintenance, negligence or accidents. This product, if used safely as intended, will provide trouble free service for the useful life of the product. We hope you will enjoy the quality of our products for years to come, and have a safe hunt.

**STOP**

**READ AND UNDERSTAND THE FOLLOWING WARNINGS BEFORE ASSEMBLY**

**MODEL LD204**

**MAXIMUM USE HEIGHT - 21' 1" TO SHOOTING RAIL**

**MAXIMUM OCCUPANCY - ONE (1)**

**TOTAL WEIGHT LIMIT - 300 LB**

**TREE DIAMETER RANGE - 12" TO 30"**

**WARNING**

- ▲ This product carries strict height and weight restrictions. **Do Not** use this product if you exceed the total weight limit. Please note that the total weight limit includes the user(s) and their equipment.

**WARNING**

- ▲ **When hunting from a treestand falls can occur any time after leaving the ground causing injury or death.**
- ▲ **Always** wear a Fall Arrest System (FAS) comprising a full body harness at all times after leaving the ground. You must stay connected at all times after leaving the ground while using climbing and hang-on treestands. Single safety belts and chest harnesses are no longer allowed and shall never be used. If you are not wearing a full body harness properly attached to the tree that is protecting you from a fall, do not leave the ground.
- ▲ **Read and understand** all of the manufacturer's Warnings and Instructions and use all safety devices provided by the manufacturer. Contact the manufacturer for any questions. Failure to do so could result in injury or death.
- ▲ **Never** exceed the total weight limit of the treestand.
- ▲ **Never** use a treestand during inclement weather such as rain, lightning, windstorms or icy conditions and end your hunt and return to the ground if inclement conditions arise.
- ▲ **Never** use a treestand while using drugs (even prescription drugs) or alcohol.
- ▲ **Never** use a treestand while feeling ill, nauseous or dizzy, or if you have a prior medical condition that could cause a problem, that is, heart condition, joints that lock-up, spinal fusions, etc., or if you are not well rested. **Never** sleep in stand.
- ▲ **Never** use a treestand on a dead, leaning, diseased or loose barked tree, or a utility pole. **Always** avoid electrical power lines.
- ▲ **Never** rely on a tree branch for support.

**WARNING**

- ▲ **Never** jump or bounce on a treestand to seat it to the tree.
- ▲ Pull up a bow, backpack, or firearm or other equipment only after being secure in the treestand and a firearm must be pulled up with it unloaded, chamber open, and muzzle down.
- ▲ **Always** inform someone of the hunting location, where the treestand will be located and the expected duration of the hunt.
- ▲ A signal device such as a mobile phone, radio, whistle, signal flare or personal locator device (PLD) must be on your person and readily available at all times.
- ▲ **Never** leave a treestand in a tree for more than two weeks since weather or animals could cause damage. Tree growth can also stress and damage straps and buckles.
- ▲ Inspect the treestand and all safety devices each time before use and **Do Not** store a treestand outdoors when not in use.
- ▲ **Never** modify your treestand in any way by making repairs, replacing parts, or altering it except if explicitly authorized in writing by the manufacturer.
- ▲ Practice installing, adjusting and using your treestand at ground level prior to using it at elevated positions. Study your new stand to become familiar with all of its features and design. Doing so will confirm that the product is manufactured, assembled and installed correctly.
- ▲ Instructions (written and video) shall be kept in a safe place and reviewed at least annually. It is the responsibility of the treestand owner to furnish the complete instructions to any person who borrows or purchases the treestand.
- ▲ Use at least three (3) people to install or take down a ladder treestand.
- ▲ The criss-cross straps/ropes and stabilization devices must be attached before climbing to the platform.
- ▲ When installing a ladder stand, always bounce on the first rung to set the ladder into the ground according to manufacturer's instructions before proceeding to climb any higher.
- ▲ Check every ladder section connection every time you use the stand before you leave the ground. If ladder sections are separating, do not use the stand.
- ▲ Check the ground under the stand to make sure it is firm and level. Sloping ground or uneven surface (one side on a rock) can cause your ladder to tilt or shift off the tree as you climb.

**⚠ WARNING**

- ▲ **Always** maintain three (3) points of contact when climbing a ladder treestand. Proper three-point contact means having either two feet with one hand or one foot with two hands on the step portion of the ladder or climbing aid at all times.
- ▲ **Always** lean forward as you climb and attach your harness to the tree before securing the platform to the tree and stepping onto the platform.
- ▲ **Never** exceed the stated maximum use height.
- ▲ **Do Not** use this product until you have watched the online safety video, understand it, and practiced the techniques for safe hunting discussed in this video. Video can be found with the QR code and/or URL shown on front cover of this manual.
- ▲ Read and perform all inspection and maintenance tasks before each and every use. Replace any questionable components immediately with RETI original replacement parts.
- ▲ **Do Not** crush tubing when tightening bolt assemblies! Identify and familiarize yourself with all parts before you start. Bolt identification chart can be found in the back.
- ▲ Double check assembly steps to be certain you have correctly assembled this product.
- ▲ **Never** use any product that has not been maintained or inspected properly - Your life depends on it!
- ▲ Replace any and all treestand straps every two years or when any signs of damage or wear exist before.
- ▲ **Always** wear the appropriate footwear when using a ladder treestand. A good non-slip safety boot is important to your personal safety. Be especially careful that boot laces do not get hooked on the stand or any of its components (tuck shoelaces into boots before climbing).

**⚠ WARNING**


- ▲ **Only** use approved RETI parts. Failure to do so may result in serious injury or death!

**INSPECTION AND MAINTENANCE**




**BEFORE EACH USE PERFORM THE FOLLOWING:**








- Inspect all webbing, rope, cord, and strap assemblies for wear or damage.
- Inspect cables and/or cable ends for damage or kinking.
- Inspect all hardware and chain components for damage or wear.
- Inspect for any structural damage to product. (If any exists stop use immediately and call RETI Customer Service.)
- Inspect all nut and bolt assemblies to be certain none are loose.
- Inspect for any missing parts.
- Lubricate all pivot and slide together points with powder graphite, petroleum jelly or silicone spray to prevent noise, wear and rust.
- Inspect entire product for any rust, corrosion, cracks, freezing, excessive heat or rotting damage that may effect the safety of your product. Discard any questionable product.
- Inspect entire product for any structural damage - pay close attention to all weld locations. (Discard product if any damage is found.)
- Using correct wrenches inspect all nut & bolt assembly locations and snug up any that may be loose. Be careful not to crush tubing when tightening!
- Inspect and check operation of all cables, cable ends, cord, rope, webbing, and strap or chain assemblies. Replace with RETI original replacement parts any item or assembly that shows signs of wear, damage, kinking, or functions incorrectly.
- Inspect seat for damage or wear. Replace any seat with factory new that shows signs of structural damage or wear.
- Never modify your stand in any way by making repairs, replacing parts, or altering by adding or attaching anything to it except if explicitly authorized in writing by the manufacturer.

**TOOLS REQUIRED**

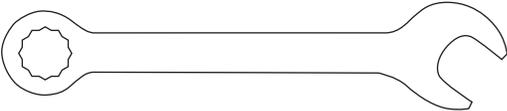-	-	7/16 IN WRENCHES		2
---	---	---------------------	--	---

**HARDWARE LIST**

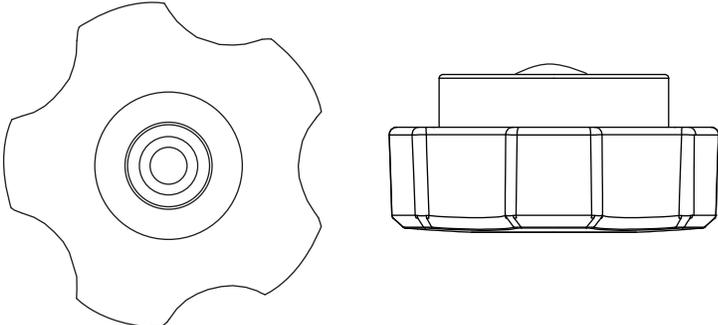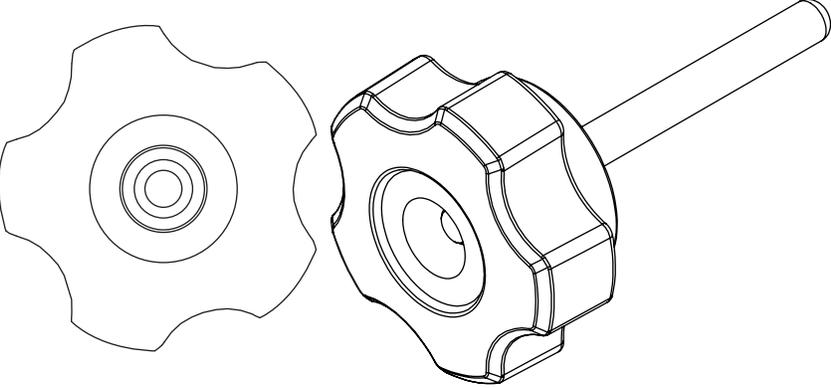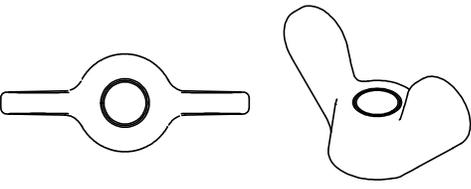Item	Part No.	Description	Image	Qty
1	23603	KNOB SILENT LADDER		4
17	36719	KNOB SILENT LADDER W/ STUD		8
34	48042B	WING NUT 1/4 -20 IN		2

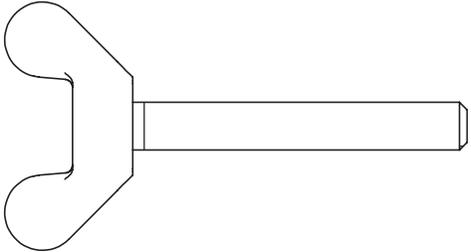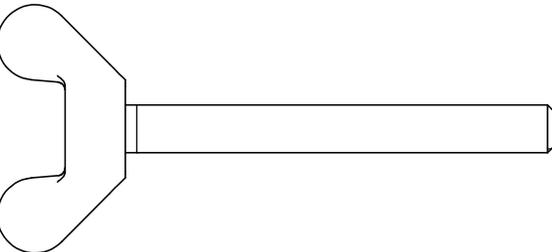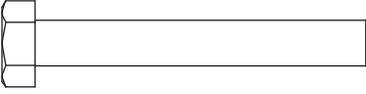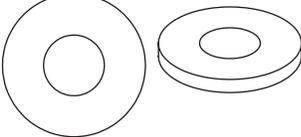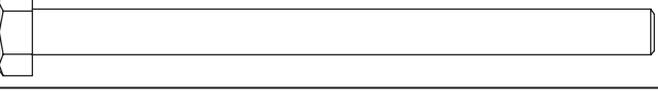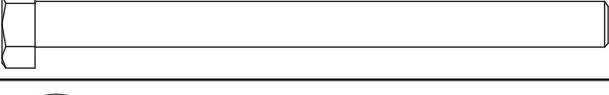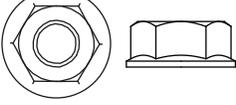Item	Part No.	Description	Image	Qty
35	48044B	WING BOLT 1/4 X 1-3/4 IN		1
36	48057B	WING BOLT 1/4 X 2-1/4 IN		1
37	48240B	BOLT 1/4 X 1-1/2 IN		20
38	48250B	BOLT 1/4 X 1-3/4		10
39	48261B	WASHER 1/4 IN		10
40	48270B	BOLT 1/4 X 2-1/2 IN		12
41	48271B	BOLT 1/4 X 2-1/4 IN		9
42	48273B	BOLT 1/4 X 3-1/4 IN		4
43	48280B	BOLT 1/4 X 3 IN		8
44	48752B	NUT 1/4 IN		67
45	8909B	BOLT 1/4 X 1-1/4 IN		4

## ASSEMBLY INSTRUCTIONS

### IMPORTANT ASSEMBLY TIP:


Do not tighten any nut and bolt combinations completely until all parts are assembled together! Finger tighten plus one turn of a wrench only! This will temporarily hold the lock-nut on the bolt while helping alignment of all parts! After all parts are assembled together, all nut and bolt combinations must be completely tightened.

**All assembly must be done in this order at ground level before uprighting.**

**Do not remove labels/warnings from product, they are there for your safety.**

**Recommended for adult use only.**


STEP 1

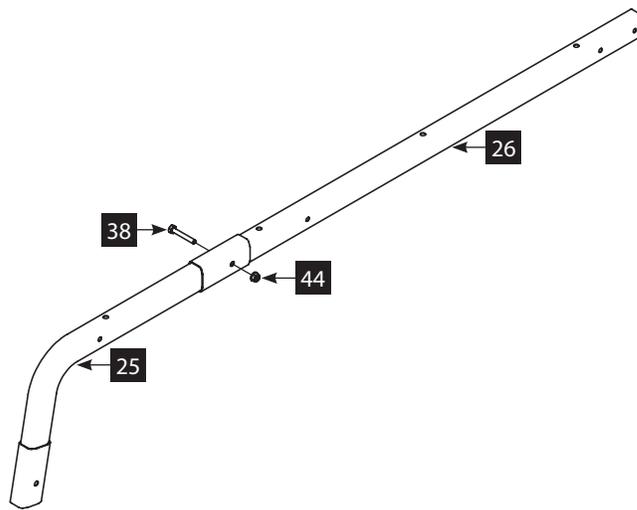

1. Insert each J-tube extension (26) into a J-tube with pocket (25) and secure using a 1/4 X 1-3/4 IN bolt (38) and nut (44).

2. Attach the platform sections (27) together using three 1/4 X 2-1/4 IN bolts (41) and nuts (44).


Attach the platform assembly to the J-tube assemblies (25,26) using eight 1/4 X 3 IN bolts (43) and nuts (44).

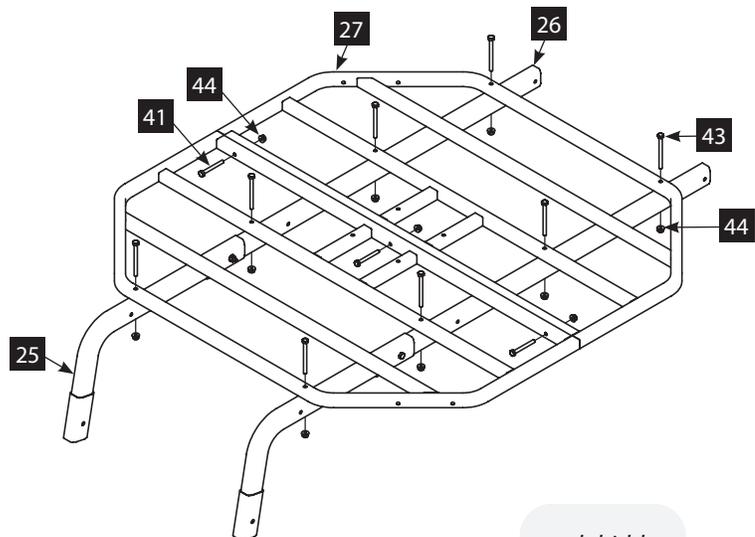

mesh hidden  
for clarity


STEP 2

STEP 3

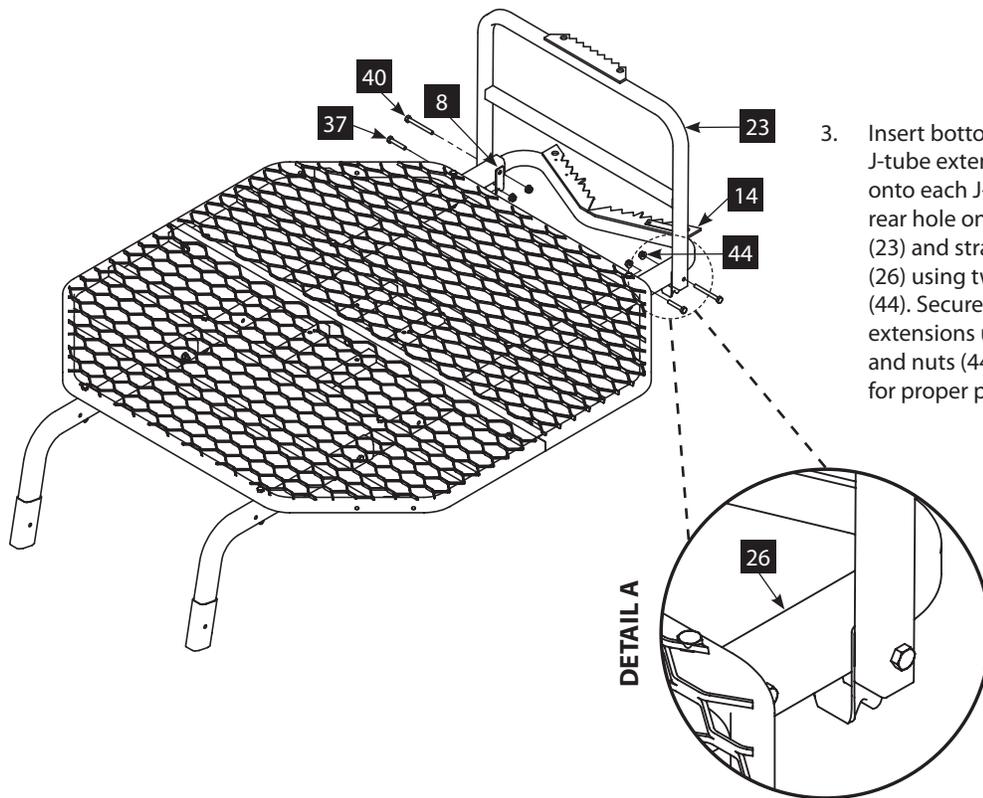


3. Insert bottom tree blade (14) into ends of each J-tube extension (26). Slide a strap guide (8) onto each J-tube extension (26) and align with rear hole on each side. Secure top tree blade (23) and strap guide (8) to J-tube extensions (26) using two 1/4 X 2-1/2 IN bolts (40) and nuts (44). Secure the bottom tree blade to the J-tube extensions using two 1/4 X 1-1/2 IN bolts (37) and nuts (44). Pay close attention to **DETAIL A** for proper positioning of strap guides (8).

4. Attach the bottom seat post (3) to the assembled platform using four 1/4 X 1-3/4 IN bolts (38), four 1/4 IN steel washers (39) and nuts (44).

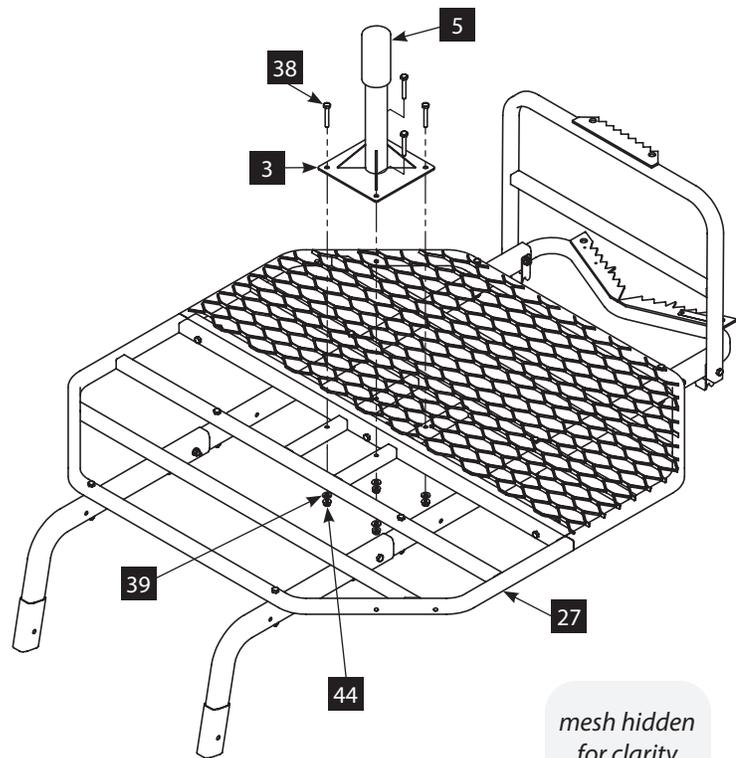

STEP 4

STEP 5

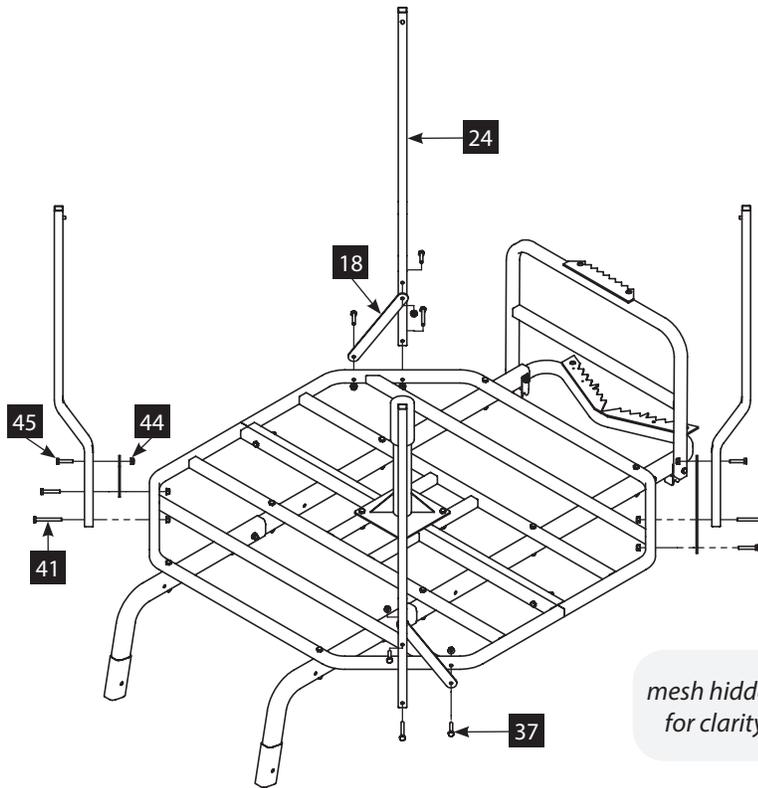


5. Attach four vertical supports (24) to the assembled platform using four 1/4 X 2-1/4 IN bolts (41) and nuts (44). Attach one support brace (18) to the inside of each vertical support (24) using a 1/4 X 1-1/4 IN bolt (45) and nut (44). Attach to the opposite end of each support brace (18) to the platform assembly using four 1/4 X 1-1/2 IN bolts (37) and nuts (44).

mesh hidden  
for clarity


6. Assemble the shooting rail by inserting a shooting rail hub (20) into each end of the shooting rails (19). Secure using eight 1/4 X 1-1/2 IN bolts (37) and nuts (44).

**NOTE:** Pay close attention to the orientation of the shooting rail hubs (20). The four adjustment holes should face the inside.

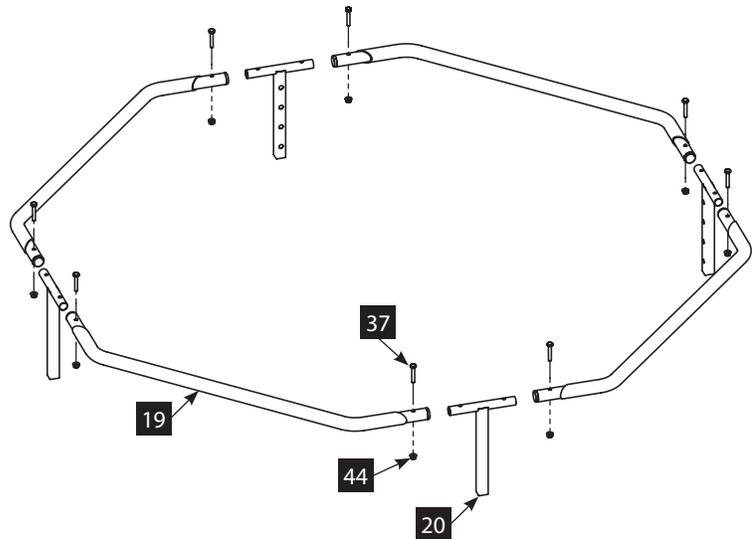


STEP 6

STEP 7

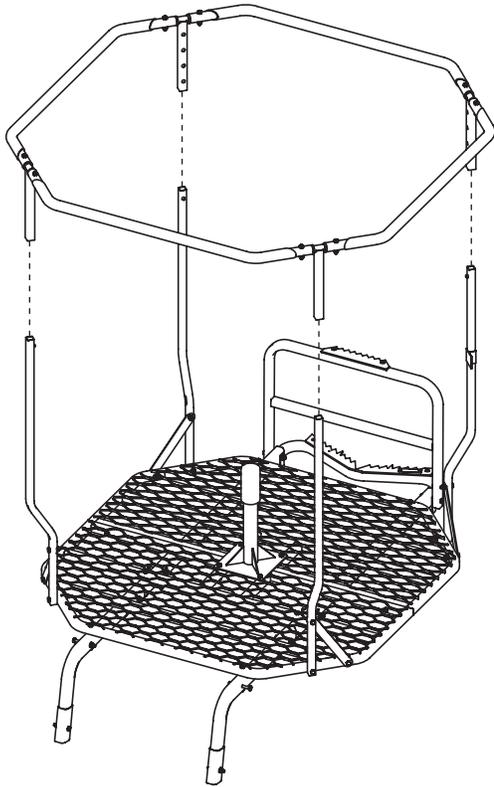

7. Attach the assembled shooting rail to the assembled stand by inserting the four vertical supports into the four hubs. Secure with the push button pins at the highest height position at this time. Later, once the stand is completely set up, use the push button pins to adjust the height of the shooting rail. Work your way around and move each hub one adjustment hole at a time until you reach the desired height.

mesh hidden  
for clarity

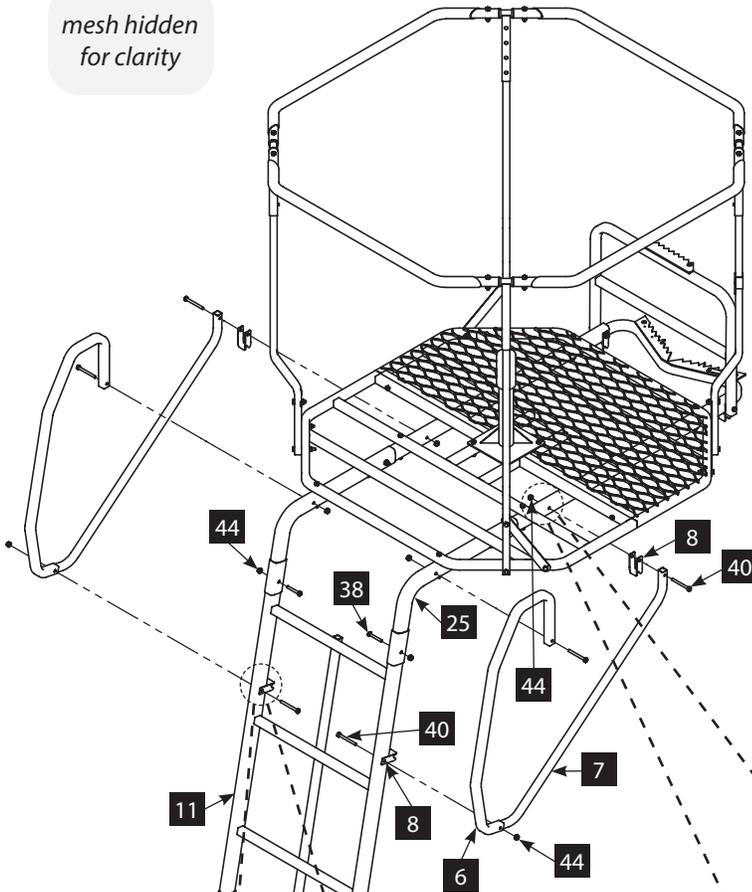


- Slide the top ladder section (11) into the pockets on the J-tubes (25) and secure using two 1/4 X 1-3/4 IN bolts (38) and nuts (44).


Pre-assemble the platform braces (7) with the ladder hand rails (6) by inserting one end of each platform brace (7) into the lower end of each ladder hand rail (6) and aligning the holes.

Then, attach the pre-assembled platform braces (7) and ladder hand rails (6) and four strap guides (8) to the rest of the treestand using six 1/4 X 2-1/2 IN bolts (40) and nuts (44). Pay close attention to **DETAIL A** and **DETAIL B** for proper positioning of strap guides (8).


DETAIL A

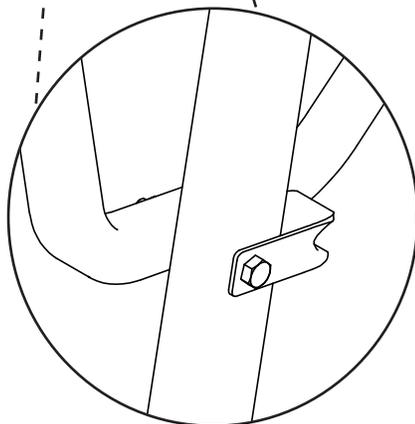

DETAIL B

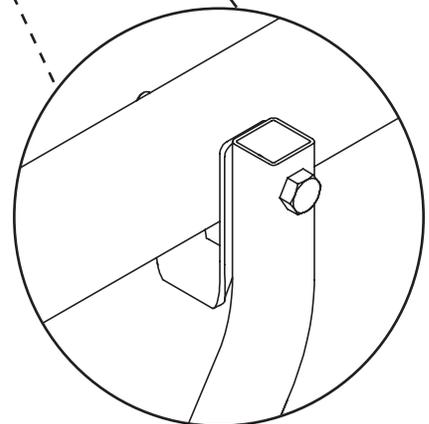

STEP 8

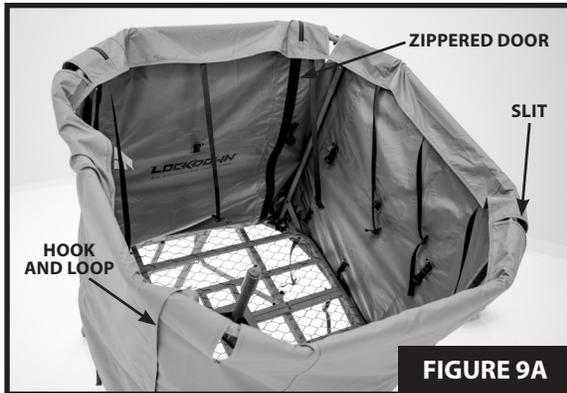

**FIGURE 9A**



**FIGURE 9B**



**FIGURE 9C**



**FIGURE 9D**

9. Attach the curtain (28) to the shooting rail frame by centering the zippered door with the top ladder section (11). With the curtain draped over the shooting rail, connect the two sides with the hook and loop. Note that the slits in the curtain should be in line with the vertical shooting rail supports (24). **SEE FIGURE 9A.**


Starting with the two bottom buckles nearest to the door, wrap each buckle strap around the platform and pull through the platform mesh before securing. The curtain should be flush with the bottom of the platform. **SEE FIGURE 9B.**

Once the bottom buckles are secured, wrap each top buckle around the shooting rail and pull tight. **SEE FIGURE 9C.**

Once all buckles are secured, adjust the straps as necessary so there are no gaps between the curtain and platform.


Once the stand is fully upright and secured to the tree, the shooting rail and curtain can be adjusted to the user's preference. After adjusting the shooting rail to the proper height, pull the top buckles until the curtain is tight. **SEE FIGURE 9D.**

STEP 10

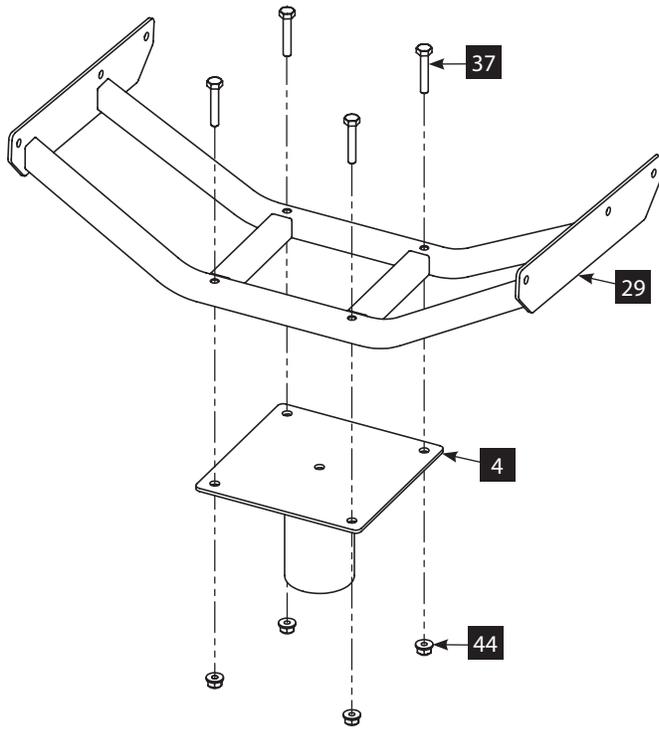


10. Begin assembly of the seat by attaching the top seat post (4) to the seat frame (29) using four 1/4 X 1-1/2 IN bolts (37) and nuts (44).

11. Attach one backrest tube (21) to an armrest (22) using two 1/4 X 2-1/2 IN bolts (40) and nuts (44) for each armrest/backrest assembly.

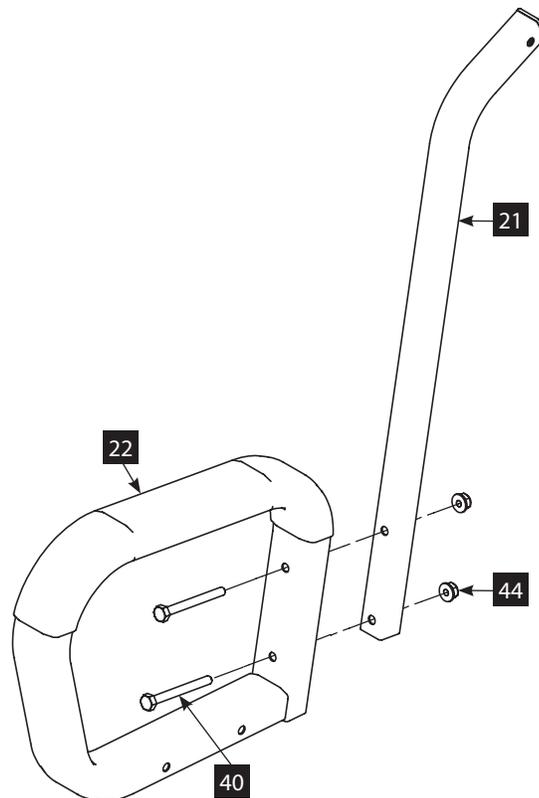

STEP 11


STEP 12

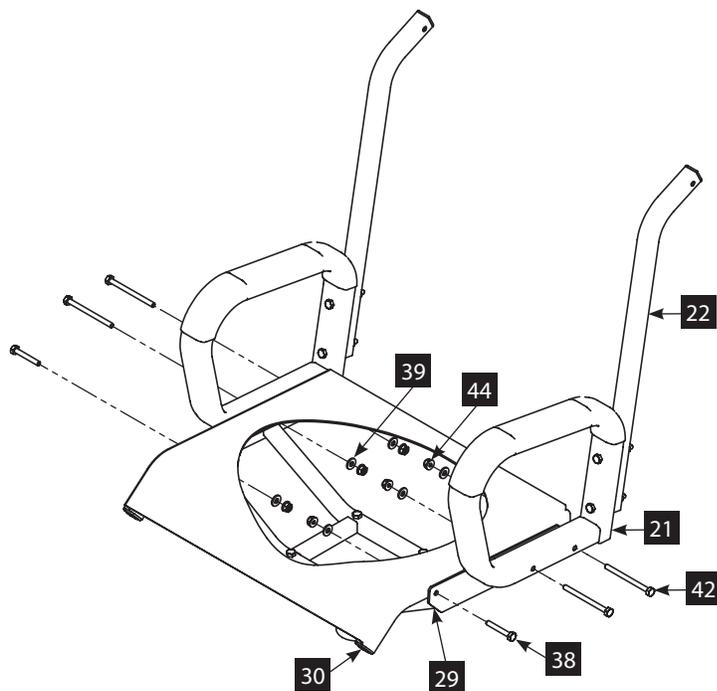

12. Next attach the seat assembly (30) and two armrests/backrest assemblies (21, 22) to the seat frame (29) using four 1/4 X 3-1/4 IN bolts (42), two 1/4 X 1-3/4 IN bolts (38), six 1/4 IN steel washers (39), and six nuts (44). The seat assembly (30) will be tensioned to the inside of the seat frame (29) by tightening the bolts.


13. Slide the backrest (31) onto the backrest tubes (21). Attach the backrest spreader (32) to the top of the backrest tubes (21) using two 1/4 X 1-1/2 IN bolts (37) and nuts (44).

**NOTE: Do not attach seat to platform assembly until after stand is completely upright and secured to tree.**

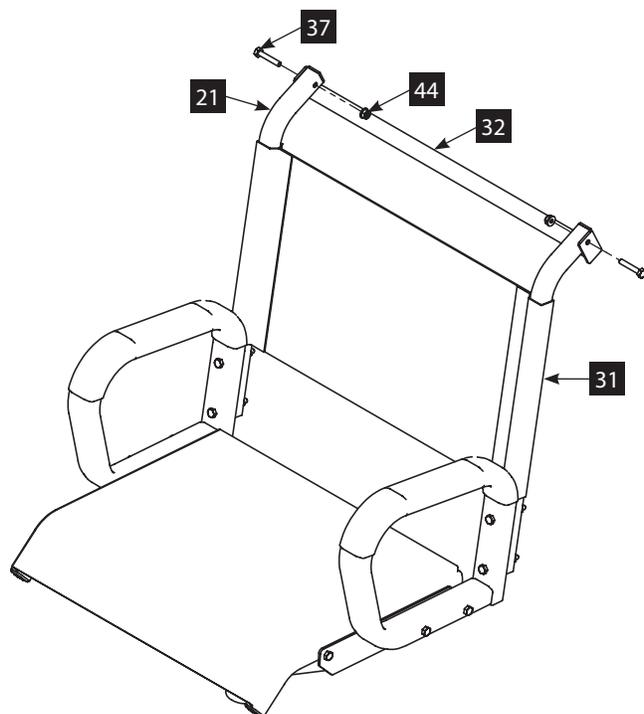

STEP 13

STEP 14

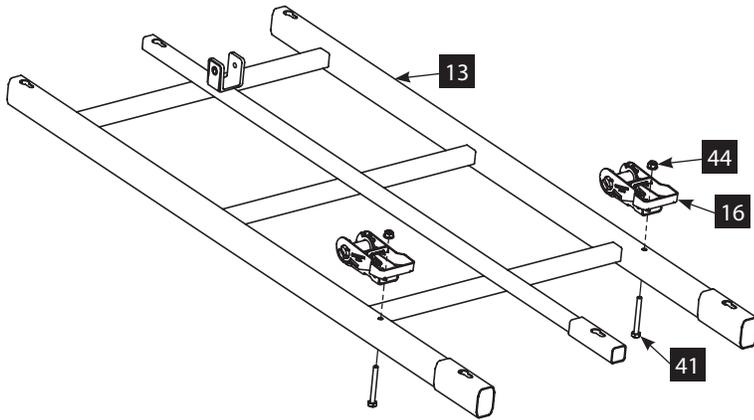


- Attach the ladder ratchets (16) to the ladder section with the stabilizer bar mount (13) using two 1/4 X 2-1/4 IN bolts (41) and nuts (44). Set aside for now.

- Ladder sections are assembled on the ground in the following order: bottom ladder section (12), ladder section with stabilizer bar mount (13), two middle ladders sections (10) and the top ladder section (11) with the treestand top assembly.



The ladder sections are secured together with two different types of knobs, Silent LadderLock (1) and Silent LadderLock with stud (17). The four Silent LadderLocks (1) are used for the center pocket on each section **SEE DETAIL A**. The eight Silent LadderLocks with stud (17) are used for the two outside pockets on each section **SEE DETAIL B**.

**NOTE: Do not attach seat to platform assembly until after stand is completely upright and secured to tree.**

DETAIL A

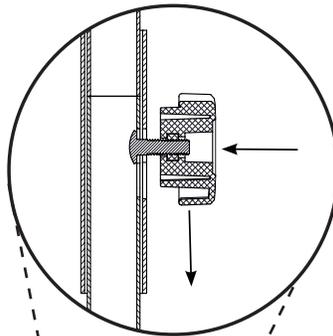


DETAIL B

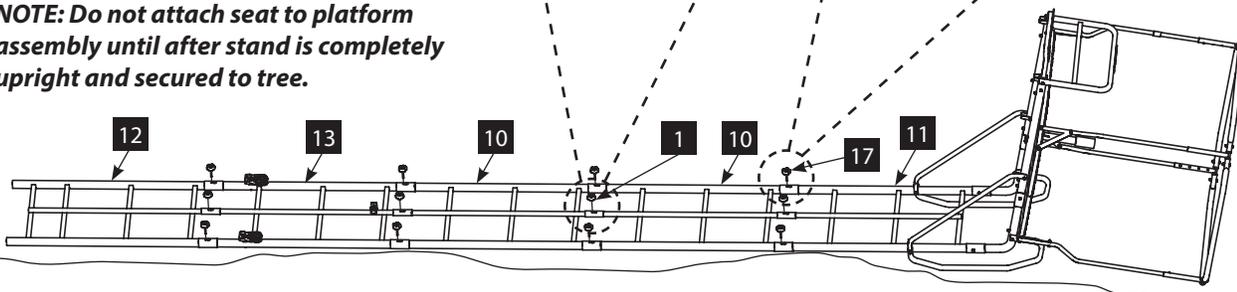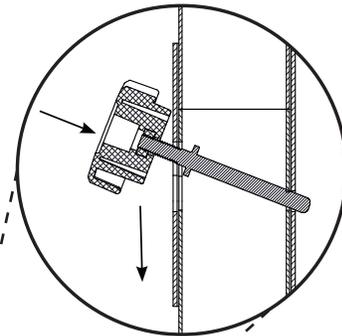

STEP 15

FIGURE 1

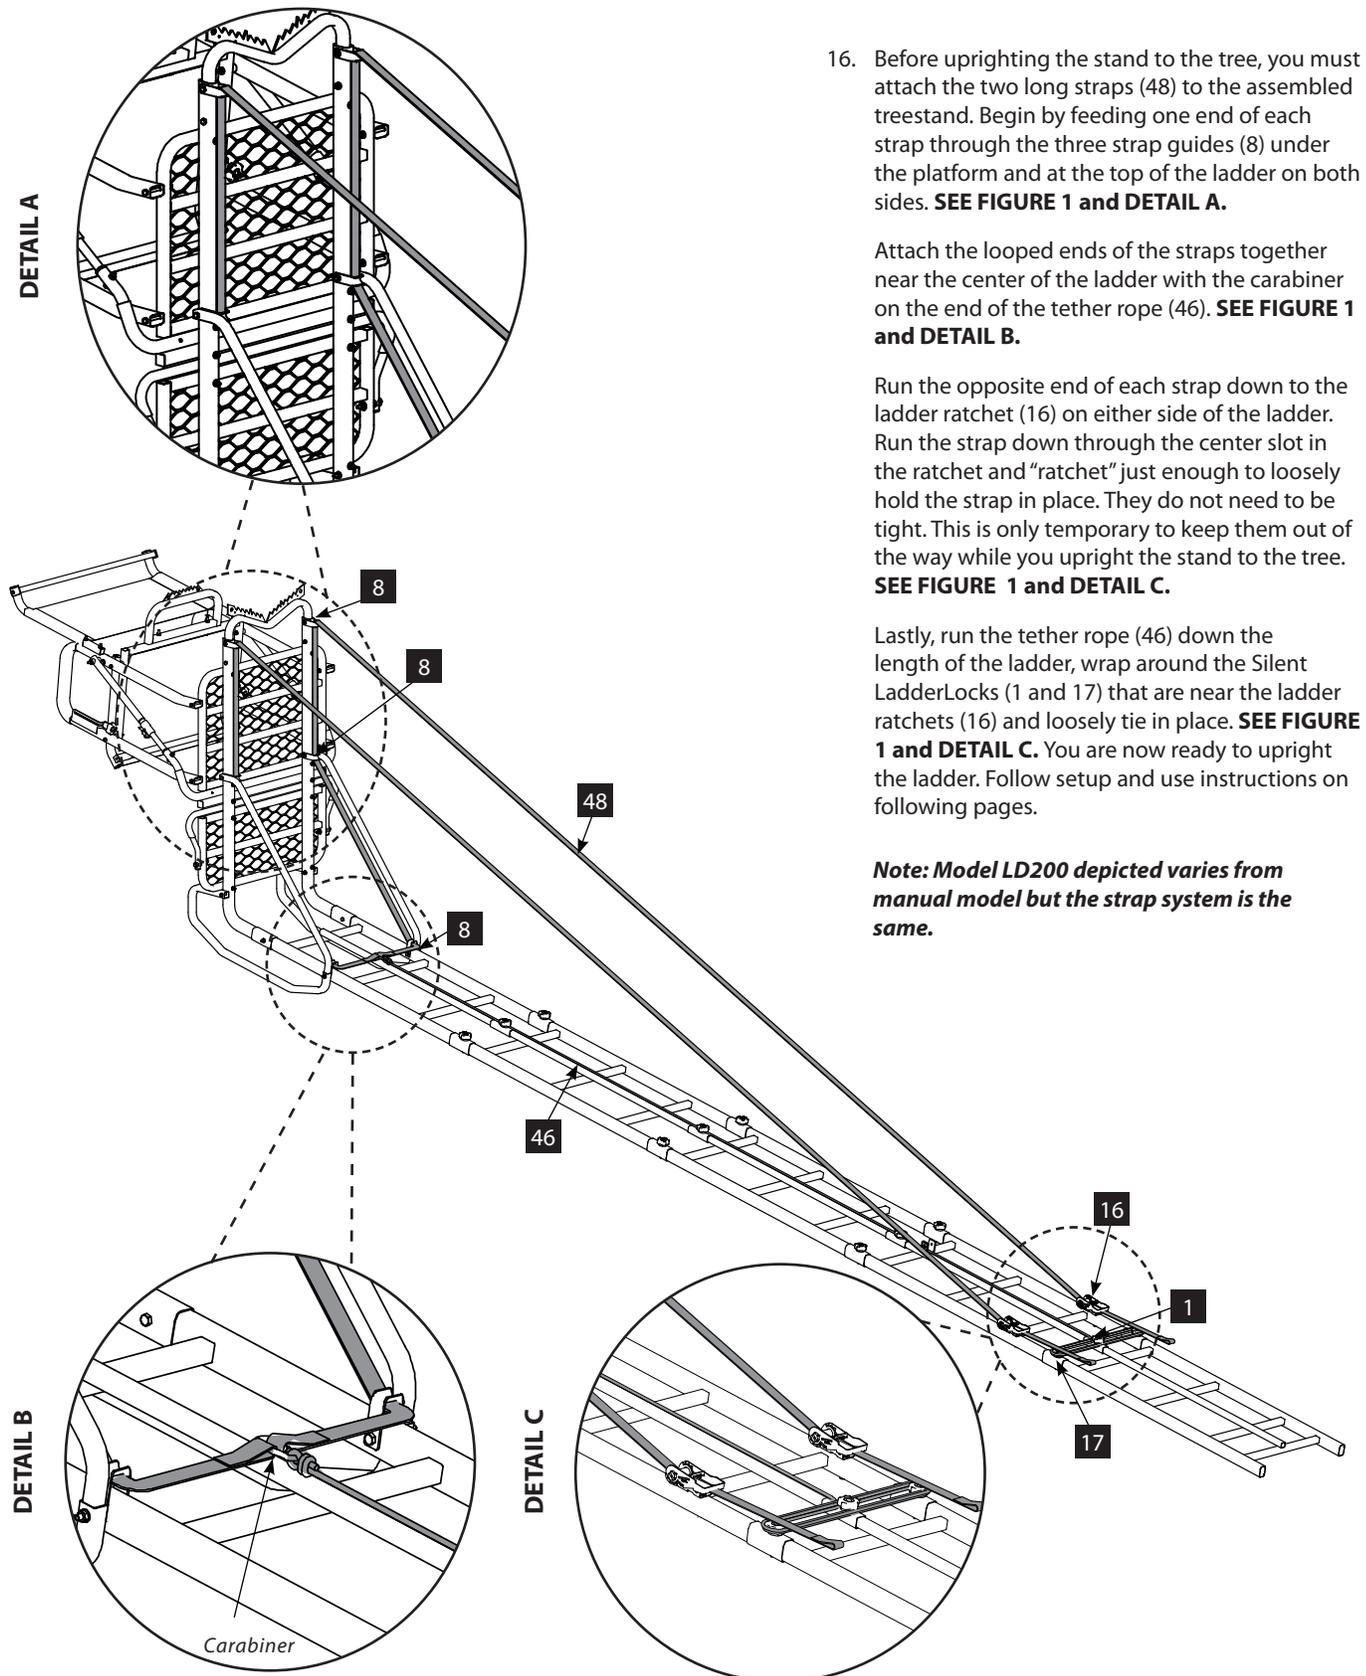

- Before uprighting the stand to the tree, you must attach the two long straps (48) to the assembled treestand. Begin by feeding one end of each strap through the three strap guides (8) under the platform and at the top of the ladder on both sides. **SEE FIGURE 1 and DETAIL A.**

Attach the looped ends of the straps together near the center of the ladder with the carabiner on the end of the tether rope (46). **SEE FIGURE 1 and DETAIL B.**

Run the opposite end of each strap down to the ladder ratchet (16) on either side of the ladder. Run the strap down through the center slot in the ratchet and "ratchet" just enough to loosely hold the strap in place. They do not need to be tight. This is only temporary to keep them out of the way while you upright the stand to the tree. **SEE FIGURE 1 and DETAIL C.**

Lastly, run the tether rope (46) down the length of the ladder, wrap around the Silent LadderLocks (1 and 17) that are near the ladder ratchets (16) and loosely tie in place. **SEE FIGURE 1 and DETAIL C.** You are now ready to upright the ladder. Follow setup and use instructions on following pages.

**Note:** Model LD200 depicted varies from manual model but the strap system is the same.

STOP

READ AND UNDERSTAND THE FOLLOWING WARNINGS BEFORE SETUP AND USE

**! WARNING**

- ▲ Double check assembly steps to be certain you have correctly assembled this product.
- ▲ Study your new stand to become familiar with all of its features and design. At ground level, following provided use instructions, practice attaching stand to tree and removing stand from tree. Practice sitting, standing, and using this product before attaching overhead. Save these instructions for future reference. You must always use the provided Fall Arrest System (FAS) while using this product.
- ▲ **Always** use at least three (3) people to install or take down a ladder treestand. **Always** have two people stabilize the ladder before climbing to the platform the first time after every set-up.
- ▲ Be absolutely sure the tree blade(s) on stand and the stabilizer bar are contacting tree before climbing ladder.
- ▲ Stabilizer bar must always be correctly and securely attached to ladder and tree before climbing ladder.
- ▲ Make sure ladder bottom is firmly seated on dry, level ground. Attach your harness tether to the tree before securing the platform to the tree and stepping onto platform. Refer to the Full Body Harness instructions.
- ▲ **Never** ascend or descend ladder without straps/ropes securely holding ladder to tree and stabilizer bar securely attached. Failure to correctly perform these steps can cause the ladder to collapse/buckle-over backwards during the initial ascent to attach ratchet strap resulting in serious injury or death.
- ▲ **Always** lean forward as you climb and attach your harness to the tree before securing the platform to the tree with the provided ratchet straps.

**! WARNING**

- ▲ Bring ratchet strap(s) up with you in a pocket - **Do Not** carry in your hands!

**! WARNING**

- ▲ **Always** maintain three (3) points of contact when climbing a ladder treestand. Proper three-point contact means having either two feet with one hand or one foot with two hands on the step portion of the ladder or climbing aid at all times.
- ▲ **Always** wear the appropriate footwear when using a ladder treestand. A good non-slip safety boot is important to your personal safety. Be especially careful that boot laces do not get hooked on the stand or any of its components (tuck shoelaces into boots before climbing).
- ▲ **Never** stand on seat, it is designed for sitting only.
- ▲ **Do Not** allow excessive strap buildup in ratchet as this will prevent the ratchet teeth from engaging causing slippage.
- ▲ **Always** attach ratchet straps securely while using this product!
- ▲ If seat is removable, be certain it is securely attached when in use.
- ▲ Some models include a shooting rail. **Never** lean against, lean over, or sit on shooting rail. It is designed as a shooting rest only. **Always** be aware that the shooting rail can swing to one side or pivot up and down.
- ▲ Some models include a footrest, which is designed as a footrest only. **Never** stand on footrest! **Always** be fully aware of foot placement.
- ▲ Some models include a multi-piece stabilizer bar system. Be sure attachment hardware goes through all extension tubes of the stabilizer bar.

## SET UP AND USE INSTRUCTIONS




WATCH THE SET-UP AND USE VIDEO ONLINE AT  
[WWW.HUNTRIVERSEEDGE.COM](http://WWW.HUNTRIVERSEEDGE.COM)  
TO ASSIST WITH THE SET-UP OF YOUR TREESTAND

### ⚠ WARNING


- ▲ **Never** use a treestand on a dead, leaning, diseased or loose barked tree, or a utility pole. **Always** avoid electrical power lines.
- ▲ Bring ratchet strap(s) up with you in a pocket - **Do not** carry in your hands!

*During installation and removal of ladder treestands, you must always and properly use the included Full Body Harness (Fall Arrest System). Refer to the Full Body Harness instructions included with this product for proper use.*

1. Select a straight, healthy tree. Do Not attempt to install on a tree that is not healthy.
2. Place the assembled product lying on the ground in front of the tree with the bottom ladder section approximately five feet away from the base of the tree.  
**NOTE: Do not attach seat to platform assembly until after stand is completely upright and secured to tree.**
3. Position one person at bottom end of ladder. This person has to prevent the ladder end from tilting up and from skidding across the ground when platform end is lifted.
4. Position two people at the platform end of the ladder, lift the platform end and continue uprighting by walking toward bottom end of ladder while moving hands along ladder rails. Stand ladder up against chosen tree on dry, level ground. Use caution when ladder comes over center against the tree, as shown by arrow "A". **SEE FIGURE 2.**
5. Once elevated completely, carefully slide the base so that the sitting and standing platforms are parallel to the ground, as shown by arrow "B". **SEE FIGURE 2.**
6. Step back and look at the ladder top to see that both the lower platform tree blade and upper tree blade are contacting the tree. Adjust as needed so both of the tree blades are contacting the tree.
7. Step down hard on bottom step to push ladder legs into the ground, as shown by arrow "C". **SEE FIGURE 2.**
8. While two people hold the stand in place, the third person should complete the necessary steps on following pages to secure the stand to the tree.


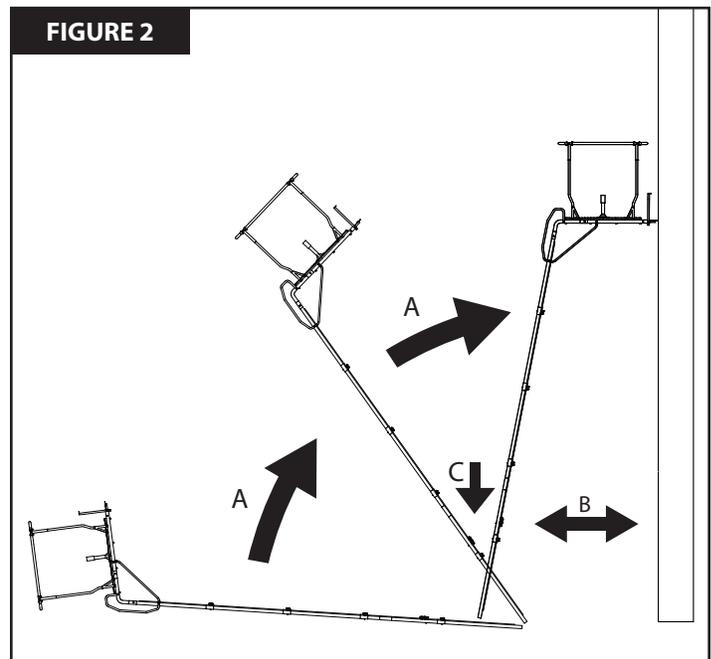


9. Begin by removing the long straps (48) from the ground level ratchets (16) and let them hang down on either side of the tree. **SEE FIGURE 3.**
10. Hook the large carabiner (50) to one of the long straps (48) that are hanging down near the tree. **SEE FIGURE 3. If the tree has branches between the ground and the top of the stand, proceed to the next step. If the tree is free of branches between the ground and the top of the stand, skip ahead to STEP 12.**

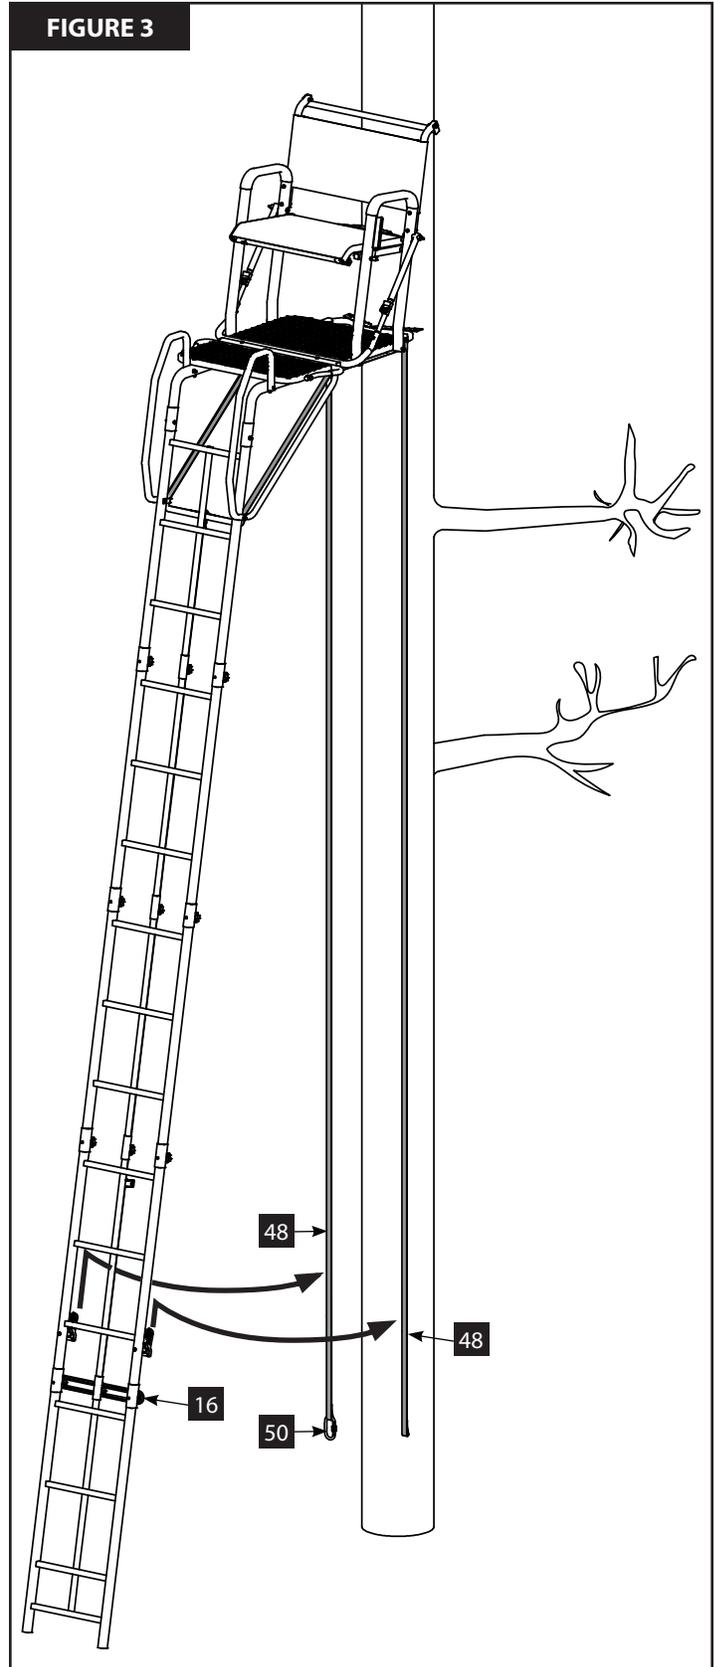

*Note: Model LD200 depicted varies from manual model but the strap system is the same.*

11. If the tree has branches between the ground and the top of the stand, before hooking the two long straps (48) together behind the tree with the large carabiner (50), you must first get both straps on the same side of all of the branches. To do so, simply use the telescoping stabilizer bar (33) to lift up and drop the strap that has the carabiner hooked to it over the branches.
- Hook the carabiner onto the end of the stabilizer bar as shown in **FIGURE 4**.
  - Then lift up and drop over each branch. The weight of the carabiner will drop the strap back down to ground level after each branch you drop it over.
  - Repeat dropping it over the branches until both straps are on the same side of all of the branches. **SEE FIGURE 5**. Then there will be a clear path for the straps and carabiner to rise up the back of the tree, all the way to the top of the stand.

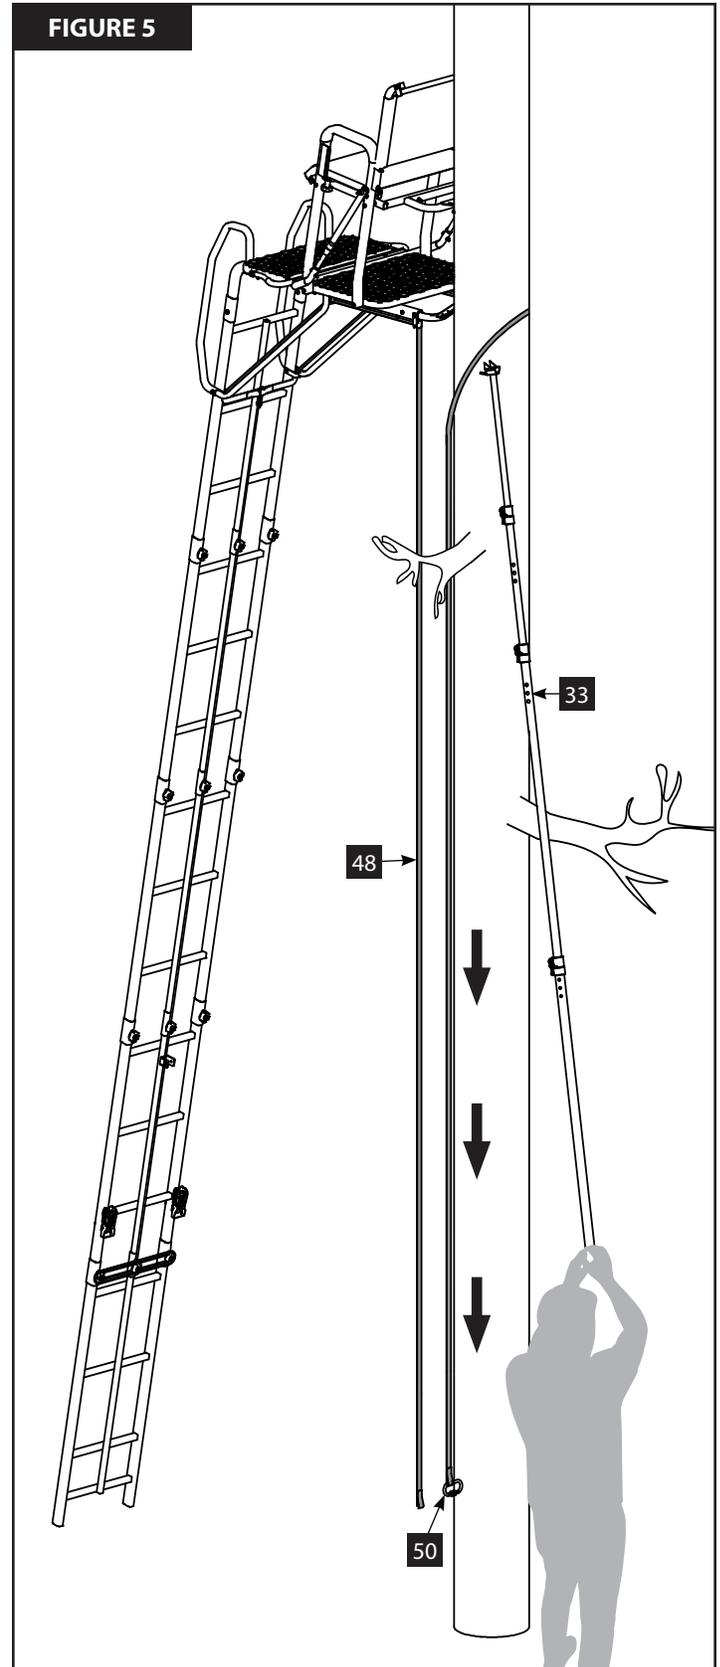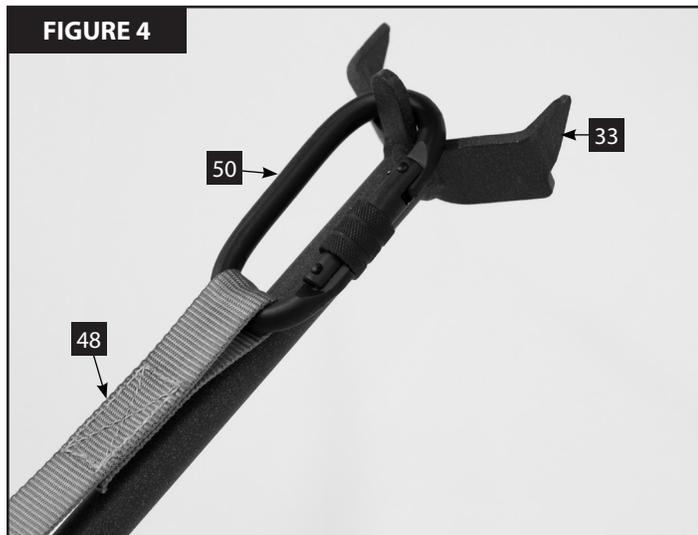

12. Hook the two long straps (48) together behind the tree with the large carabiner (50). **SEE FIGURE 5.** Be sure to lock the carabiner with the screw locking mechanism. **SEE FIGURES 6 A-C.**
13. Unwrap the tether rope (46) from the silent ladder knobs (1 and 17). Pull the rope down to raise the two long straps and carabiner up the back of the tree. **SEE FIGURE 7.** As the carabiner nears the top, you may have to use a back and forth "sawing" motion with the two straps so that the carabiner rises all the way up directly behind the bottom tree blade (14). The straps should be parallel with the platform of the stand. **SEE FIGURE 8.** If needed, you can use the telescoping stabilizer bar (33) to help raise the carabiner up.

**! WARNING**

**! DO NOT** use this product without the carabiner in the locked position. Failure to follow these instructions may result in serious injury or death!

**FIGURE 6-A**



1. Turn knob to unlock

**FIGURE 6-B**




2. Press open latch

**FIGURE 6-C**




2. Turn knob to lock

**FIGURE 8**



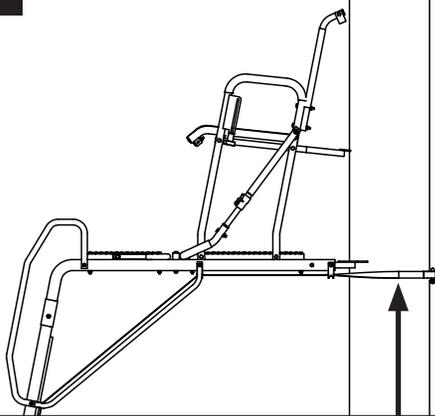


STRAPS AND CARABINER MUST BE STRAIGHT BEHIND TREE BLADE AND PARALLEL WITH THE PLATFORM

**FIGURE 7**

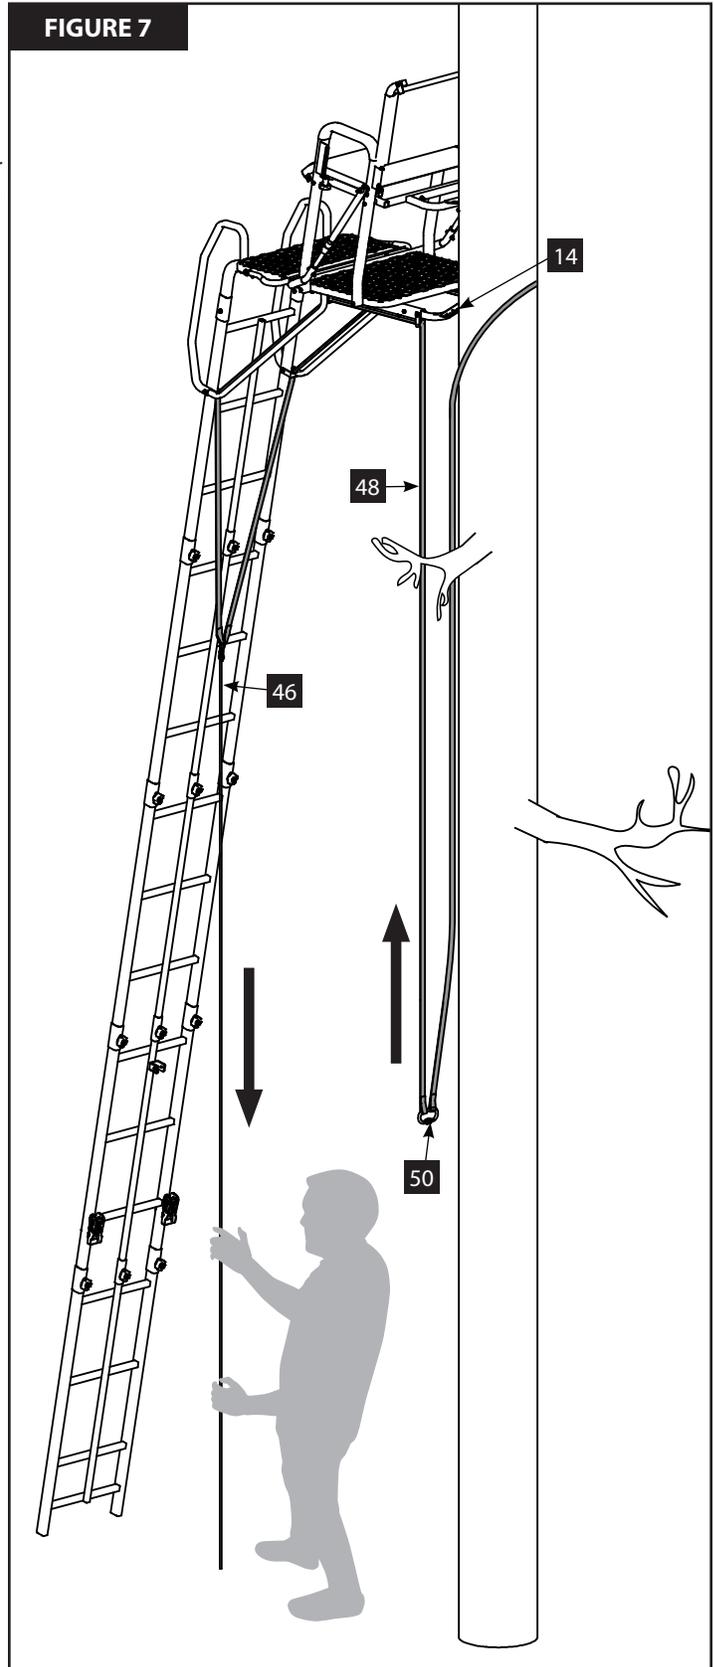

14. Once the straps (48) and carabiner (50) are all the way up the back of the tree, unhook the tether rope (46) from the two long straps (48) and set aside. The tether rope can later be used as a haul line to pull your gear up into the stand. Feed the straps down through the ladder ratchets (16) and ratchet a few cranks just to hold the straps in place. **SEE FIGURES 9 A-D** for proper use of ladder ratchets. **Do not fully ratchet the straps tight yet.**
15. Fully collapse the telescoping stabilizer bar (33) and install to the ladder using one wing bolt 1/4 X 2-1/4 in (36) and wing nut (34). **SEE FIGURE 10.** When the stabilizer bar is fully collapsed and the lever handles are aligned on the top, the three holes in the first three sections should line up.
16. Release the first clamp and extend only the bark-biter section of the stabilizer bar until it contacts the tree. Adjust the length of the stabilizer bar as needed and make sure it is parallel with the ground. Align the nearest hole and insert a wing bolt 1/4 x 1-3/4 in (35) and wing nut (34) and hand tighten to secure the length of the stabilizer bar. **SEE FIGURE 10.** Then attach the 8' ratchet strap (49) by forming a cinch knot around the stabilizer bar with both ends. **SEE FIGURE 11.** Wrap around the tree and ratchet tight.
17. Now that the stabilizer bar is installed, you can finish tightening the ground level ratchets (16) to secure the stand to the tree.
18. ***This ground level ladder-to-tree attachment will prevent the ladder from pulling away from the tree while ascending to the top for the final ratchet strap attachment. The same holds true when ladder removal is necessary. You are now ready to climb up and complete the final installation steps.***

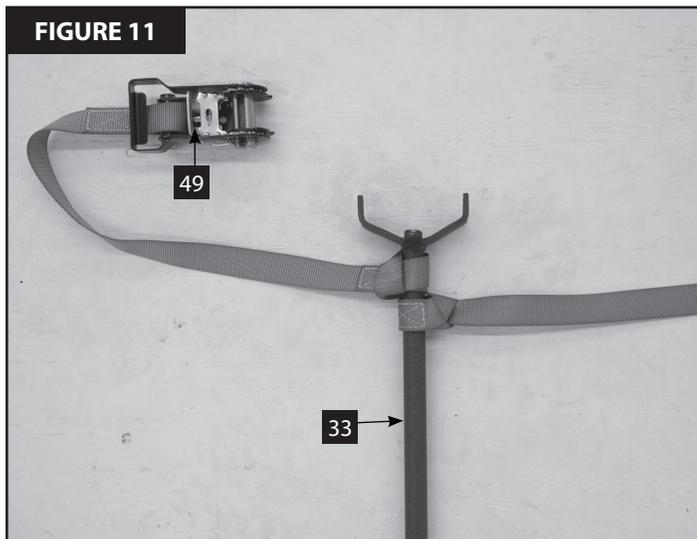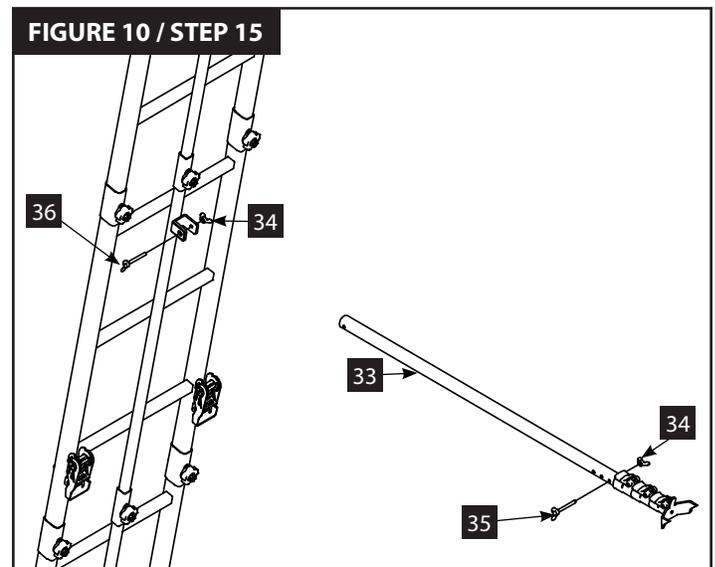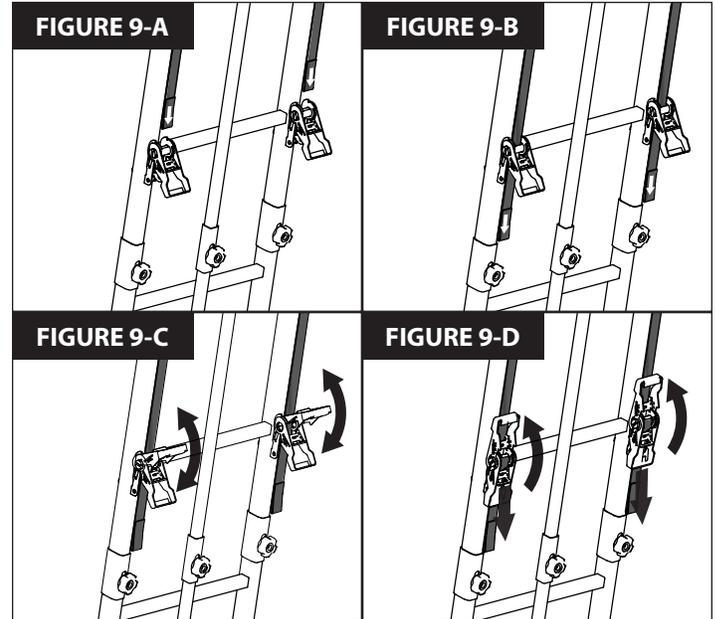

**INSTALLING THE RATCHET STRAPS (47)**

19. **Be certain ladder bottom is firmly seated on dry, level ground.** With two people securely holding the base of the ladder, use the three point contact climbing method to slowly climb the ladder and carefully keep a constant hand grip on the ladder at all times. Always lean forward, towards the tree, while climbing. **Attach your harness tether to the tree before securing the platform to the tree with the provided ratchet straps.** Refer to the Full Body Harness instructions included with this product.



**NOTE: Bring large ratchet straps up with you in a pocket. DO NOT carry in your hands!**


20. Once platform is reached and safety harness is secured to the tree, hook S-hook with long strap (47) through one of the holes provided in top tree blade. Feed the long strap through the center slot of ratcheting mechanism and back around through tightening lever. **SEE FIGURES 12 A-B & 13.**

21. Wrap the ratchet assembly around the tree and hook other S-hook through opposite hole on top tree blade. Pull tail of long strap until most of the slack is taken out. Be sure entire strap is even and at the same level all around tree. "Ratchet" tight to tree. This will securely attach only the top tree blade to the tree and prevent movement. **SEE FIGURES 12-C & 13.**


**NOTE: To release ratchet, simply pull the release lever and open tightening lever wide open (flat).** **SEE FIGURE 12-D.**

22. Repeat previous two steps for the bottom tree blade attachment. Place S-hook through holes provided on bottom tree blade.

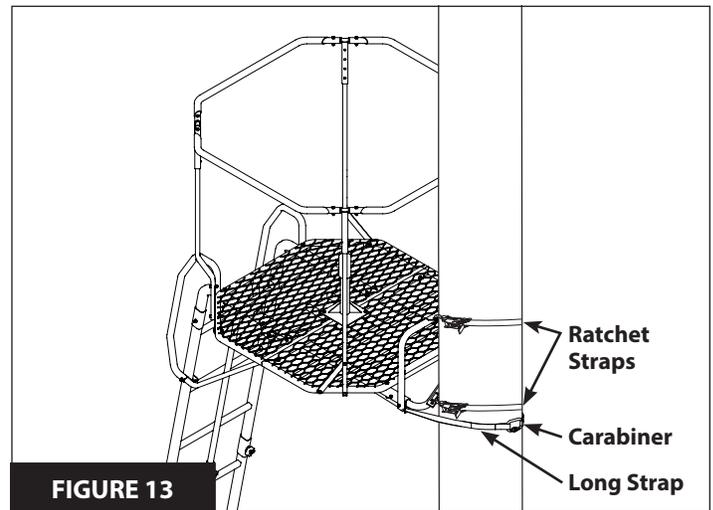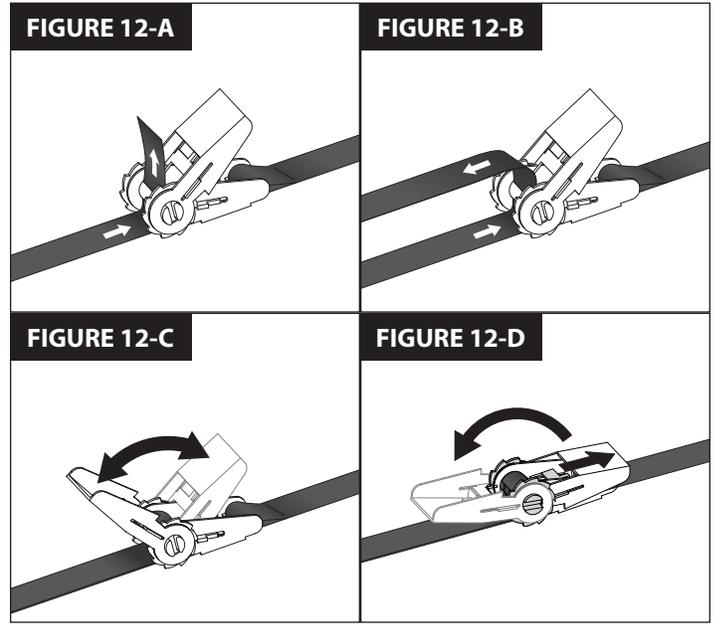


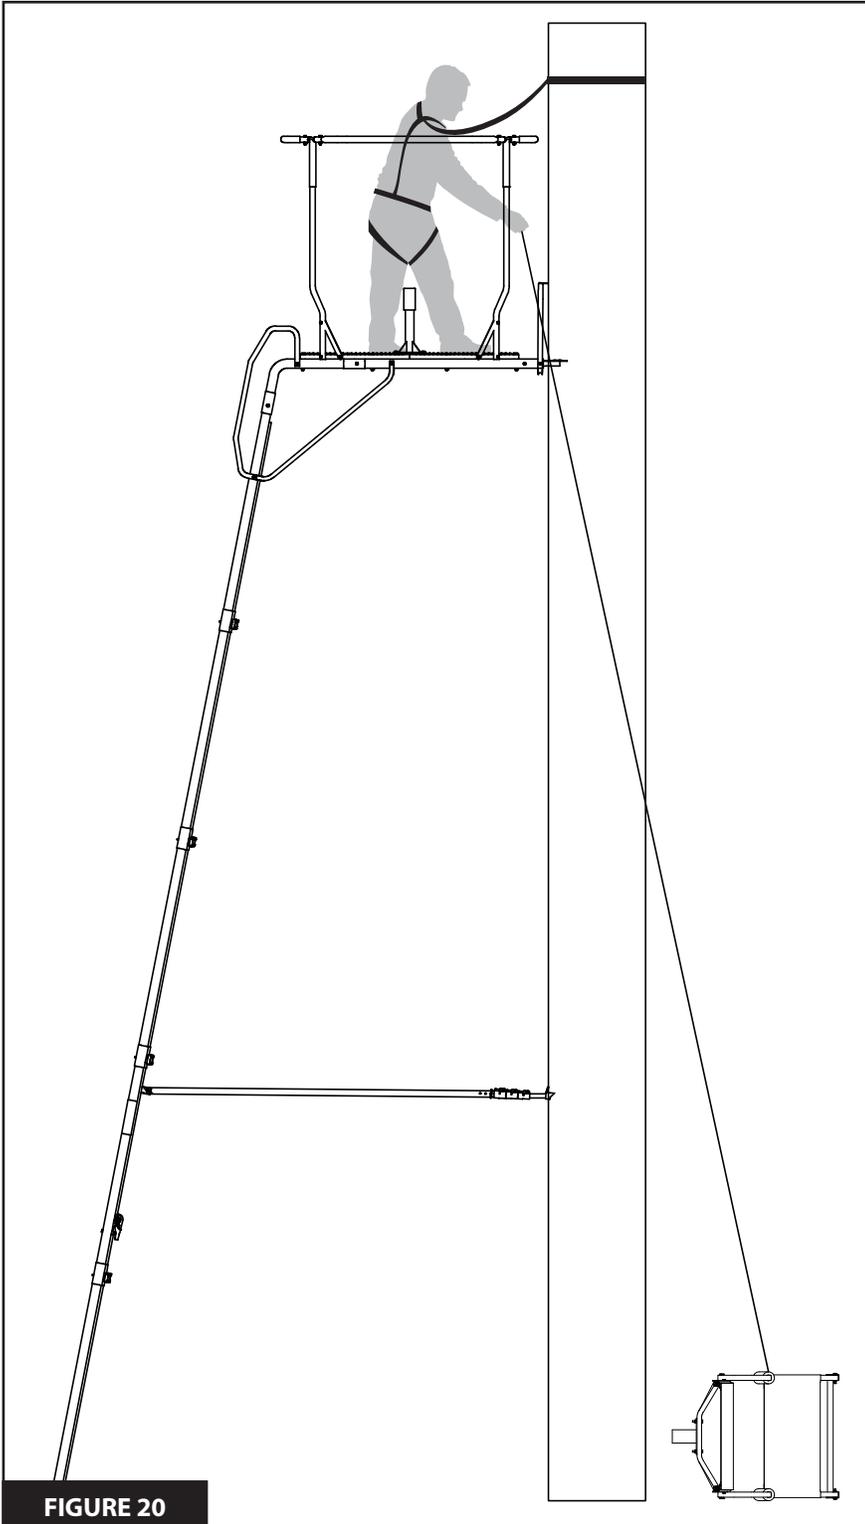


23. After both top and bottom ratchet straps are secured to the tree, use a haul line to pull the assembled seat up into the treestand. **SEE FIGURE 20.** Slide the seat onto the bottom seat post (3). **SEE FIGURE 20A.**
24. To take the ladder stand down, first check the security of the ground level ratchets (16) and stabilizer straps (48). First, with two people holding the bottom of the ladder, climb up, secure your safety harness to the tree and lower the seat with a haul line. Then, remove the two top ratchet straps (47). Then climb down and reverse the set-up and use instructions to complete the removal of the stand.

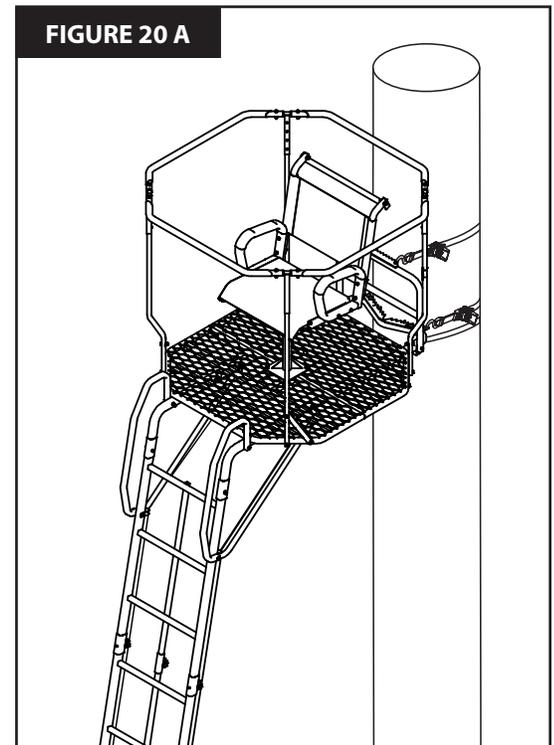


**FINISHED LADDER**

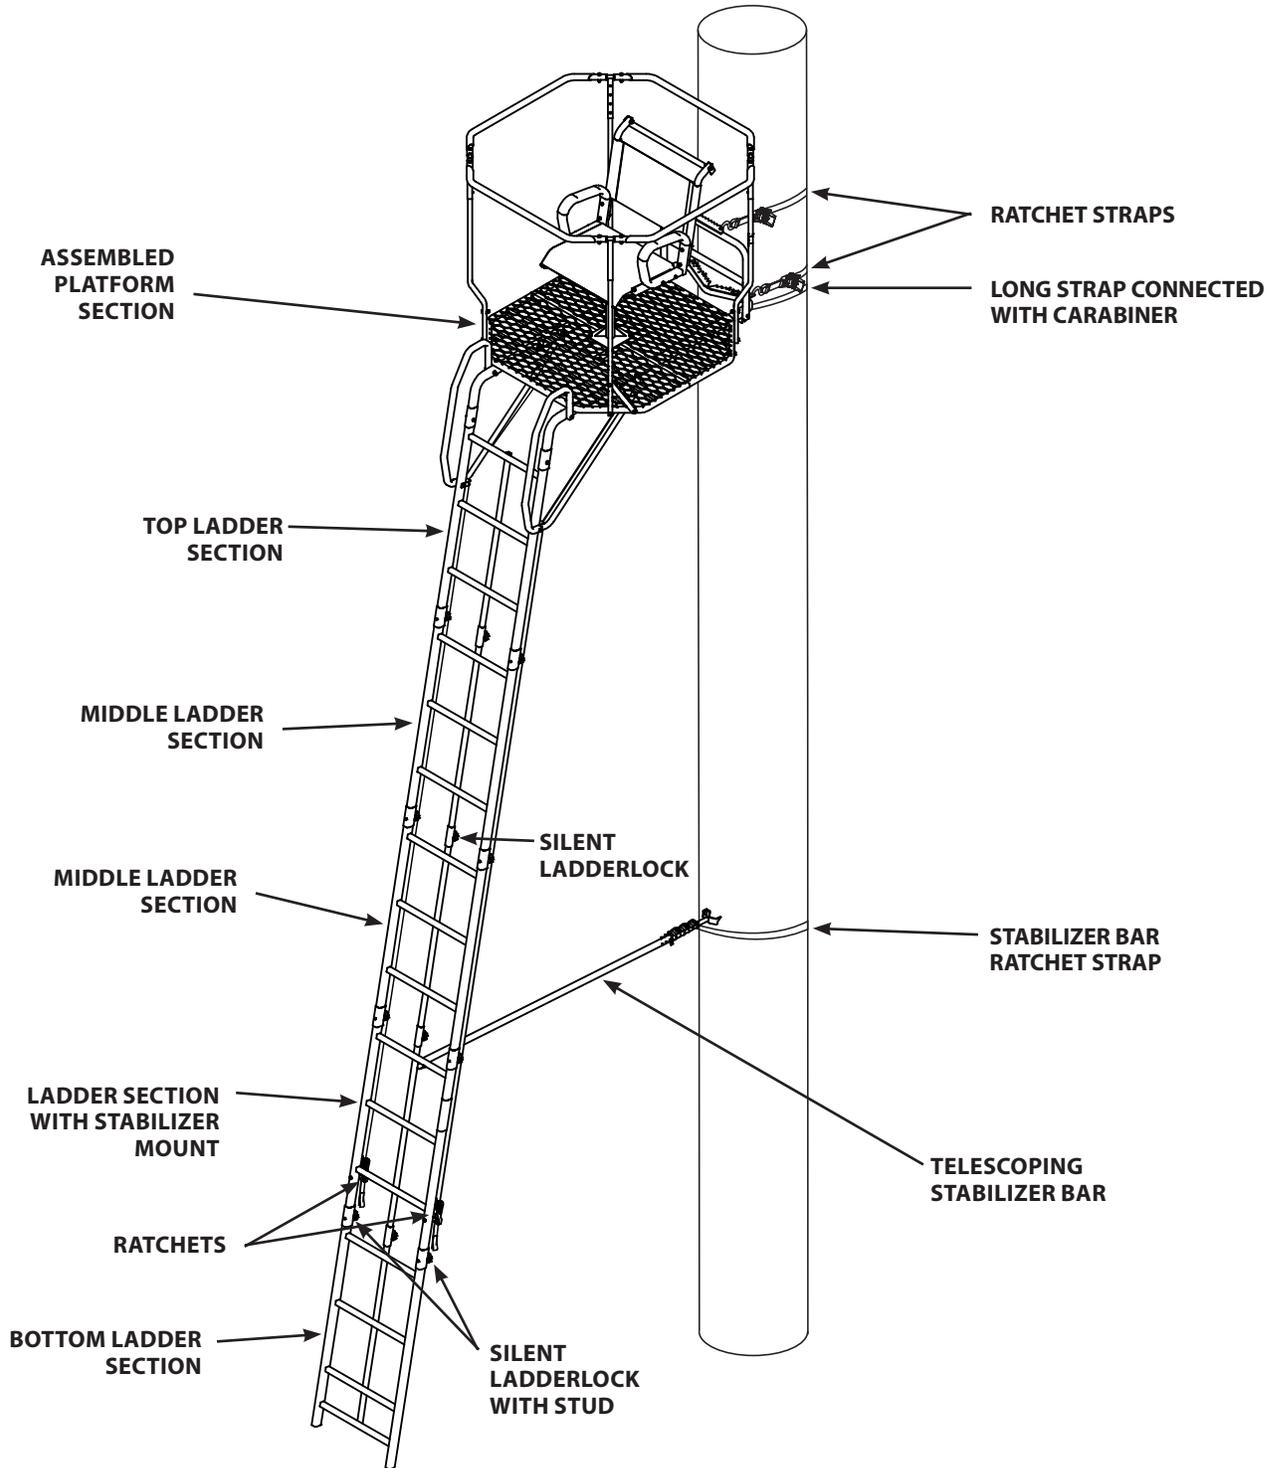

## ILLUSTRATED PARTS BREAKDOWN

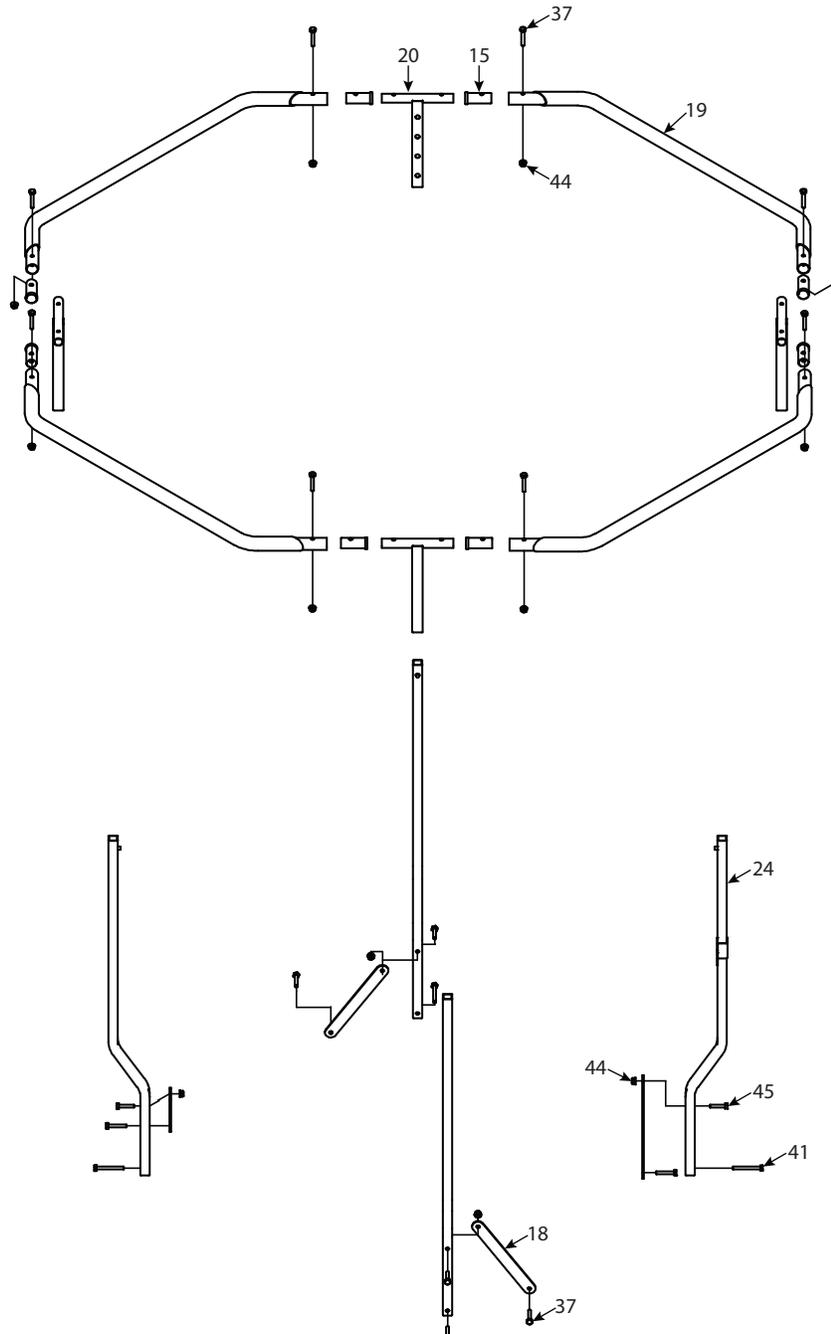

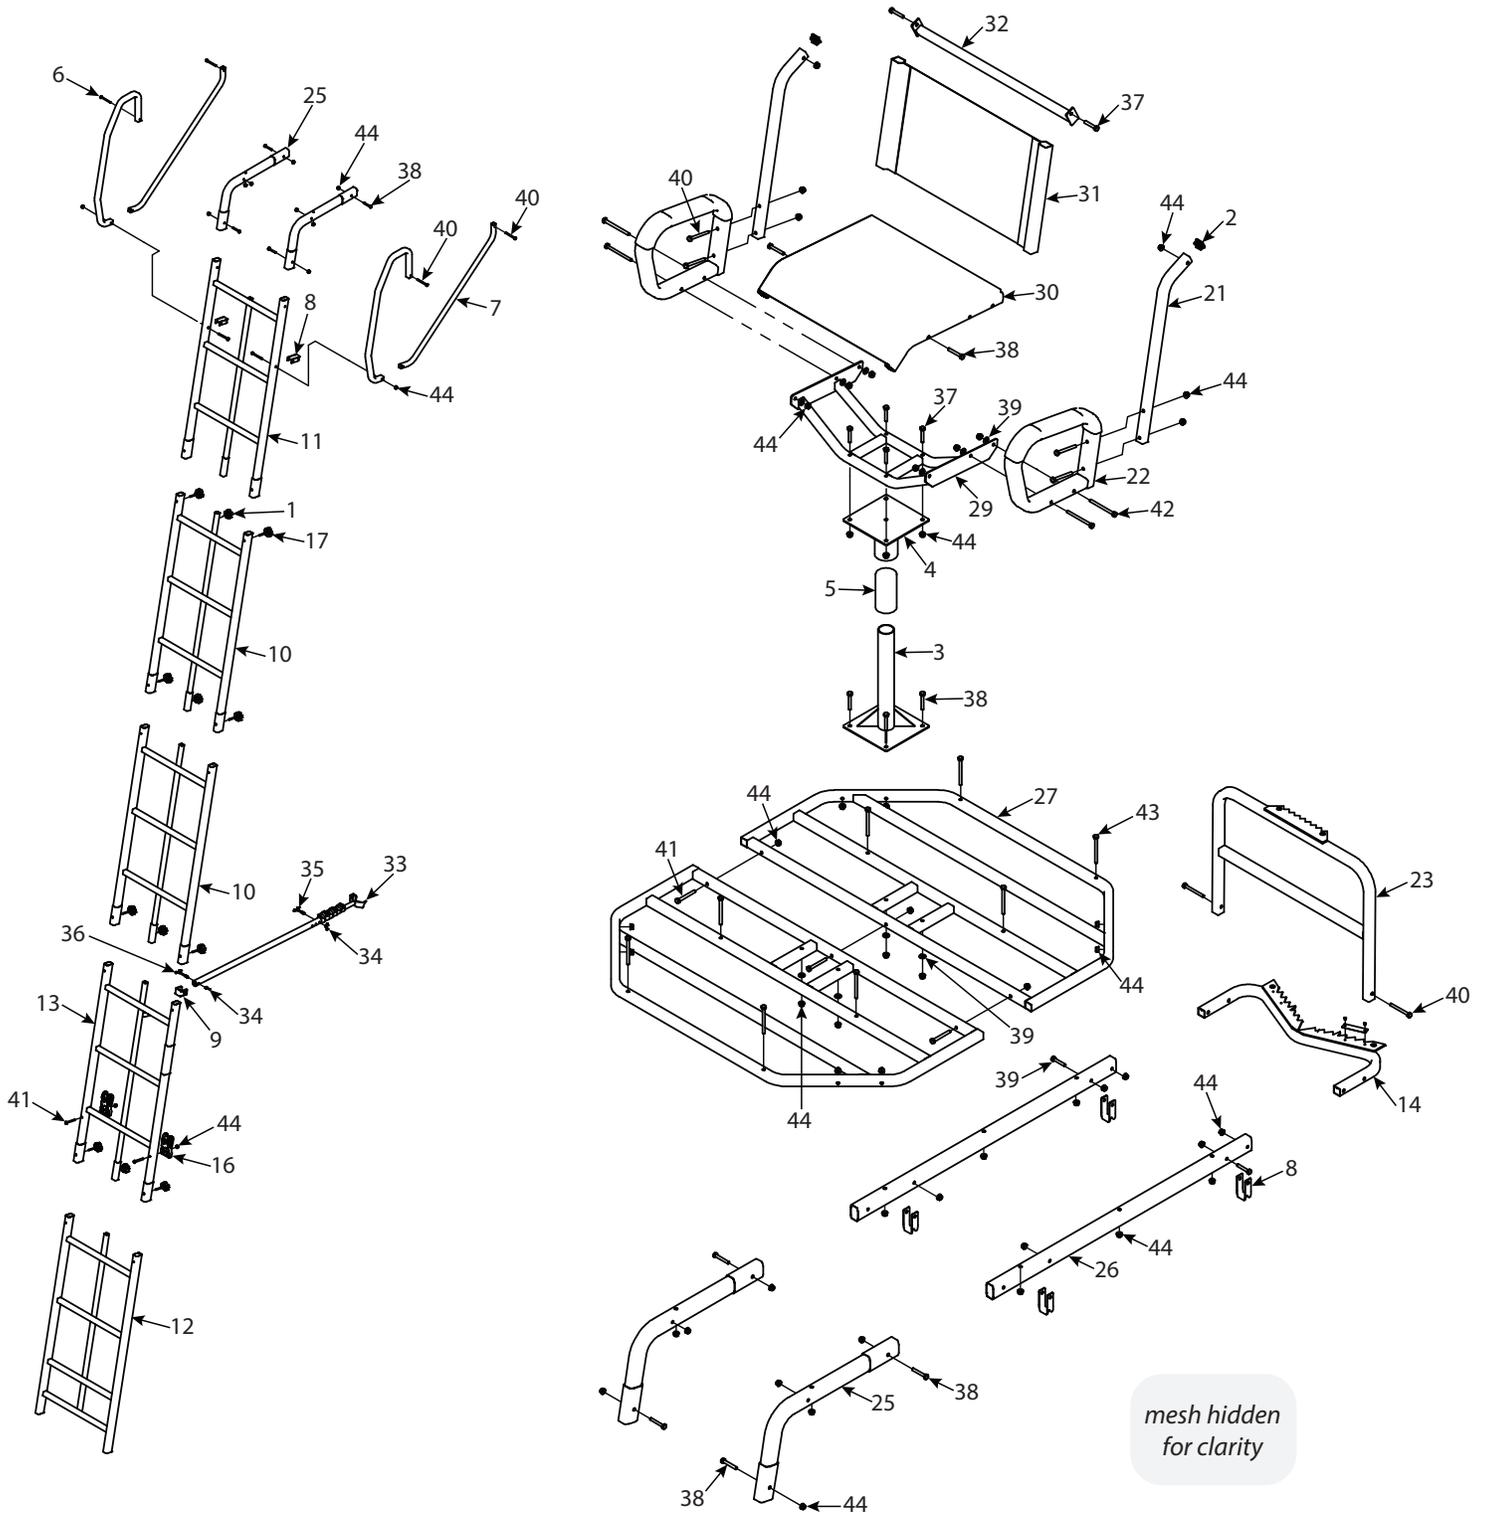

## PARTS LIST

ITEM #	PART #	DESCRIPTION	QTY.
1	23603	KNOB SILENT LADDER	4
2	29712	SQ PLUG 22 MM	2
3	34725	SEAT POST BOTTOM	1
4	34726	SEAT POST TOP	1
5	34737	BUSHING PLASTIC SWIVEL SEAT	1
6	35085	LADDER HAND RAIL	2
7	35086	PLATFORM BRACE	2
8	35129	STRAP GUIDE	6
9	35131	INSERT STABILIZER BAR MOUNT	1
10	35189	MIDDLE LADDER SECTION	2
11	35191	TOP LADDER SECTION	1
12	35193	BOTTOM LADDER SECTION	1
13	35195	LADDER SECTION WITH STABILIZER	1
14	35222	BOTTOM TREE BLADE	1
15	35374	INSERT SHOOTING RAIL	8
16	35715	LADDER RATCHET	2
17	36719	KNOB SILENT LADDER WITH STUD	8
18	42671	SUPPORT BRACE	4
19	42674	SHOOTING RAIL	4
20	42679	SHOOTING RAIL HUB	4
21	42680	BACKREST TUBE	2
22	42682	ARMREST WITH VINYL DIP	2
23	42684	TOP TREE BLADE	1
24	42691	VERTICAL SUPPORT	4
25	42796	J TUBE W/ POCKET	2

ITEM #	PART #	DESCRIPTION	QTY.
26	42797	J TUBE EXTENSION	2
27	42800	PLATFORM	2
28	42802	CURTAIN	1
29	42804	SEAT FRAME	1
30	42806	SEAT ASSEMBLY	1
31	42808	BACKREST	1
32	42810	BACKREST SPREADER	1
33	42844	STABILIZER BAR	1
34	48042B	WING NUT	2
35	48044B	WING BOLT 1/4 X 1-3/4 IN	1
36	48057B	WING BOLT 1/4 X 2-1/4 IN	1
37	48240B	BOLT 1/4 X 1-1/2 IN	20
38	48250B	BOLT 1/4 X 1-3/4 IN	10
39	48261B	WASHER 1/4 IN	10
40	48270B	BOLT 1/4 X 2-1/2 IN	12
41	48271B	BOLT 1/4 X 2-1/4 IN	9
42	48273B	BOLT 1/4 X 3-1/4 IN	4
43	48280B	BOLT 1/4 X 3 IN	8
44	48752B	NUT 1/4 IN	67
45	8909B	BOLT 1/4 X 1-1/4 IN	4
ITEMS BELOW NOT SHOWN			
46	30777	TETHER ROPE	1
47	35135	ASSEMBLY 8 FT RATCHET STRAP W/ S-HOOKS	2
48	35140	STABILIZER STRAP 21 FT	2
49	35159	RATCHET STRAP ASSEMBLY 8 FT	1
50	35743	LARGE CARABINER	1
51	40697	HARNESS	1

**NO EXTENSIONS AVAILABLE FOR THIS MODEL.  
NEVER MODIFY OR EXCEED ORIGINAL STATED USE HEIGHT!**



# **LOCKDOWN™**

***BIG, COMFORTABLE TREESTANDS***

by

**RIVERS**  **EDGE®**  
TREESTANDS

Ardisam, Inc.  
1730 Industrial Avenue,  
Cumberland, WI 54829

Phone: 800-345-6007  
Fax: 715-822-2124  
[www.huntriversedge.com](http://www.huntriversedge.com)

\*All weights, specifications and features are approximate and are subject to change without notice. Due to continuous product improvements, product images may not be exact. Warning labels in some product images may have been removed for photography purposes only. Props shown in photos not included. Some assembly may be required.