




JET SET 3-PERSON TENT

ASSEMBLY AND USE INSTRUCTIONS

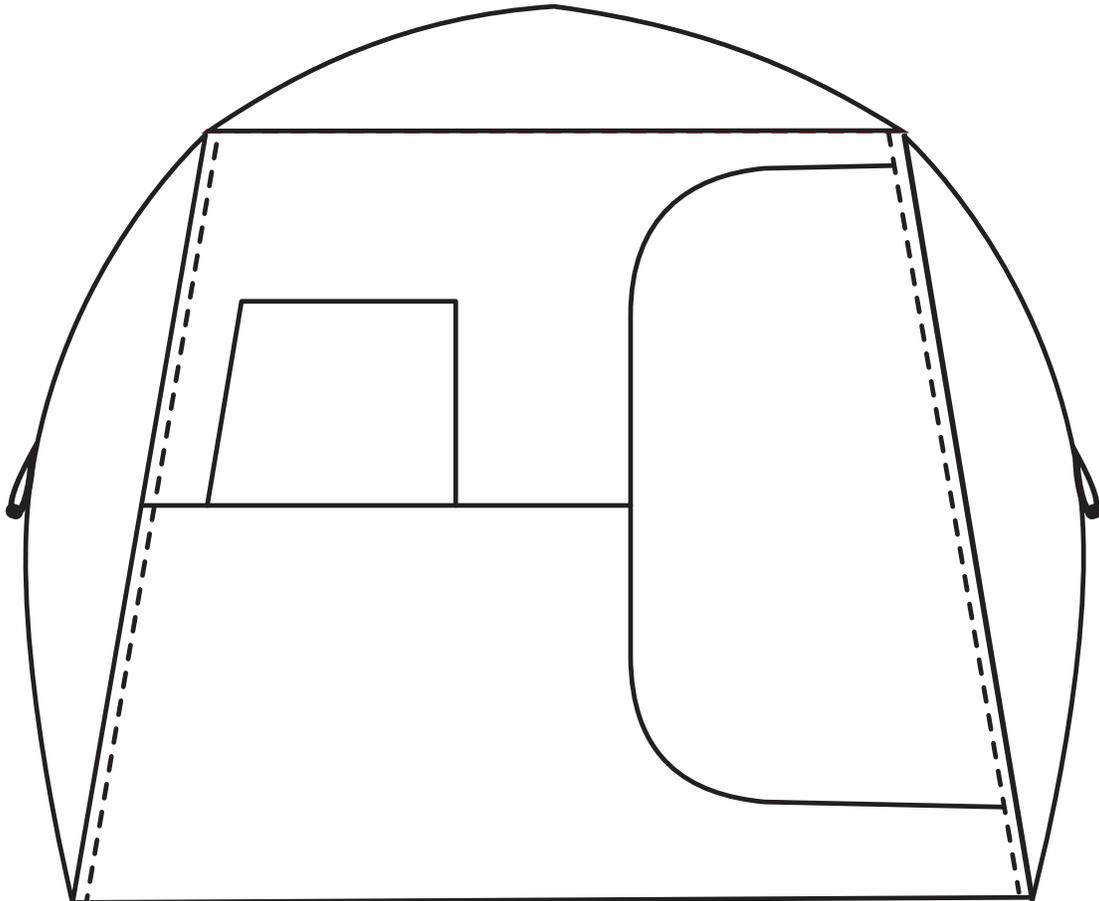

⚠ WARNING

READ AND UNDERSTAND ALL ASSEMBLY, INSPECTION, & USE INSTRUCTIONS PROVIDED BEFORE EACH USE. FAILURE TO FOLLOW INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

NEVER ALLOW CHILDREN TO PLAY IN THIS PRODUCT UNATTENDED.

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

THIS TENT IS MADE WITH FLAME RESISTANT FABRIC WHICH MEETS CPAI-84 SPECIFICATIONS. IT IS NOT FIREPROOF. THE FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE NOT THE TENT FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

THE USE OF ELECTRICAL DEVICES IS NOT RECOMMENDED INSIDE THE TENT.

BEFORE YOU BEGIN

- Locate a level site clear of all debris and sharp objects to prevent tears while setting up your tent.
- For easy set-up in windy conditions, make sure to position one of the corners of the tent into the wind.
- Do not set up your tent under any overhead obstructions in case of falling objects or lightning strikes in inclement weather.

SAFETY AND MAINTENANCE INSTRUCTIONS

Ultraviolet (UV) rays are an invisible part of sunlight. Prolonged exposure to UV rays can cause fibers to fade and degrade. This tent will last longer if you limit its exposure to UV rays. Pitch the tent in shade when possible and don't leave the tent up longer than necessary.


- Take down the tent when not in use to avoid unnecessary fading from outdoor elements. Fading or discoloring of fabric is not covered under your warranty.
- Take down the tent when not in use to avoid unnecessary damage.
- Use extra tie-down ropes during excessive winds.
- Never put the tent away wet. Always put away dry and clean to avoid mildew and other problems.

LONG TERM STORAGE

Make sure your tent is completely dry and clean before storing for long periods of time. Store your tent in a cool, dry place away from rodents.

SET-UP INSTRUCTIONS

1. Remove the tent from the carry bag. Remove the tie strap from around the tent. (**SEE FIGURE 1**)

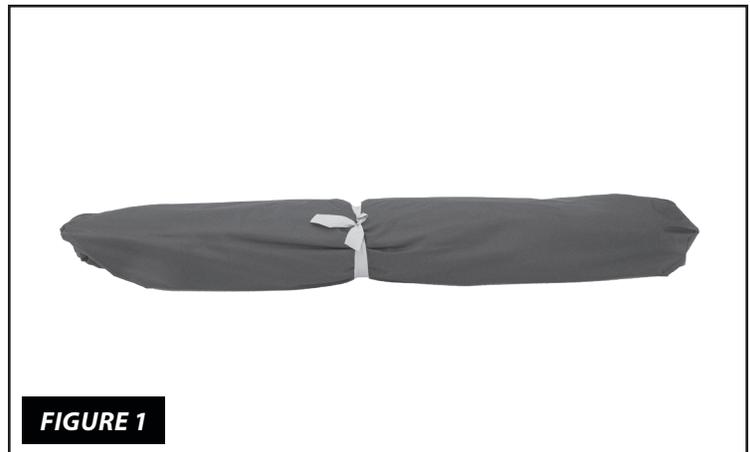

2. Lay the tent flat on the ground and check that there is no material twisted or overlapping the ends of any poles. **DO NOT** force tent when folding or unfolding. Watch for the entanglement of poles. (**SEE FIGURE 2**)

NOTE: When unfolding, check that the Territory Tents® logo and webbing loops are visible. This is the EXTERIOR of the tent. The poles and hubs are the INTERIOR of the tent.

NOTE: For easy set-up in windy conditions, make sure to position one of the corners of the tent into the wind, and stake that corner down through the webbing loop.



SET-UP INSTRUCTIONS CONT.

- Find the webbing loop handle located on the exterior of each hub, centered on each wall. Proceed to pull outward until the wall pops open. Do this to all **SIDE WALLS** first. (SEE FIGURE 3)

NOTE: For added assistance, grasp the top seam of the panel and place your foot on the bottom edge when popping open a side wall panel to help hold the tent in place.



FIGURE 3

- Once all walls are popped open, locate the zipper door, unzip both the outer door and mesh door, and enter the tent. Once inside, find the hub for the roof. Proceed to push up on the hub OR roof poles until it pops over center. (SEE FIGURE 4)

NOTE: This step should be done with caution as there is tension on the roof hub and pole assemblies.

OPTIONAL: To attach the overhead gear loft, insert toggles into the "O" rings on the inside of the roof.



FIGURE 4

- Locate the two corded poles in the carry bag. Assemble the pole by interlocking the poles together. Go back inside the tent and locate the small pockets on the top and bottom of the vertical seams of the door wall panel. Insert each pole into the top and bottom pockets. Then secure with the hook/loop strap in the center of the vertical seam. Do this on both sides of the door panel. (SEE FIGURE 5)
- At this time, the rainfly can be attached. See **ATTACHING THE RAINFLY** for further instruction.

NOTE: The tent is usable with or without the rain fly installed but will not protect from the rain/elements without.

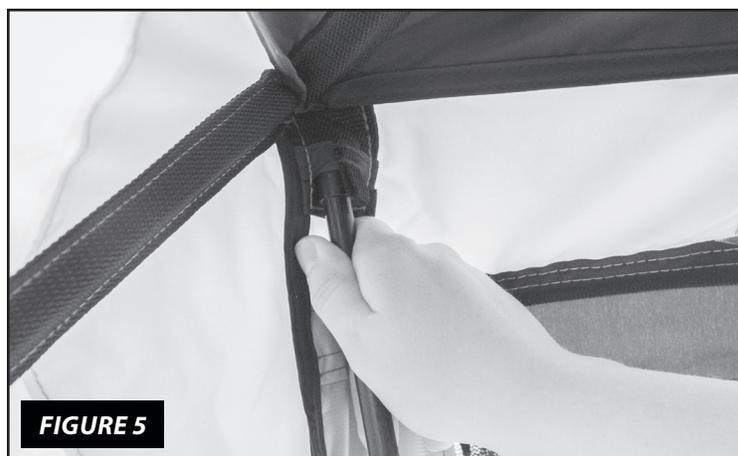


FIGURE 5

- Locate the ground stakes and tie-down ropes in the carry bag then fasten the stakes through each webbing loop. Hammer stakes through each webbing loop completely.
- Tie the guy line to each eye bolt, centered on each hub. (SEE FIGURE 6) Then loop the other end to a ground stake. Use the slider on the tie-down rope to achieve proper tension.

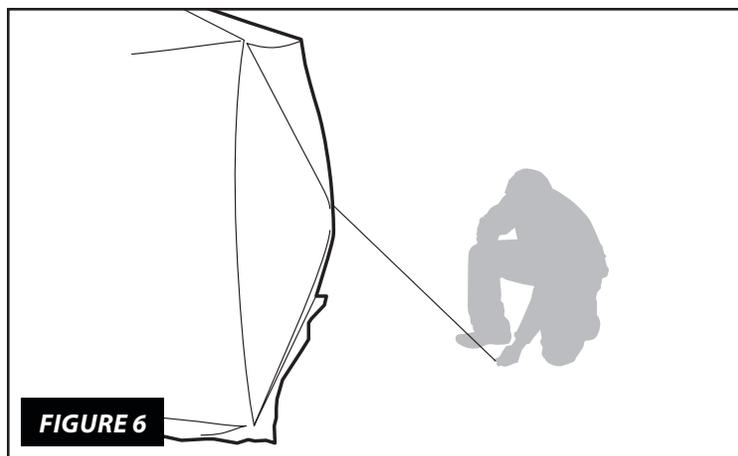


FIGURE 6

ATTACHING THE RAIN FLY


1. The tent must be free-standing with all walls and the roof popped out, and the corded poles inserted in the door wall panel. **(SEE FIGURE 7)**



2. Slide the rainfly over the tent roof. The Territory Tents logo should be above the door wall panel. **(SEE FIGURE 8)**



3. Starting at one corner, attach the plastic hooks on the corners of the rainfly onto the D rings on the corners of the tent. Repeat this for all four corners. **(SEE FIGURE 9)**

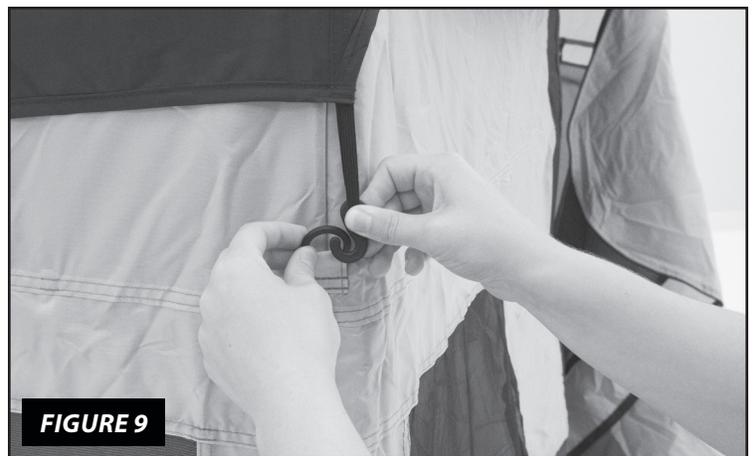

4. Fasten the plastic hooks on the sides of the rainfly to the eye bolt of the respective wall panel. **(SEE FIGURE 10)**



REMOVING THE RAIN FLY — MUST FOLLOW INSTRUCTIONS TO PREVENT POLE ENDS BENDING!

1. Unhook hooks from the corners and hubs.
2. Slide the rain fly off the tent.
3. Fold the rain fly and store in the carry bag.

NOTE: Make sure the rain fly is clean and dry before folding and storing.

TAKE-DOWN INSTRUCTIONS

1. Remove all stakes and tie-downs.
2. Remove the rainfly.
3. Remove the corded poles from both sides of the door wall panel.
4. If the gear loft is attached, partially remove it by unhooking two adjacent corners so that the roof hub can move freely.
5. Zip all the windows shut.
6. From inside the tent, gently pull the roof poles/hub down to collapse the roof. DO NOT stand directly underneath the hub when collapsing.
7. From outside the tent, zip the door shut to prevent tangling of poles. Push the center hub to collapse the wall. Do this to each wall.
8. Once all the hubs are collapsed, gather all corners of the tent and fold them together into a tight cone shape. Do not force the tent when folding and watch for entanglement of poles.
9. Take the provided packing strap and wrap it around the folded tent and secure for easier insertion into the carry bag. Place the folded tent back into the carry bag with the hubs inserted into the closed end of the bag.

WARRANTY

Territory Tents® is an outdoor brand created and sold by Ardisam, Inc.. Ardisam, Inc. warrants this Territory Tent® product under a one-year limited warranty to be free from defects in materials or workmanship or both for a period not exceeding twelve consecutive months from the date of original purchase by the first retail consumer or commercial end user. "Consumer use" means personal recreational use by a retail consumer. "Commercial use" or "commercial application" means all other uses, including use for commercial, income producing or rental purposes. Once a product has experienced commercial use, it shall thereafter be considered as a commercial use product for purposes of this warranty. This warranty does not cover tent tears, or bent poles due to use in high wind, inclement weather conditions, unattended use or uses other than those listed in the owner's manual. This warranty applies to the original owner that provides a proof of purchase of the shelter. The warranty is not transferable. The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the twelve month consecutive period thereafter. Any unit used in a commercial application is covered for a period of 90 days after purchase. For the warranty to be valid, the product must be registered by filling out the warranty card and it must be received by Ardisam, Inc., within 30 days of purchase. Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.



TERRITORY TENTS®, A DIVISION OF ARDISAM, INC.
1730 Industrial Avenue, Cumberland, WI 54829 | 800-345-6007