



# TERRITORY TENTS® EVENT TENT

## ASSEMBLY AND USE INSTRUCTIONS

### **WARNING**

**READ AND UNDERSTAND ALL ASSEMBLY, INSPECTION, & USE INSTRUCTIONS PROVIDED BEFORE EACH USE. FAILURE TO FOLLOW INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.**

**NEVER ALLOW CHILDREN TO PLAY IN THIS PRODUCT UNATTENDED.**

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**

**THIS TENT IS MADE WITH FLAME RESISTANT FABRIC WHICH MEETS CPAI-84 SPECIFICATIONS. IT IS NOT FIREPROOF. THE FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE NOT THE TENT FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.**

**THE USE OF ELECTRICAL DEVICES IS NOT RECOMMENDED INSIDE THE TENT.**

### **WARNING**

**THE SCREEN TENT WILL COME OUT OF THE BAG APPEARING INSIDE OUT, THIS IS NORMAL. YOU MUST UNFOLD THE SCREEN TENT PER THE INSTRUCTIONS TO AVOID SETTING IT UP INCORRECTLY. WHEN SET UP PROPERLY, THE POLES/Framework OF THE SCREEN TENT SHOULD BE ON THE INSIDE OF THE SCREEN TENT.**

### **BEFORE YOU BEGIN**

- Locate a level site clear of all debris and sharp objects to prevent tears while setting up your tent.
- For easy set-up in windy conditions, make sure to position one of the corners of the tent into the wind.
- Do not set up your tent under any overhead obstructions in case of falling objects or lightning strikes in inclement weather.

### **SAFETY AND MAINTENANCE INSTRUCTIONS**

Ultraviolet (UV) rays are an invisible part of sunlight. Prolonged exposure to UV rays can cause fibers to fade and degrade. This screen tent will last longer if you limit its exposure to UV rays. Pitch the screen tent in shade when possible and don't leave the screen tent up longer than necessary.

- Take down the screen tent when not in use to avoid unnecessary fading from outdoor elements. Fading or discoloring of fabric is not covered under your warranty.
- Take down the screen tent when not in use to avoid unnecessary damage.
- Use extra tie-down ropes during excessive winds.
- Never put the screen tent away wet. Always put away dry and clean to avoid mildew and other problems.

### **LONG TERM STORAGE**

Make sure your screen tent is completely dry and clean before storing for long periods of time. Store your screen tent in a cool, dry place away from rodents.

### **WARRANTY**

Territory Tents® is an outdoor brand created and by sold Ardisam, Inc.. Ardisam, Inc. warrants this Territory Tent® product under a one-year limited warranty to be free from defects in materials or workmanship or both for a period not exceeding twelve consecutive months from the date of original purchase by the first retail consumer or commercial end user. "Consumer use" means personal recreational use by a retail consumer. "Commercial use" or "commercial application" means all other uses, including use for commercial, income producing or rental purposes. Once a product has experienced commercial use, it shall thereafter be considered as a commercial use product for purposes of this warranty. This warranty does not cover tent tears, or bent poles due to use in high wind, inclement weather conditions, unattended use or uses other than those listed in the owner's manual. This warranty applies to the original owner that provides a proof of purchase of the shelter. The warranty is not transferable. The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the twelve month consecutive period thereafter. Any unit used in a commercial application is covered for a period of 90 days after purchase. For the warranty to be valid, the product must be registered by filling out the warranty card and it must be received by Ardisam, Inc., within 30 days of purchase. Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.

### **TERRITORY TENTS®, A DIVISION OF ARDISAM, INC.**

1730 INDUSTRIAL AVENUE, CUMBERLAND, WI 54829 | 800-345-6007 | PAT. [WWW.ARDISAM.COM/PATENTS](http://WWW.ARDISAM.COM/PATENTS)

## SET UP INSTRUCTIONS

1. Remove the screen tent from the carrying bag. Stand the screen tent up with the hub on the ground. Remove the packing strap from around the top of the screen tent. **(SEE FIGURE 1)**
2. Release the screen tent until it is unfolded and the roof is exposed. **DO NOT** pop roof up yet. **(SEE FIGURE 2)**  
*NOTE: When unfolding, check that the roof is visible and locate the webbing loops located in center of wall panel. This is the **OUTSIDE** portion of the screen tent. The poles and hubs are the **INTERIOR** of the screen tent.*
3. Find the webbing loop handle located on the exterior of each hub, centered on each wall (and roof). Proceed to pull outward until the wall pops open. Do this to all **SIDE WALLS** first. **(SEE FIGURE 3)**  
*NOTE: For added assistance, grasp the top seam of the panel and place your foot on the bottom edge when popping open a side wall panel to help hold the screen tent in place.*
4. Once all walls are popped open, locate the zippered door, and enter the screen tent. Proceed to push up on the hub OR roof poles until it pops over center. **(SEE FIGURE 4)**
5. Locate the two short corded poles in the carry bag. Assemble the pole by interlocking the poles together. Go back inside the screen tent and locate the small pockets on the top and bottom of the vertical seams next to the door. Insert each pole into the top and bottom pockets. Then secure with the hook/loop strap in the center of the vertical seam. Do this on both sides of the door.  
Next, locate the long corded pole in the duffle bag. Assemble the pole by interlocking the poles together. Go back inside the screen tent and locate the two pockets on either side above the door. Insert each end into the pockets and secure with hook/loop strap centered above the door. **(SEE FIGURE 5)**
6. Locate the ground stakes and ropes in the carry bag and fasten the stakes through the webbing loops located at each outer corner. Hammer stakes through each webbing loop completely. **(SEE FIGURE 6)**
7. Tie a rope to each eye-bolt, centered on each hub. Then tie the other end to a ground stake. Use the slider on the rope to achieve proper tension.

## TAKE DOWN INSTRUCTIONS

1. Remove the three corded poles from the door side.
2. Undo all stakes and tie-down ropes and remove any wind panels if they are attached.
3. From the inside the screen tent, gently pull the roof poles/hub down to collapse the roof. **DO NOT** stand directly underneath the hub when collapsing.  
*NOTE: Always start the take-down process by collapsing the roof first.*
4. From the outside, zip the door shut to prevent tangling of poles. Push the pole/wall near the center hub to collapse each wall. Do this to all of the walls.
5. Once all hubs are collapsed, gather all corners of the screen tent and fold together into a tight cone shape. Do not force the screen tent when folding and watch for entanglement of poles.
6. Take the provided strap and wrap it around the folded screen tent to allow for easier insertion into the carry bag. Place the folded screen tent back into the carry bag with the hubs always towards the closed end of the bag. Place the stakes and tie-down ropes into the bag as well.

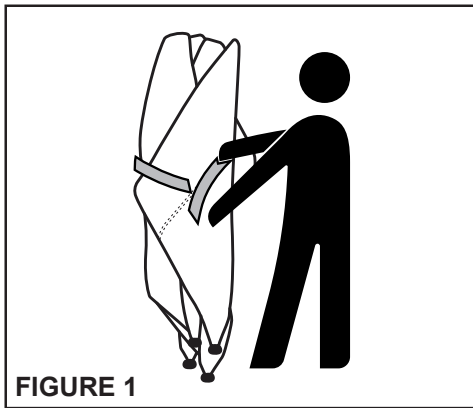 


FIGURE 1

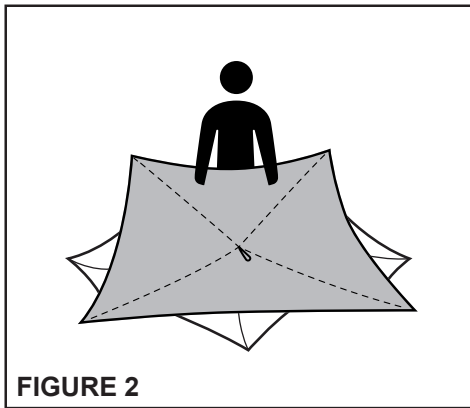 


FIGURE 2

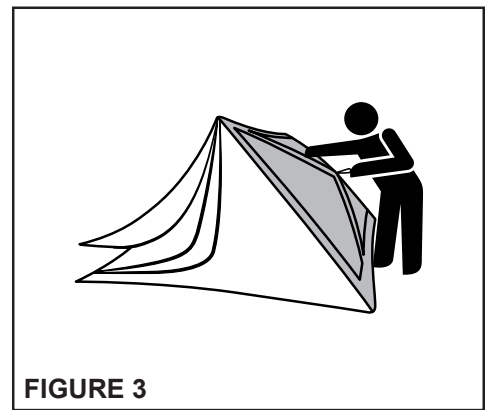 


FIGURE 3

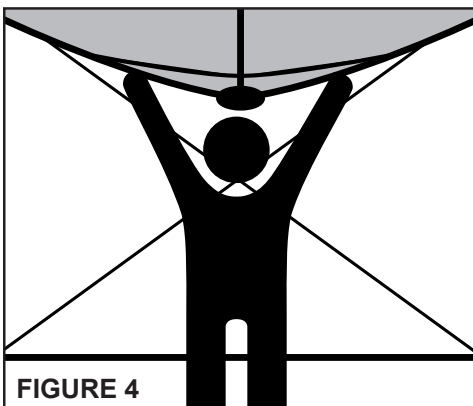 


FIGURE 4

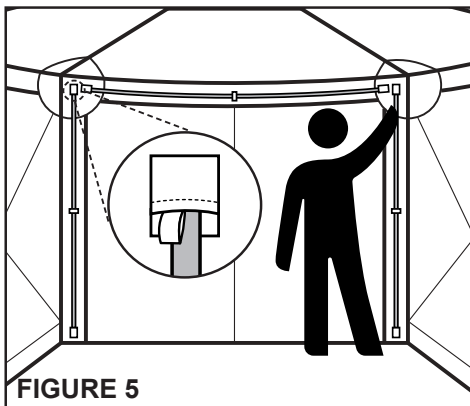 


FIGURE 5

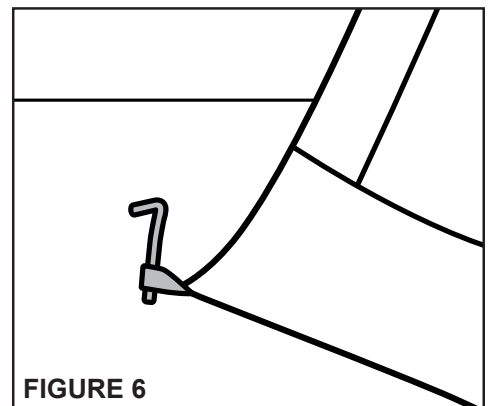 


FIGURE 6