 




Congratulations on your Guide Gear® purchase.

Enjoy your new Guide Gear® item with confidence, knowing it has been designed and built to deliver dependable quality and performance at an exceptional value.

Item #744778 GUIDE GEAR® 8-PERSON HUB CAMPING TENT

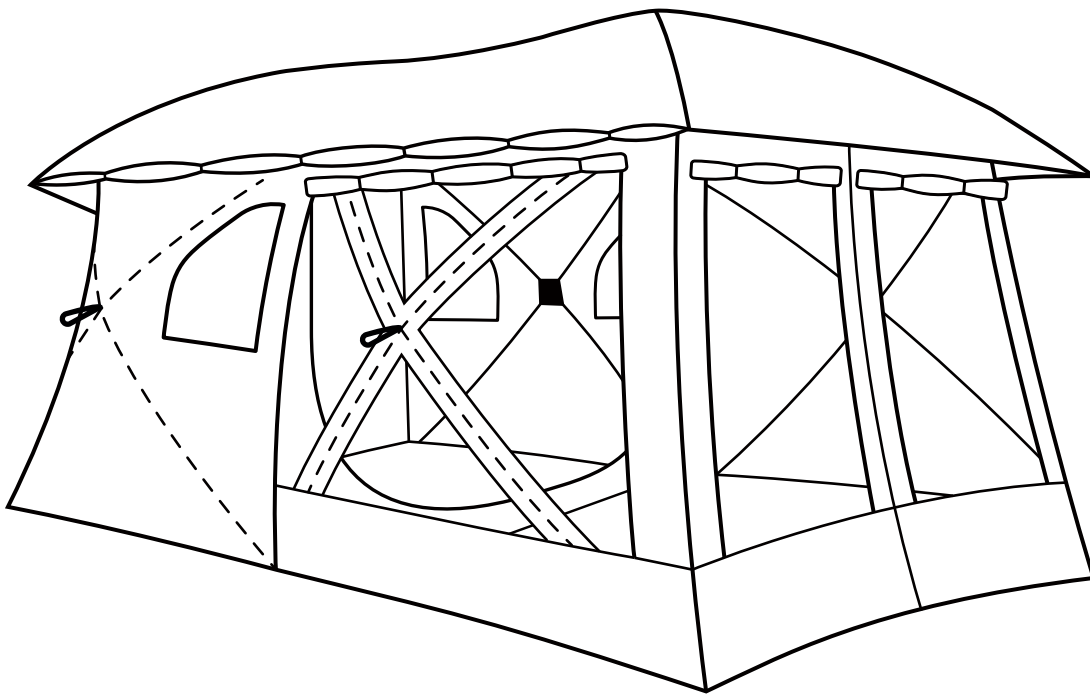

For assistance with your product, please contact Sportsman's Guide customer service at 1-800-888-3006 or go to sportsmansguide.com/customerservice/contactus



FOR YOUR SAFETY, BE SURE TO READ ALL INSTRUCTIONS AND WARNINGS CAREFULLY.

UNDERSTANDING THE FOLLOWING ALL INCLUDED INFORMATION WILL HELP REDUCE THE RISK OF DAMAGE OR INJURY AND HELP ENSURE AN ENJOYABLE TENTING EXPERIENCE.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNINGS

THIS TENT IS NOT FIREPROOF. KEEP AWAY FROM ALL SOURCES OF OPEN FLAME OR HIGH HEAT. THE FLAME RESISTANT FABRIC MEETS THE REQUIREMENTS OF CPAI-84 BUT IT WILL BURN IF LEFT IN CONTACT WITH OPEN FLAME OR EXTREME HEAT. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

NEVER allow children to handle any part of the tent without close adult supervision. Tent components such as stakes are dangerous.

NEVER allow children in or around the tent without close adult supervision.

NEVER allow the material to cover your face. It can cause suffocation and death.

NEVER use excessive force on the poles or any component of the tent or damage may result.

ALWAYS check for surrounding hazards when picking the tent site. Beware of possible falling rocks and tree limbs, lightning strikes, flash floods, strong winds and other natural hazards which may cause injury or damage.

ALWAYS anchor your tent properly to reduce the risk of damage to the tent or injury to occupants.

NEVER use candles or fuel-burning devices such as lanterns, heaters, cooking stoves, etc. in the tent. Their use poses a fire hazard and can result in asphyxiation and carbon monoxide poisoning, both of which can lead to serious, permanent injury and death.

NEVER spray the tent with insecticides or insect repellents. They can cause damage to the tent materials.

Avoid leaving the tent outdoors for a prolonged period of time. Prolonged exposure to sunlight may cause the fabric to fade and degrade.

The warnings, cautions, and instructions in this manual cannot cover all possible conditions or situations that could occur. Exercise common sense and caution when assembling/using this product.

HELPFUL INFORMATION

Familiarize yourself with all the tent components and fully assemble your tent at least once before the first adventure.

The provided stakes are intended for firm soil conditions. Larger stakes with more holding power are recommended for pitching on soft or sandy ground.

Set up the tent annually and ensure all components are accounted for and in good condition. Replace any damaged components before actual use.

Pitch the tent in an area free of sharp objects like rocks and sticks that could damage or puncture the tent floor. Using a ground cloth under the tent is recommended. Make sure the ground cloth is smaller than the tent floor. This will help prevent water from pooling between the ground cloth and tent floor.

Choose a camp site that will drain well in the event that it rains.

Make sure all the fabric ties, clips and or hooks are secured to the poles for the proper support of accessories.

Insert stakes at a 45° angle with the tops facing away from the center of the tent.

When possible, open windows and doors for increased ventilation to control condensation that may form on the inner tent surface.

Know the rules and regulations of the area where you intend to camp. Research the area for hazards. Prepare for any possible weather conditions. Be aware of emergency protocol.

Be considerate of wildlife and fellow campers. Remember to clean up your site and dispose of waste properly.

Before take-down, sweep debris from the interior of the tent using a soft bristled broom.

Brush off dirt and debris with a soft-bristled brush or cloth.

Do not scrub the tent fabric, as you may damage the water-repellent properties. Gently clean soiled areas of the tent using a soft cloth, warm water and mild, non-detergent soap if needed. Rinse thoroughly.

To remove tent stakes, use a hammer or stake puller. Do not remove stakes by pulling on the tent fabric. This will cause damage to the tent.

ALWAYS make sure your tent is completely dry before storing.

Store in a cool, dry location away from direct sunlight.

SET UP

1. Remove the tent from the carry bag and remove the tie strap from around the tent.
2. Lay the tent flat on the ground and check that there is no material twisted or overlapping the ends of any poles. **DO NOT** force tent when folding or unfolding. Watch for the entanglement of poles. (SEE FIGURE 1)

NOTE: In windy conditions (2 people recommended), position one corner of the tent into the wind and stake down that corner. Pop up and stake out each wall hub as you go to help keep the tent from blowing down. Adjust tension as needed once tent is fully set up.

3. Find the webbing loop handle located on the exterior of each hub, centered on each wall. Proceed to pull outward until the wall pops open. Do this to all **SIDE WALLS** first. (SEE FIGURE 2)

NOTE: For added assistance, grasp the top seam of the panel and place your foot on the bottom edge when popping open a side wall panel to help hold the tent in place.

4. To attach the rain fly, the tent must be free standing with all five (5) walls popped out and the **ROOF COLLAPSED**. (SEE FIGURE 3)

NOTE: It's important that the roof is collapsed to prevent bending of pole ends.







5. Slide the rain fly loosely over the tent roof. The short connecting poles should be on the underside of the rain fly. Starting at one corner, insert the male end of the short poles attached to the rain fly into the female end of the roof pole on each tent corner. Repeat this for all four corners. (SEE FIGURE 4)

NOTE: Make sure that your rain fly is oriented so that the side without the plastic hook is above the front door and the side with the single plastic hook is above the back entrance with D-door.




6. Enter the tent and push up to pop up the roof panels. (SEE FIGURE 5)
7. Locate the two long corded poles and assemble by interlocking the two ends together. Go back inside the tent and locate the small pockets on the top and bottom of the seams alongside the door. Position each pole vertically, inserting each end in the top and bottom pockets, then secure with the hook/loop strap in the center of the vertical seam. Do this on both sides of the door.

Locate the shorter corded pole and assemble by interlocking the two ends together. Go back inside the tent and locate the two pockets on either side above the door. Insert each end into the pockets and secure with hook/loop strap centered above the door. (SEE FIGURE 6)

8. Outside the tent, fasten the plastic hooks to the eye bolt of the respective wall panel.
9. Locate the ground stakes and tie-down ropes in the carry bag then fasten the stakes through each webbing loop. Hammer stakes through each webbing loop completely.
10. Tie the rope to each eye bolt, centered on each hub. Then loop the other end to a ground stake. Use the slider on the tie-down rope to achieve proper tension.

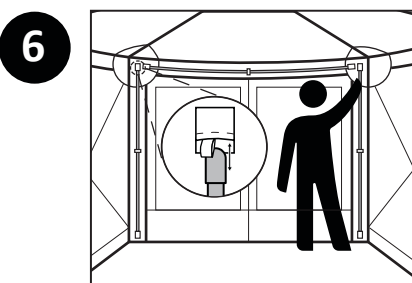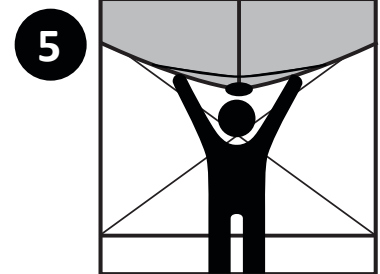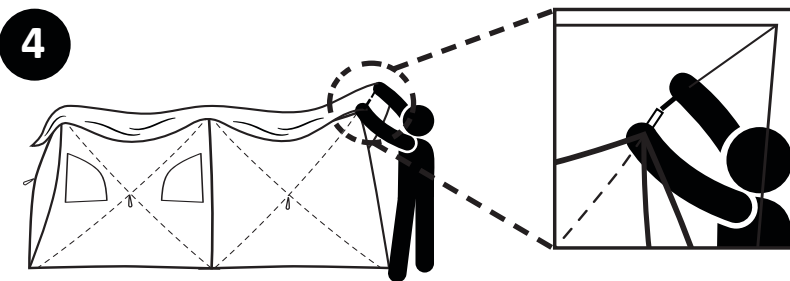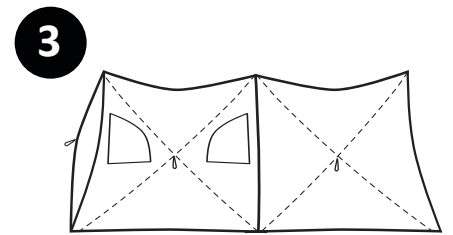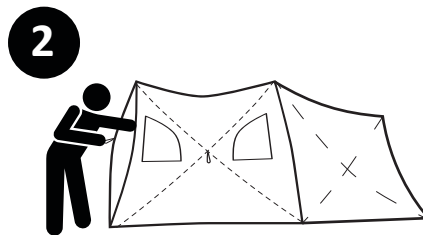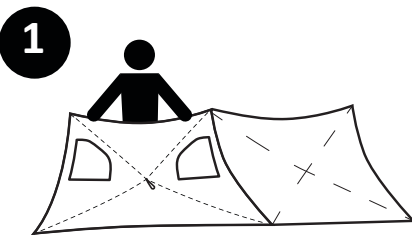

FINISHED PRODUCT

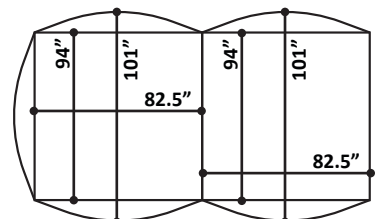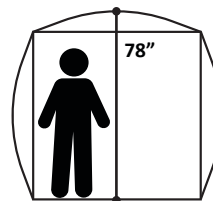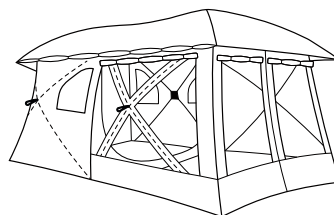

DISASSEMBLY

REMOVING THE RAIN FLY

YOU MUST FOLLOW THESE INSTRUCTIONS TO PREVENT POLE ENDS FROM BREAKING!


1. **VERY IMPORTANT!** Unhook the plastic hooks from each hub.
2. From inside the tent, gently pull the roof poles/hub down to collapse the roof. **DO NOT** stand directly underneath the hub when collapsing.
3. Pull each of the short rain fly poles out of each roof pole.
4. Slide the rain fly off the tent.
5. Fold the rain fly and store in the carry bag.

NOTE: Make sure the rain fly is clean and dry before folding and storing.

TAKE DOWN INSTRUCTIONS

1. Remove all stakes and tie-downs.
2. If the rain fly is attached see **REMOVING THE RAIN FLY**.
3. If the gear lofts are attached, partially remove them by unhooking two adjacent corners so that the roof hub can move freely.
4. Enter the tent and unfasten the vertical and horizontal (3) corded poles from the hook and loop sleeves centered on the seam. Remove the poles from the small pockets and disassemble the corded section so each pole is folded in half.
5. Zip all the windows shut.
6. From inside the tent, gently pull the roof poles/hub down to collapse the roof. **DO NOT** stand directly underneath the hub when collapsing.
7. Zip the door shut to prevent tangling of poles. Push the center hub to collapse the wall. Do this to each wall.
8. Once all the hubs are collapsed, gather all corners of the of tent and fold together into a tight cone shape. Do not force the tent when folding and watch for entanglement of poles.
9. Take the provided strap and wrap it around the folded tent and secure for easier insertion into the carry bag. Place the folded tent back into the carry bag with the hubs towards the bottom of the bag.

PARTS LIST

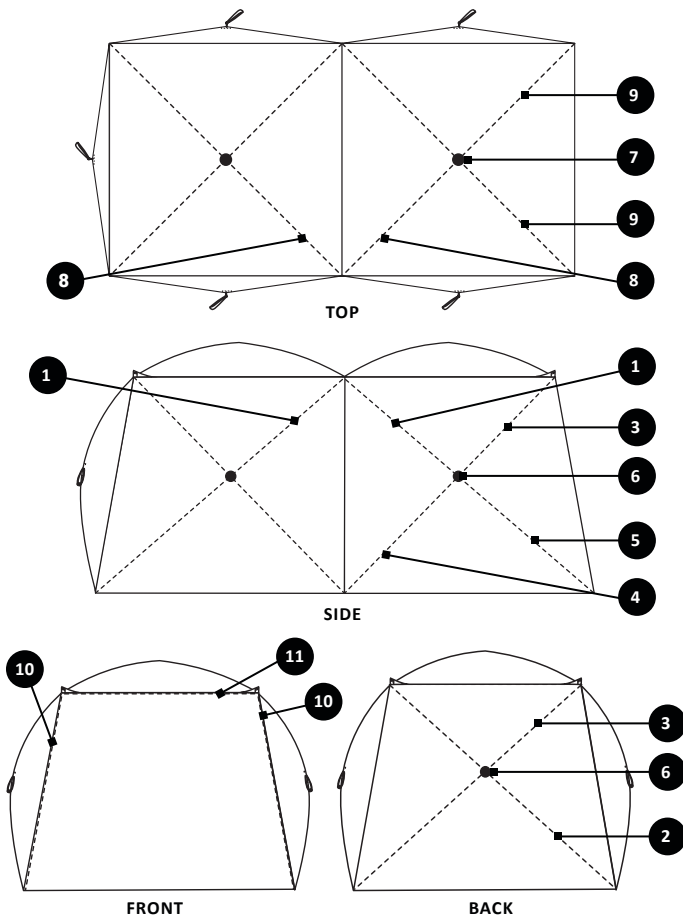

KEY	PART #	DESCRIPTION	QTY
1	47878	9.5MM POLE 1267MM	4
2	40688	9.5MM POLE 60.78 IN	2
3	49455	9.5MM POLE 1190MM	6
4	47879	9.5MM POLE 1356MM	4
5	47880	9.5MM POLE 1454MM	4
6	40243	PIN STYLE HUB ASSEMBLY	5
7	40694	PIN STYLE ROOF HUB ASSEMBLY	2
8	47916	9.5MM POLE 1292MM	4
9	41855	9.5MM ROOF POLE 50.8 IN	4
10	18109	11MM CORDED POLE 69.70 IN	2
11	37766	11MM CORDED POLE 68.4 IN	1
—	47870	CARRY BAG	1
—	47856	RAIN FLY	1
—	22275	8.5MM RAIN FLY POLE 17 IN	4
—	47651	GEAR LOFT	2
—	36894	TIE DOWN 60 IN GRAY	5
—	48722	GROUND STAKE	13
—	27137	HUB HANDLE	5
—	37984	HUB PROTECTORS	5