

GAZELLE™ TENT SET-UP INSTRUCTIONS

FOR COMPLETE INSTRUCTIONS PLEASE REFER TO THE INCLUDED OWNERS MANUAL.



LAY THE TENT FLAT ON THE GROUND AND CHECK THAT THERE IS NO MATERIAL TWISTED OR OVERLAPPING POLE ENDS.



LOCATE THE WEBBING LOOP HANDLE LOCATED ON THE EXTERIOR OF EACH WALL AND PULL OUTWARD UNTIL THE WALL POPS OPEN.



BEFORE INSTALLING THE RAIN FLY THE TENT MUST BE FREE STANDING WITH ALL (5) WALLS POPPED OUT AND THE ROOF COLLAPSED.




SLIDE THE RAIN FLY LOOSELY OVER THE TENT. INSERT THE MALE END OF THE SHORT POLES INTO THE FEMALE END OF THE ROOF POLE AT EACH CORNER.



ENTER THE TENT & PUSH UP ON THE HUB OR ROOF POLES UNTIL IT POPS OVER CENTER.



LOCATE THE TWO LONG CORDED POLES AND ASSEMBLE THEM. LOCATE THE SMALL POCKETS ON THE TOP AND BOTTOM OF THE VERTICAL SEAMS NEXT TO THE DOOR AND INSERT EACH POLE ON EACH SIDE.

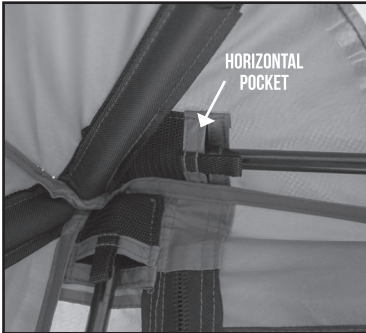

LOCATE THE SHORT CORDED POLE AND ASSEMBLE. LOCATE THE TWO HORIZONTAL POCKETS ABOVE THE DOOR & INSERT EACH POLE ON EACH SIDE.



FASTEN THE PLASTIC HOOKS TO THE EYE BOLT OF THE RESPECTIVE WALL PANEL. YOUR TENT IS NOW SET UP.

TAKE-DOWN INSTRUCTIONS

REMOVE THE RAIN FLY FIRST BY UNHOOKING THE PLASTIC HOOKS ON EACH HUB AND PULL EACH RAIN FLY POLE OUT OF THE ROOF POLE SOCKETS.

REMOVE THE CORDED POLES FROM BOTH SIDES AND ABOVE THE DOOR.



FROM THE INSIDE OF THE TENT, GENTLY PULL THE ROOF POLES/HUB DOWN. DO NOT STAND DIRECTLY UNDERNEATH THE HUB WHEN COLLAPSING.



FROM THE OUTSIDE, ZIP THE DOOR SHUT TO PREVENT TANGLING OF THE POLES. PUSH THE POLE/WALL NEAR THE CENTER HUB TO COLLAPSE EACH WALL.