



PRIVACY SHOWER HUB TENT USE INSTRUCTIONS



WHAT'S INCLUDED IN THE BAG

- Gazelle Privacy Shower Hub Tent
- Ground Stakes & Storage Bag
- Tie-Down Ropes
- Removable Rain Fly
- Removable Floor
- Removable Overhead Gear Loft
- 2 Corded Poles

BEFORE YOU BEGIN

- Locate a level site clear of all debris and sharp objects to prevent tears while setting up your tent.
- For easy set-up in windy conditions, make sure to position one of the corners of the tent into the wind.
- Do not set up your tent under any overhead obstructions in case of falling objects or lightning strikes in inclement weather.

LONG TERM STORAGE

Make sure your Gazelle tent is completely dry and clean before storing for long periods of time. Store your tent in a cool, dry place away from rodents.

WARNING!

READ AND UNDERSTAND ALL ASSEMBLY, INSPECTION, & USE INSTRUCTIONS PROVIDED BEFORE EACH USE. FAILURE TO FOLLOW INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

NEVER ALLOW CHILDREN TO PLAY IN THIS PRODUCT UNATTENDED.

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

THIS TENT IS MADE WITH FLAME RESISTANT FABRIC WHICH MEETS CPAI-84 SPECIFICATIONS. IT IS NOT FIREPROOF. THE FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE NOT THE TENT FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

THE USE OF ELECTRICAL DEVICES IS NOT RECOMMENDED INSIDE THE GAZELLE CAMPING TENT.

SAFETY AND MAINTENANCE INSTRUCTIONS

Ultraviolet (UV) rays are an invisible part of sunlight. Prolonged exposure to UV rays can cause fibers to fade and degrade. This tent will last longer if you limit its exposure to UV rays. Pitch the tent in shade when possible and don't leave the tent up longer than necessary.

- Take down the tent when not in use to avoid unnecessary fading from outdoor elements. Fading or discoloring of fabric is not covered under your warranty.
- Take down the tent when not in use to avoid unnecessary damage.
- Use extra tie-down ropes during excessive winds.
- Never put the tent away wet. Always put away dry and clean to avoid mildew and other problems.

WARRANTY

Gazelle™ Tents is an outdoor brand created and sold by Ardisam, Inc.. Ardisam, Inc. warrants this Gazelle™ Camping Tent under a one-year limited warranty to be free from defects in materials or workmanship or both for a period not exceeding twelve consecutive months from the date of original purchase by the first retail consumer or commercial end user. "Consumer use" means personal recreational use by a retail consumer. "Commercial use" or "commercial application" means all other uses, including use for commercial, income producing or rental purposes. Once a product has experienced commercial use, it shall thereafter be considered as a commercial use product for purposes of this warranty. This warranty does not cover tent tears, or bent poles due to use in high wind, inclement weather conditions, unattended use or uses other than those listed in the owner's manual. This warranty applies to the original owner that provides a proof of purchase of the shelter. The warranty is not transferable. The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the twelve month consecutive period thereafter. Any unit used in a commercial application is covered for a period of 90 days after purchase. For the warranty to be valid, the product must be registered by filling out the warranty card and it must be received by Ardisam, Inc., within 30 days of purchase. Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.

SET UP INSTRUCTIONS

1. Remove the tent from the duffle bag. Remove the pack strap from around the tent.
(SEE FIGURE 1)
2. Lay the tent flat on the ground and check that there is no material twisted or overlapping the ends of any poles and/or feet. **DO NOT** force tent when folding or unfolding. Watch for entanglement of poles. **(SEE FIGURE 2)**

Note: When unfolding, check that the Gazelle logo and hub pull handles are visible. This is the exterior of the tent. The poles and hubs are the interior of the tent.

Note: For easy set-up in windy conditions, make sure to position one of the corners of the tent into the wind, and stake that corner down through the provided grommet.

3. Find the hub pull handles located on the exterior of each hub, centered on each wall. Proceed to pull outward until the wall pops open. Do this to **ALL SIDE WALLS** first. **(SEE FIGURE 3)**

Note: For added assistance, grasp the top seam of the panel and place your foot on the bottom edge when popping open a side wall panel to help hold the tent in place.

4. Once all walls are popped open, locate the zipper slit on one of the corners opposite the tent door. This zipper allows the tent to be collapsed and folded when unzipped. Zip the zipper down to the ground to enclose the tent. **(SEE FIGURE 4)**



SET UP INSTRUCTIONS CONT.

5. Locate the ground stakes in the duffle bag, then fasten the stakes through each grommet on the bottom corners of the tent. Hammer stakes through each grommet completely. **(SEE FIGURE 5)**
6. Locate the two corded poles in the duffle bag. Assemble corded poles by interlocking the two ends together. Locate the small pockets on the top and bottom of the seams alongside the inside of the door. Position each pole vertically, inserting each end in the top and bottom pockets, then secure with the hook/loop strap in the center of the vertical seam. Do this on both sides of the door. **(SEE FIGURE 6)**
7. At this time the rain fly can be attached. The tent must be free standing with all walls popped out and the roof collapsed. **(SEE FIGURE 7)**

Note: The tent is usable with or without the rain fly installed but will not protect from the rain/elements without.

8. Slide the rain fly loosely over the tent roof. The short connecting poles should be on the underside of the rain fly.
9. Starting at one corner, insert the male end of the short poles attached to the rain fly into the female end of the roof pole on each tent corner. Repeat this for all four corners. **(SEE FIGURE 8)**

Note: If the top corners of the tent are difficult to reach, the tent can be pulled over on its side for access to the roof when inserting the rainfly poles. The tent must be placed back in upright position prior to Step 8.



SET UP INSTRUCTIONS CONT.

10. Once the rain fly poles are attached to the tent, locate the zipper door and enter the tent. Once inside, find the hub for the roof. Proceed to push up on the hub or roof poles until it pops over center. **(SEE FIGURE 9)**

Note: To help weigh the tent down as pressure is applied to the roof hub, it is recommended to hold on to one of the wall hubs/poles to keep the tent in position as the roof hub is popped up.

Note: This step should be done with caution as there is tension on the roof hub and pole assemblies.

11. Once the roof is popped up, fasten the plastic hooks on the rain fly to the D rings on the corners of the tent. **(SEE FIGURE 10)**
12. Assemble the floor by attaching the hook and loop strips on the floor panel to the tent and hooking the corner toggles through the O rings sewn into the tent.

Note: The floor is completely removable if desired.

Note: The floor must be detached from the back and side walls next to the corner zipper to allow the tent to fold.

13. Assemble the removable gear loft by hooking the toggles through the O rings sewn into the roof of the tent.
14. Tie the tie down ropes to each eye bolt, centered on each hub. Then loop the other end to a ground stake. Use the slider on the tie down rope to achieve proper tension. **(SEE FIGURE 11)**



USE INSTRUCTIONS

1. Located on the exterior of the back wall of the tent are two clotheslines that can be used for hanging items like towels or clothes.
2. There are storage pockets located on the inside. There is a large TPU dry bag storage pocket near the door.
3. For shower use, there are multiple drawstrings located on the interior of the tent for attaching a shower system. Feed the shower head/hose through the cording and slide the toggle to fasten the shower to your desired position. **(SEE FIGURE 12)**

WARNING: DO NOT hang heavy objects in the tent to prevent collapsing.

4. For shower use, there are two hose ports located on one corner of the tent. Use these ports for shower systems placed outside the tent. Slide the shower head/hose through the hose port from the exterior and attach the shower to the interior of the tent. **(SEE FIGURE 13)**

Note: The upper hose port is best used for gravity-fed shower bags that can be hung on a tree or structure outside the tent, and the lower hose port is best used for shower systems that sit on the ground outside the tent.



REMOVING THE RAIN FLY

1. **VERY IMPORTANT!** Unhook the plastic hooks from each corner.
2. From inside the tent, gently pull the roof poles/hub down to collapse the roof. **DO NOT** stand directly underneath the hub when collapsing.
3. One at a time, pull the rain fly poles straight out of the roof pole sockets.
4. Slide the rain fly off the tent.
5. Fold the rain fly and store in the duffle bag.

Note: Make sure the rain fly is clean and dry before folding and storing.

TAKE DOWN INSTRUCTIONS

1. Remove all stakes and tie-downs.
2. If the rain fly is attached see REMOVING THE RAIN FLY.
3. From inside the tent, zip all the windows shut.
4. **VERY IMPORTANT! Detach the floor on at least 2 sides nearest the corner zipper located on the wall opposite the door.**
Note: Detaching the floor is important for allowing the tent to fold.
5. Unzip the zipper located on one of the corners opposite the door.
Note: Unzipping the corner zipper is important for allowing the tent to fold.
6. Unhook the gear loft from one side to prevent stretching it when the roof is collapsed.
7. From inside the tent, gently pull the roof poles/hub down to collapse the roof.
WARNING: DO NOT stand directly underneath the hub when collapsing.
8. Remove the corded poles from the both sides of the door.
9. From outside the tent, zip the door shut to prevent tangling of poles. Push the center hub to collapse the wall. Do this to each wall.
10. Once all the hubs are collapsed, gather all corners of the tent and fold together into a tight cone shape. Do not force the tent when folding and watch for entanglement of poles.
11. Take the provided strap and wrap it around the folded tent and secure for easier insertion into the duffle bag. Place the folded tent back into the duffle bag with the feet and pole ends inserted into the closed end of the bag.

WARNING: The tent must be free of water or moisture prior to storage to prevent mold or mildew growth.



Gazelle™

TENTS

GAZELLE TENTS™, A DIVISION OF ARDISAM, INC.
1730 Industrial Avenue, PO Box 666, Cumberland, WI 54829
Phone: 800-345-6007 | Fax: 715-822-2124

All weights, specifications and features are approximate and are subject to change without notice. Due to continuous product improvement, product images may not be exact. Warning labels in some product images may have been removed for photography or demonstration purposes only. Props shown in photos not included. Some assembly may be required. Refer to product manual/instructions for safe setup and use.