



G4 DELUXE PORTABLE GAZEBO

ASSEMBLY AND USE INSTRUCTIONS

• WHAT'S INCLUDED IN THE BAG •

- Gazelle™ G4 Deluxe Gazebo • Ground Stakes & Storage Bag
- Tie-down ropes • Two vertical support poles
 - One horizontal spreader pole • Two awning poles

WARNING

READ AND UNDERSTAND ALL ASSEMBLY, INSPECTION, & USE INSTRUCTIONS PROVIDED BEFORE EACH USE. FAILURE TO FOLLOW INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

NEVER ALLOW CHILDREN TO PLAY IN THIS PRODUCT UNATTENDED.

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

THIS TENT IS MADE WITH FLAME RESISTANT FABRIC WHICH MEETS CPAI-84 SPECIFICATIONS. IT IS NOT FIREPROOF. THE FABRIC WILL BURN IF LEFT IN CONTINUOUS CONTACT WITH ANY FLAME SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE NOT THE TENT FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

THE USE OF ELECTRICAL DEVICES IS NOT RECOMMENDED INSIDE THE TENT.

WARNING

THE GAZEBO WILL COME OUT OF THE BAG APPEARING INSIDE OUT, THIS IS NORMAL. YOU MUST UNFOLD THE GAZEBO PER THE INSTRUCTIONS TO AVOID SETTING IT UP INCORRECTLY. WHEN SET UP PROPERLY, THE WIND PANELS SHOULD BE ON THE OUTSIDE OF THE GAZEBO.

WARRANTY

Gazelle™ Tents is an outdoor brand created and by sold Ardisam, Inc.. Ardisam, Inc. warrants this Gazelle™ Camping Tent under a one-year limited warranty to be free from defects in materials or workmanship or both for a period not exceeding twelve consecutive months from the date of original purchase by the first retail consumer or commercial end user. "Consumer use" means personal recreational use by a retail consumer. "Commercial use" or "commercial application" means all other uses, including use for commercial, income producing or rental purposes. Once a product has experienced commercial use, it shall thereafter be considered as a commercial use product for purposes of this warranty. This warranty does not cover tent tears, or bent poles due to use in high wind, inclement weather conditions, unattended use or uses other than those listed in the owner's manual. This warranty applies to the original owner that provides a proof of purchase of the shelter. The warranty is not transferable. The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the twelve month consecutive period thereafter. Any unit used in a commercial application is covered for a period of 90 days after purchase. For the warranty to be valid, the product must be registered by filling out the warranty card and it must be received by Ardisam, Inc., within 30 days of purchase. Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.

FOR MORE INFORMATION ON SET-UP & TAKE DOWN VISIT OUR WEBSITE
WWW.GAZELLETENTS.COM

BEFORE YOU BEGIN

- Locate a level site clear of all debris and sharp objects to prevent tears while setting up your tent.
- For easy set-up in windy conditions, make sure to position one of the corners of the tent into the wind.
- Do not set up your tent under any overhead obstructions in case of falling objects or lightning strikes in inclement weather.

SAFETY AND MAINTENANCE INSTRUCTIONS

Ultraviolet (UV) rays are an invisible part of sunlight. Prolonged exposure to UV rays can cause fibers to fade and degrade. This tent will last longer if you limit its exposure to UV rays. Pitch the tent in shade when possible and don't leave the tent up longer than necessary.


- Take down the gazebo when not in use to avoid unnecessary fading from outdoor elements. Fading or discoloring of fabric is not covered under your warranty.
- Take down the gazebo when not in use to avoid unnecessary damage.
- Use extra tie-down ropes during excessive winds.
- Never put the gazebo away wet. Always put away dry and clean to avoid mildew and other problems.

LONG TERM STORAGE

Make sure your Gazelle™ gazebo is completely dry and clean before storing for long periods of time. Store your gazebo in a cool, dry place away from rodents.


SET-UP INSTRUCTIONS

1. Remove the gazebo from the carrying bag. Stand gazebo up with the hubs on the ground. Remove the packing strap from around the gazebo. (SEE FIGURE 1)

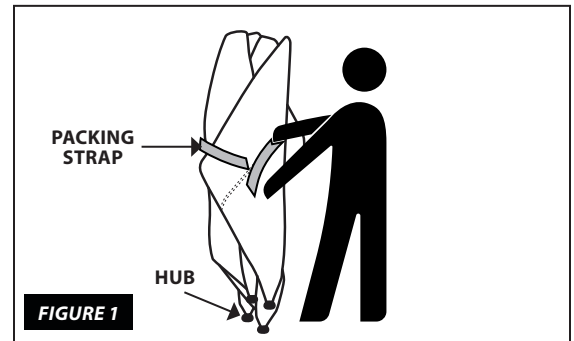

2. Release the gazebo until it is unfolded and the roof panel is exposed. Do not pop up the roof panel yet. (SEE FIGURE 2)


Note: When unfolding, check that the Gazelle Logo and wind panels are visible. This is the OUTSIDE portion of the gazebo. The poles and hubs are the INTERIOR of the gazebo.

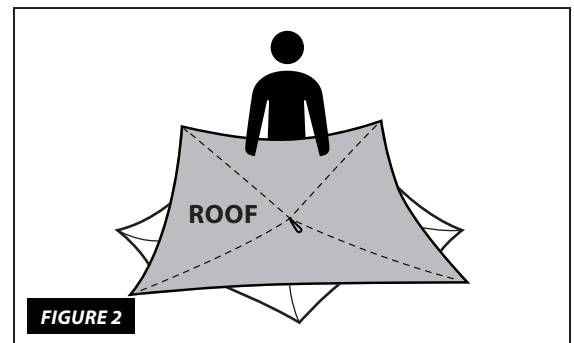

3. Find the webbing loop handle located on the exterior of each hub, centered on each wall (and roof). Proceed to pull outward until the walls pop open. Do this to **ALL SIDE WALLS** first. (SEE FIGURE 3)

Note: For added assistance, grasp the top seam of the panel and place your foot on the bottom edge when popping open a side wall panel to help hold the gazebo in place.


Note: For easy set-up in windy conditions, make sure to position one of the corners of the tent into the wind, and stake that corner down through the provided grommet.

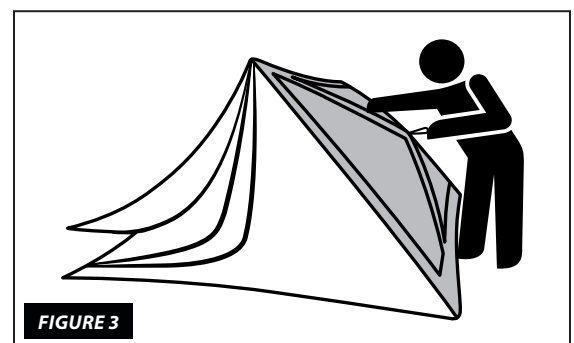

SET-UP INSTRUCTIONS CONT.


- Once all walls are popped open, locate the zipper door, and enter the gazebo. Proceed to push up on the hub or roof poles until it pops open over center. (SEE FIGURE 4)

Note: This step should be done with caution as there is tension on the roof hub and pole assemblies.

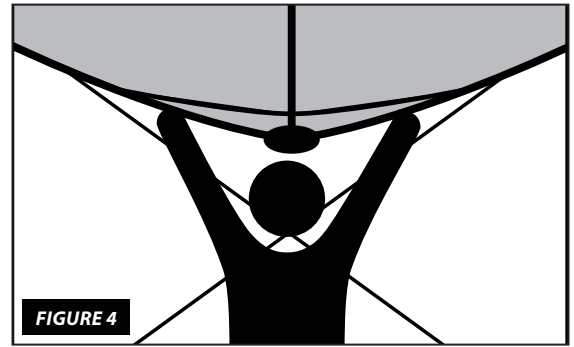


- Locate the two longer corded poles in the duffle bag. Assemble each pole by interlocking the pieces together. Enter the gazebo and locate the small pockets on the top and bottom of the vertical seams next to the door. Insert each pole into the top and bottom pockets. Then secure with the hook/loop strap in the center of the vertical seam. Do this to both sides of the door. (SEE FIGURE 5)


Locate the shorter corded pole in the duffle bag. Assemble the pole by interlocking the pieces together. Go inside the gazebo and locate the two pockets on either side, above the door. Insert each end into the pockets and secure with hook and loop straps above the door. (SEE FIGURE 5)

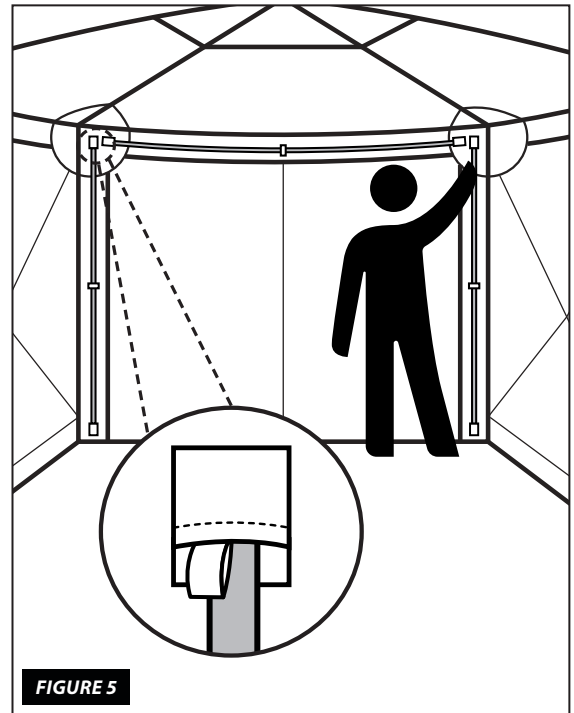

- Locate the ground stakes and tie-down ropes in the duffle bag then fasten the stakes through each grommet. Hammer stakes through each grommet completely. (SEE FIGURE 6)

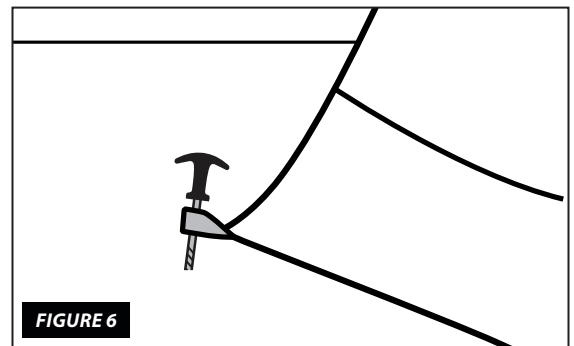

- Tie a Burgundy tie-down rope to each eye bolt, centered on each wall hub. Then loop the other end to a ground stake. Use the slider on the tie-down rope to achieve proper tension. (SEE FIGURE 7)


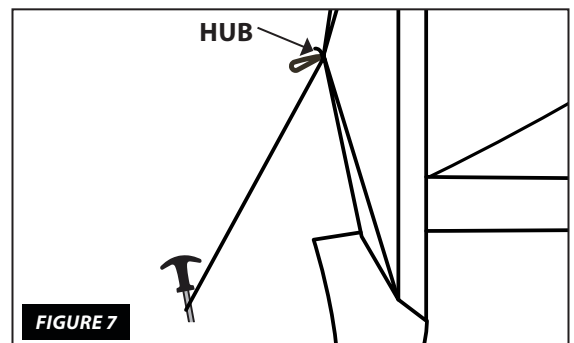


AWNING ASSEMBLY INSTRUCTIONS


- For the awning, locate the remaining poles; there should be eight pieces total. Assemble pieces together creating two complete poles (**SEE FIGURE 8**). Unzip both sides of the wind panel door. Locate the large grommets at the bottom of the awning panel and insert the top of the poles through the grommets on either side of the door (**SEE FIGURE 9**). Stake the other end of the pole into the ground at desired distance away from the gazebo, spacing poles the width of the doorway.

Note: The awning poles can be shortened to pitch the awning downward, if desired, by only assembling two or three of the pole sections together.

Note: Due to the zipper and grommet placement on all wind panels, any of the wind panels can be turned into an awning, if desired.

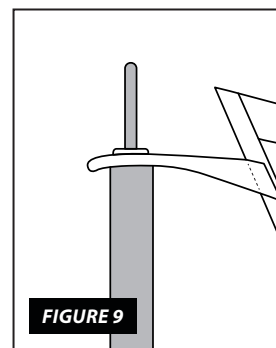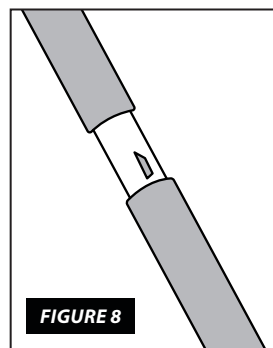

- To secure the poles upright, loop one end of a long Gray tie-down rope over the top of the pole and grommet and then stake the other end to the ground. Use the slider on the tie-down to achieve proper tension. Utilize two tie-down ropes per pole (**SEE FIGURE 10**); it is recommended to have one tie-down pulling forward and one pulling to the side.

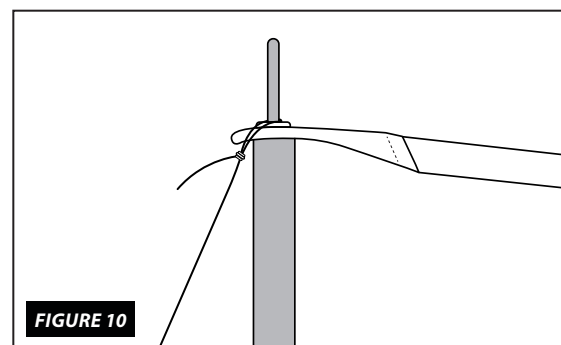

TAKE-DOWN INSTRUCTIONS

- Undo all stake and tie-down ropes on awning and gazebo.
- Take down awning poles and disassemble.
- Remove the corded poles from each side and above the door of the gazebo and disengage (3 poles in total).
- Unroll all wind panels, if rolled up. This will make the gazebo more compact and allow it to pack down more easily. Zip shut all wind panels and pull webbing loop handles through the center grommet.
- Secure plastic hooks on wind panel windows and door to the eye bolt on respective hubs.
- From inside the gazebo, gently pull roof poles/hub to collapse the roof. DO NOT stand directly underneath the hub when collapsing.
- From the outside, zip the door and wind panel shut, to prevent tangling of poles. Push the pole/wall near the center hub to collapse each wall. Repeat this for all walls.
- Once all hubs are collapsed, gather all corners of the gazebo and fold together into a tight cone shape. Do not force the gazebo when folding and watch for entanglement of pole.
- Take the provided strap and wrap it around the folded gazebo to allow for easier insertion into the duffle bag. Place the folded gazebo back into the duffle bag with the hubs toward the closed end of the bag. Place stakes, tie-downs, and poles into the duffle as well.



GAZELLE TENTS, A DIVISION OF ARDISAM, INC.
1730 INDUSTRIAL AVE, CUMBERLAND, WI 54829 | 800-345-6007