

⚠ WARNING

READ AND UNDERSTAND ALL ASSEMBLY, INSPECTION, & USE INSTRUCTIONS PROVIDED BEFORE EACH USE. FAILURE TO FOLLOW INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

NEVER ALLOW CHILDREN TO PLAY IN THIS PRODUCT UNATTENDED.

KEEP ALL FLAME AND EXCESSIVE HEAT SOURCES AWAY FROM TENT FABRIC! THIS INCLUDES ANY PRODUCT THAT PRODUCES EXCESSIVE HEAT, SUCH AS LANTERNS, HEATERS, ETC. FROM ANY OF THE SHELTER ROOF OR SIDE PANELS. THIS TENT IS MADE OF FLAME-RESISTANT FABRIC. IT IS NOT FIREPROOF. THE FABRIC WILL BURN IF LEFT IN CONTACT WITH A FLAME OR HEAT SOURCE. THE APPLICATION OF ANY FOREIGN SUBSTANCE TO THE TENT FABRIC MAY RENDER THE FLAME RESISTANT PROPERTIES INEFFECTIVE.

BEFORE YOU BEGIN

- Locate a level site clear of all debris and sharp objects to prevent tears while setting up your tent.
- For easy set-up in windy conditions, make sure to position one of the corners of the tent into the wind.
- Do not set up your tent under any overhead obstructions in case of falling objects or lightning strikes in inclement weather.

SET-UP INSTRUCTIONS

1. Remove the screen tent from the backpack carrying bag. Remove the tie strap from around the unit.

SEE FIGURE 1

2. Lay the tent flat on the ground and check that there is no material twisted or overlapping the ends of any poles. DO NOT force shelter when folding or unfolding. Watch for the entanglement of poles.

SEE FIGURE 2

NOTE: In windy conditions and before pulling outward on the roof or walls, to pop open the shelter, securely anchor all side walls with the provided stakes and tie ropes. This will prevent the tent from blowing away while setting up in windy conditions.

3. Grasp the webbing loop sewn onto the eyelet located in the center of one of the walls and pull outward until the wall pops open.

SEE FIGURE 3

NOTE: For added assistance, place your foot on the ground skirt to help hold the tent in place when popping open the walls.

4. Proceed by walking around the entire tent, pulling out on each webbing loop until all the side walls are popped out.

SEE FIGURE 4


5. Your tent should now be freestanding. Locate the zippered door and walk inside the tent. Once inside of the tent, place one hand on the bottom of the roof hub and push up until the roof pops into position.

SEE FIGURES 5 & 6

NOTE: This step should be done with caution as there is a lot of tension on the roof hub and pole assemblies.

6. Locate the (2) poles provided with the shelter, and assemble them by interlocking the shock-corded pole selections. Place the assembled poles in the provided pole sleeves located in each of the corners on the door panels interior. Tie in place after poles have been placed in the pole sleeves.

SEE FIGURE 7

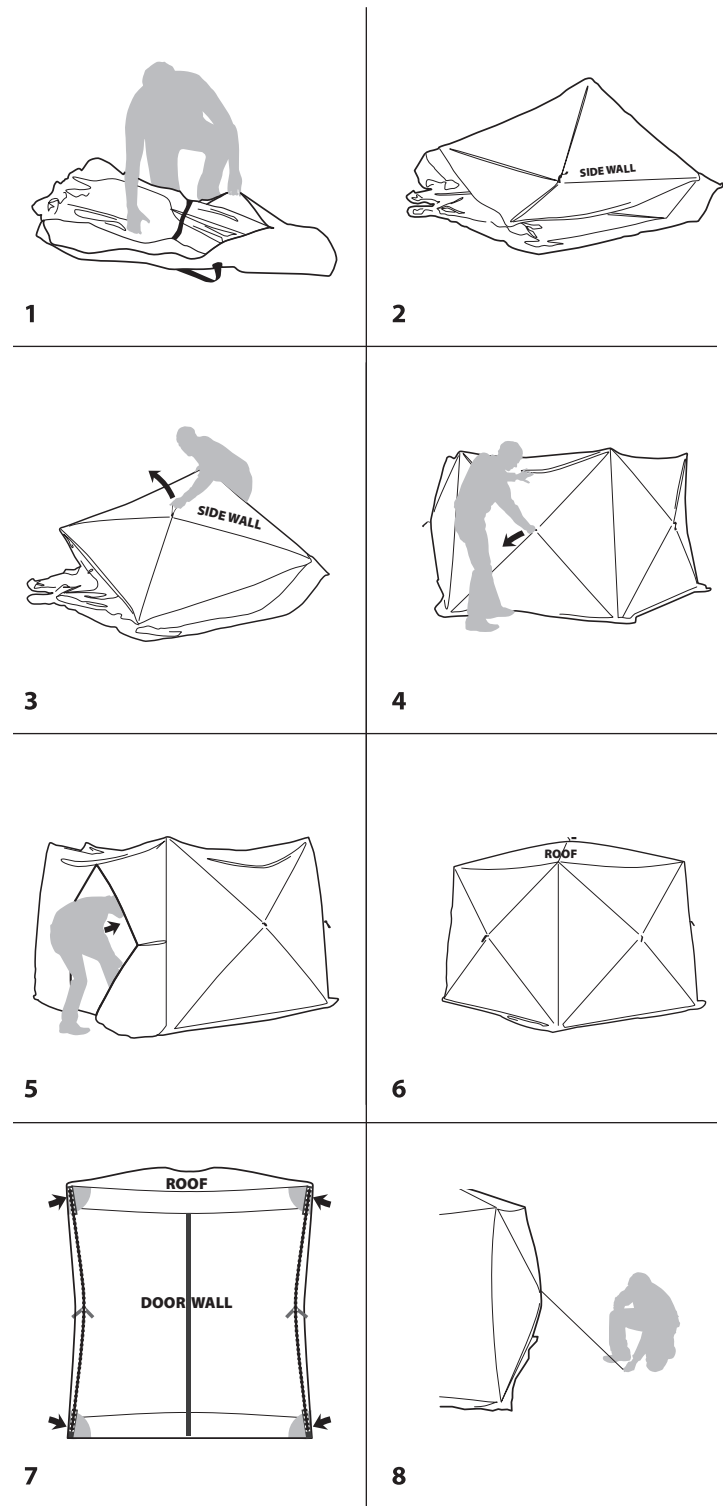

7. Move outside of your shelter and begin anchoring the tent by using the provided stakes and tie down ropes. Use adjustment slides on rope to achieve proper tension.

SEE FIGURE 8

8. Hammer the stakes through the grommets located in each corner completely.

TAKE-DOWN INSTRUCTIONS

1. Untie, remove, and collapse down the two poles placed in the corners of the door wall panel.

1. Remove all stakes and tie down ropes.

NOTE: Zip the door shut to prevent tangling of poles. If the wind-fly is attached it should be removed during this step as well.

2. Using your hand, pull the center hub downward collapsing the roof. After collapsing the roof, move to the outside of the tent and push inward on the rest of the side walls.

SEE FIGURES 9

NOTE: This step should be done with caution as there is a lot of tension on the roof hub and pole assemblies.

3. The tent will be back in its flat stage just as it was when it was unfolded out of the backpack bag. Gather all corners of the shelter and fold together. Do not force the tent when folding. Watch for the entanglement of poles.

SEE FIGURE 10


4. Take the provided tie strap and wrap it around the folded tent to allow for easier insertion into the backpack. Place the folded tent back into the backpack carrying case with the hubs always towards the bottom of the bag. Place the stakes, tie down ropes, and (2) poles into the bag as well.

SAFETY AND MAINTENANCE INSTRUCTIONS


- Take down the tent when not in use to avoid unnecessary damage and fading from outdoor elements. Fading or discoloring of fabric is not covered under your warranty.
- Take down the shelter when not in use to avoid unnecessary damage.
- Use extra tie-downs during excessive winds.
- Never put the tent away wet. Always put away dry to avoid mildew and other problems.

LONG TERM STORAGE

Make sure your screen tent is completely dry and no dirt is caked on before storing for long periods of time. Store shelter in a cool, dry place away from rodents.

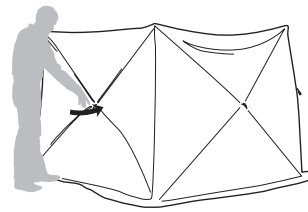

9

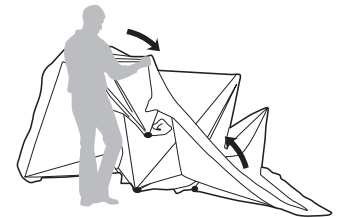

10

WARRANTY

Ardisam, Inc., warrants this Gazelle™ Screen Tent under a one-year limited warranty to be free from defects in materials or workmanship or both for a period not exceeding twelve consecutive months from the date of original purchase by the first retail consumer or commercial end user. "Consumer use" means personal recreational use by a retail consumer. "Commercial use" or "commercial application" means all other uses, including use for commercial, income producing or rental purposes. Once a product has experienced commercial use, it shall thereafter be considered as a commercial use product for purposes of this warranty. This warranty does not cover tent tears, or bent poles due to use in high wind, inclement weather conditions, unattended use or uses other than those listed in the owner's manual. This warranty applies to the original owner that provides a proof of purchase of the shelter. The warranty is not transferable. The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the twelve month consecutive period thereafter. Any unit used in a commercial application is covered for a period of 90 days after purchase. For the warranty to be valid, the product must be registered by filling out the warranty card and it must be received by Ardisam, Inc., within 30 days of purchase. Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.

**This warranty applies only to products which have not been subjected to negligent use, misuse, uses other than those indicated in the product's owner's manual, alteration, accident, use of unauthorized parts, failure to perform periodic maintenance as specified in product's owner's manual, normal wear and tear, use of unauthorized parts or repairs performed at non-authorized service centers. There is no other expressed warranty. Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to one year from purchase, or to the extent permitted by law. All other implied warranties are excluded. Liability for incidental or consequential damages are excluded to the extent exclusion is permitted by law. Ardisam, Inc. does not assume, and does not authorize any other person to assume for us, any liability in connection with the sale of our products. To obtain warranty service, you must have prior approval by calling our customer service department at 1-800-345-6007. If you choose to ship your product to Ardisam for warranty repair, you must first have prior approval from Ardisam by calling our customer service department for a return material authorization number (RMA#). Under these circumstances, all items must be shipped prepaid. Ardisam will at no charge, repair or replace, at their discretion, any defective part which satisfies all conditions stated above. Ardisam retains the right to change models, specifications and price without notice. Ardisam, Inc. shall not be obligated to ship any repair or replacement product to any location outside of the United States of America or Canada.*