


The assemblies created from this kit will be referenced and used in your Eskape shelter manual.

Remaining hardware from this kit will be used for mounting the bench in the shelter. **DO NOT DISCARD.**

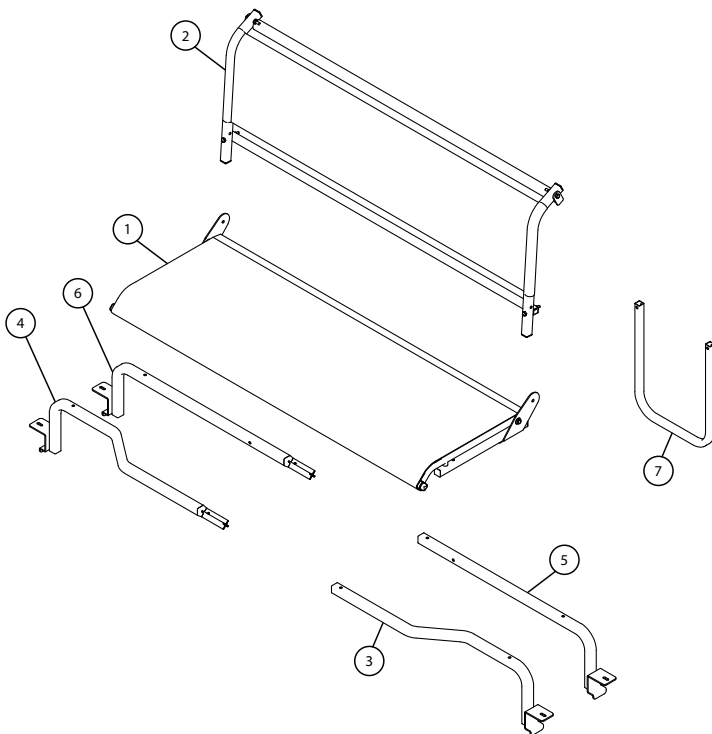


PARTS LIST


NO.	DESCRIPTION	PART NO.	QTY.
1	ASSEMBLY SEAT BENCH 48 IN	38819	1
2	ASSEMBLY BACKREST BENCH SEAT 48 IN	38816	1
3	WELDMENT BENCH FNT SPAN TUBE F 60IN SLD	38821	1
4	WELDMENT BENCH FNT SPAN TUBE M 60IN SLD	38822	1
5	WELDMENT BENCH BK SPAN TUBE F 60IN SLD	38825	1
6	WELDMENT BENCH BK SPAN TUBE M 60IN SLD	38826	1
7	SUPPORT TUBE 60IN SLD BENCH	38902	1

ITEMS BELOW NOT SHOWN


-	BOLT 1/4-20 X 1 HH GR5 ZN	69345	4
-	BOLT 1/4-20 X 1-1/2 HHCS GR5 ZN	48240B	2
-	BOLT 1/4-20 X 1-3/4 HHCS GR5 ZN	48250B	4
-	BOLT 1/4-20 X 2-1/4 HHCS GR5 ZN	48271B	2
-	BOLT 1/4-20 X 2-1/2 HHCS GR5 ZN	48270B	2
-	WASHER 8.1 X 19 X 1.6 MM PLASTIC	WN516	8
-	WASHER 1/4 X 5/8 X 0.07 IN GR8 ZN	48261B	16
-	NUT 1/4-20 HFNYLK BLK ZN	48752B	14

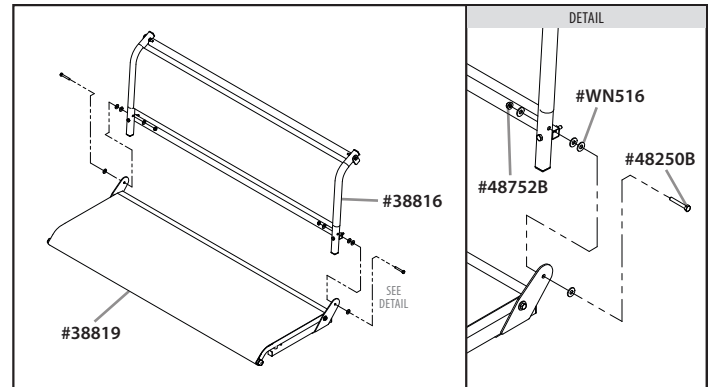

- 1** Assemble **#38819** to **#38816** using; (2) 1/4-20 x 1-3/4 bolts, (2) nylock nuts, and (8) plastic washers. Place plastic washers on the nut side and bolt head side, along with (2) plastic washers between #38819 and #38816.

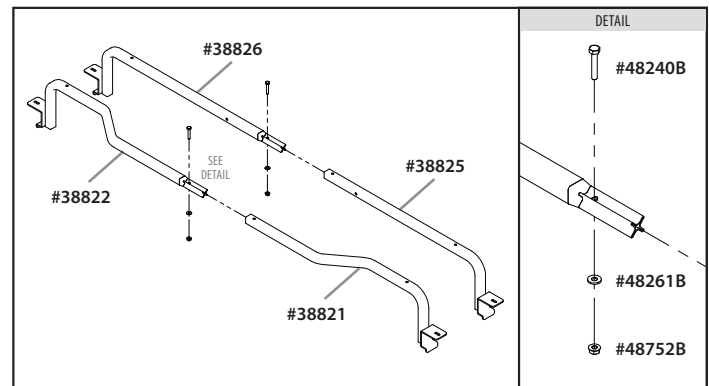


- 2** Assemble **#38822** to **#38821** using (1) 1/4-20 x 1-1/2 bolts, (1) nylock nut, and (1) washer (placed on nut side). Assemble **#38826** to **#38825** using (1) 1/4-20 x 1-1/2 bolts, (1) nylock nut, and (1) washer (placed on nut side).

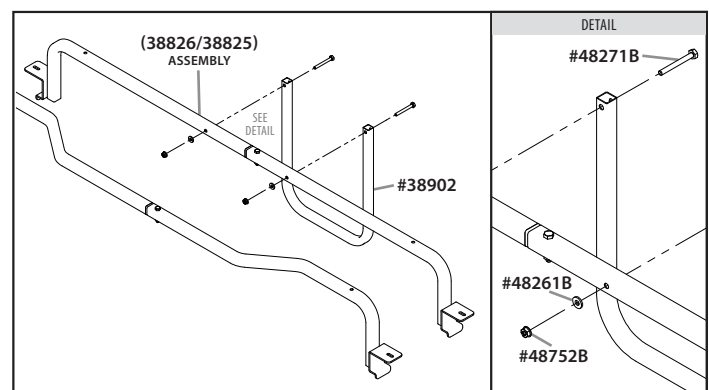

- 3** Assemble **#38902** to previous assembly **38826/38825** using (2) 1/4-20 x 2-1/4 bolts, (2) nylock nuts, and (2) washers (placed on nut side).

Les assemblages créés à partir de ce kit seront référencés et utilisés dans le manuel de votre abri Eskape.

Le matériel restant de ce kit sera utilisé pour monter le banc dans l'abri. **NE JETEZ PAS.**

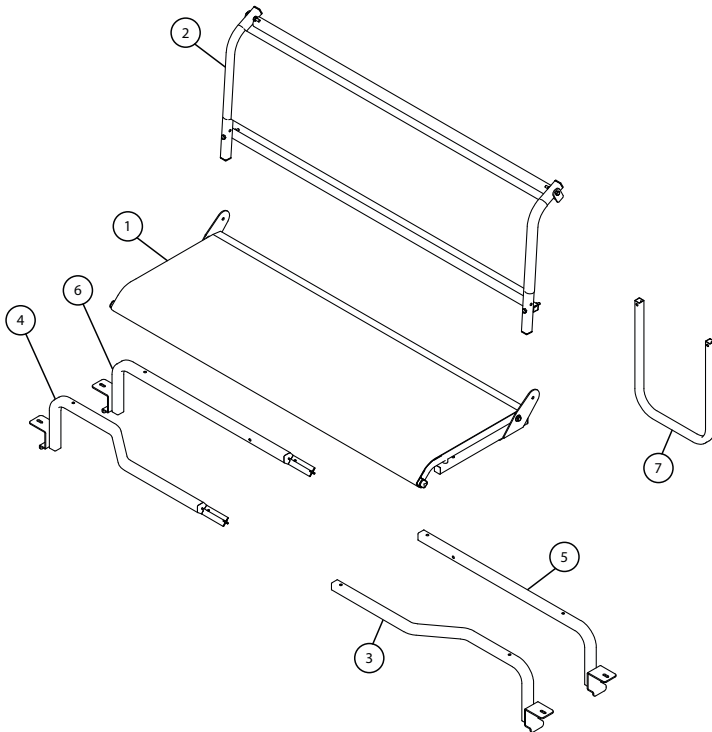


LISTE DES PIÈCES


N° RÉF.	DESCRIPTION	PART NO.	QTÉ.
1	BANQUETTE D'ASSEMBLAGE 48 PO	38819	1
2	ASSEMBLAGE DU DOSSIER BANC SIÈGE 48 PO	38816	1
3	SOUDURE DE TUBE DE TRAVÉE AVANT FEMELLE	38821	1
4	SOUDURE DE TUBE DE TRAVÉE AVANT MÂLE	38822	1
5	SOUDURE DE TUBE DE TRAVÉE ARRIÈRE FEMELLE	38825	1
6	SOUDURE DE TUBE DE TRAVÉE ARRIÈRE MÂLE	38826	1
7	TUBE DE SUPPORT DE BANQUETTE	38902	1

PIÈCES DÉTACHÉES NON REPRÉSENTÉES


-	BOULON 1/4-20 X 1 HH GR5 ZN	69345	4
-	BOULON 1/4-20 X 1-1/2 HHCS GR5 ZN	48240B	2
-	BOULON 1/4-20 X 1-3/4 HHCS GR5 ZN	48250B	4
-	BOULON 1/4-20 X 2-1/4 HHCS GR5 ZN	48271B	2
-	BOULON 1/4-20 X 2-1/2 HHCS GR5 ZN	48270B	2
-	RONDELLE 8.1 X 19 X 1.6 MM PLASTIC	WN516	8
-	RONDELLE 1/4 X 5/8 X 0.07 IN GR8 ZN	48261B	16
-	ÉCROU 1/4-20 HFNLYK BLK ZN	48752B	14

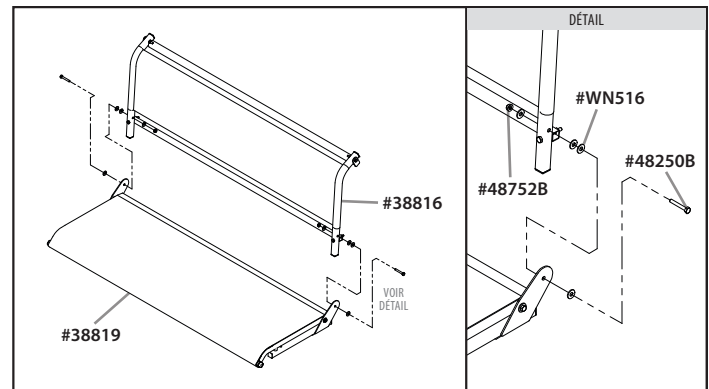

- 1** Assemblez # 38819 à # 38816 en utilisant; (2) boulons 1/4-20 x 1-3/4, (2) écrous nylock et (8) rondelles en plastique. Placez les rondelles en plastique du côté de l'écrou et du côté de la tête de la bête de boulon, ainsi que (2) rondelles en plastique entre les # 38819 et # 38816.

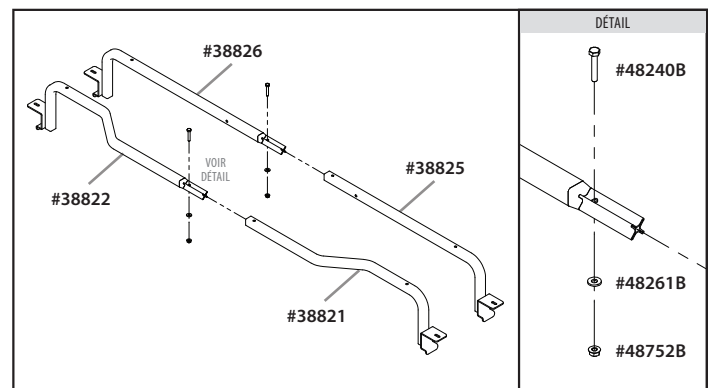

- 2** Assemblez les # 38822 à # 38821 à l'aide de (1) boulons 1/4-20 x 1-1 / 2, (1) écrou nylock et (1) rondelle (placée du côté de l'écrou). Assemblez les # 38826 à # 38825 à l'aide de (1) boulons 1/4-20 x 1-1 / 2, (1) écrou nylock et (1) rondelle (placée du côté de l'écrou).

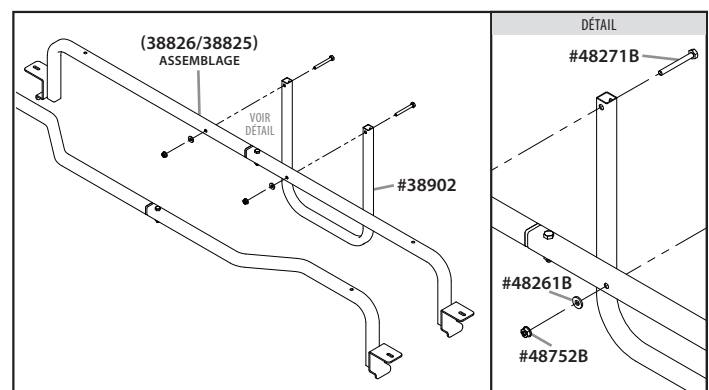

- 3** Assemblez les # 38902 à l'assemblage précédent 38826/38825 à l'aide de (2) boulons 1/4-20 x 2-1 / 4, (2) écrous nylock et (2) rondelles (placées du côté de l'écrou).