

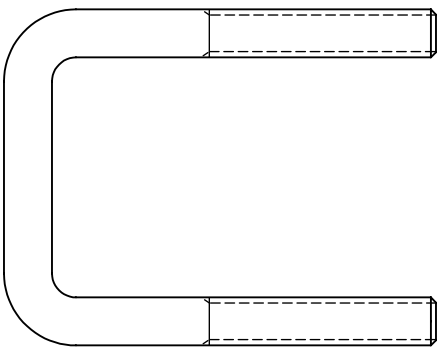




Follow these instructions for your Landmark™ 10' 600 Tower (Model LM623) seat addendum. Instructions should be kept in a safe place and reviewed at least annually.

## PARTS LIST

Item	Part No.	Description	Qty
1	# 41981	SEAT SUPPORT	3
2	# 41982	SEAT PLATE	1
3	# 42071	BASE PLATE	1

## HARDWARE LIST

Item	Part No.	Description	Image	Qty
4	# 41983	U-BOLT 1/4 X 2 X 1-1/4 IN		2
5	# 48240B	BOLT 1/4 X 1-1/2 IN		6
6	# 48752B	NUT 1/4 IN		10

## TOOLS REQUIRED

-	# 32563	7/16" WRENCHES		2
---	---------	----------------	--	---



## ASSEMBLY INSTRUCTIONS FOR LM623 SEAT ADDENDUM

### IMPORTANT ASSEMBLY TIP:

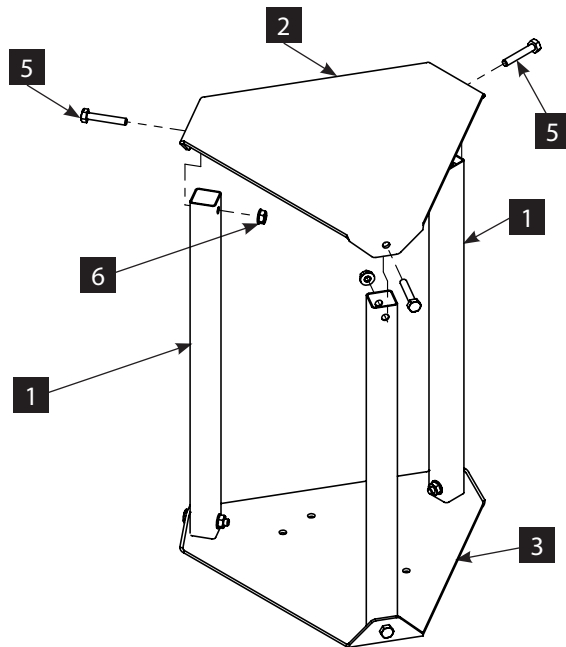
Do not tighten any nut and bolt combinations completely until instructions indicate to. Finger tighten plus one turn of a wrench only! This will temporarily hold the lock-nut on the bolt while helping alignment of all parts!

All assembly must be done completely in this order before use.

Do not remove labels/warnings from product, they are there for your safety.

Recommended for adult use only.

### STEP 1

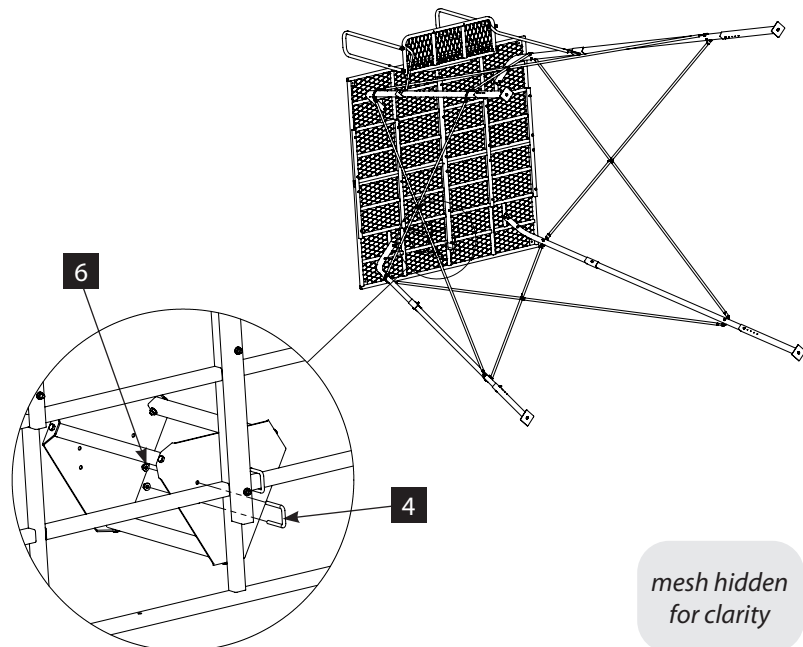


1. Attach the three seat supports (1) to the seat plate (2) and base plate (3) using six 1/4-20 X 1-1/2 IN bolts (5) and 1/4-20 nuts (6).

**SEE FIGURE 1.**

**NOTE: STEP 2 should be completed after STEP 13 and before STEP 14 of the Operator's Manual for the Landmark™ 10' 600 Tower.**

2. Secure the seat assembly onto the platform using two 1/4 X 2 X 1-1/4 IN U-bolts (4) and four 1/4-20 nuts (6). Seat should be placed at the bottom center of platform where the tube sections meet as shown. **SEE FIGURE 2.**



### STEP 2